


# Commercial Automatic Washer

Metered and Nonmetered  
Refer to Page 6 for Model Numbers

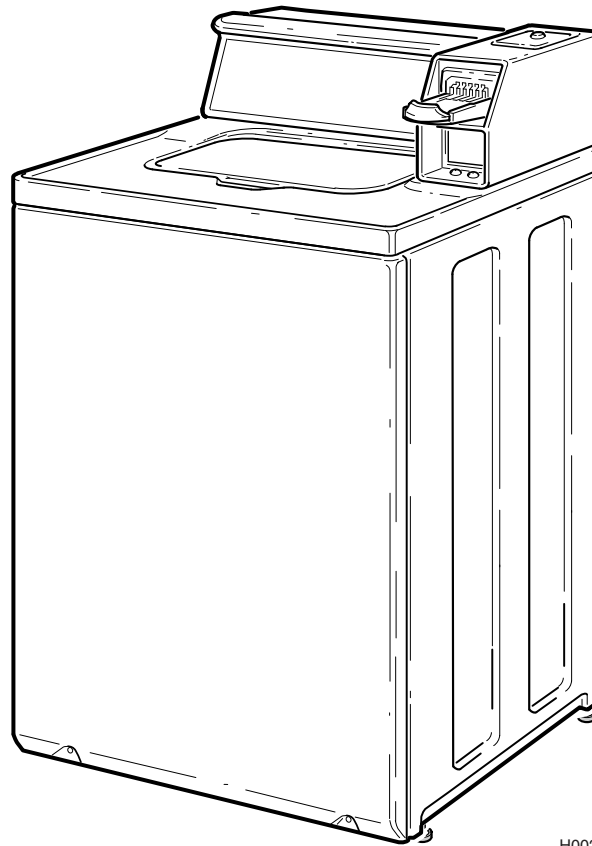

H002C

— Troubleshooting —



# Table of Contents

<b>Section 1 – Safety Information .....</b>	<b>3</b>
Locating an Authorized Servicer .....	4
<b>Section 2 – Introduction .....</b>	<b>5</b>
Customer Service.....	5
Nameplate Location.....	5
Model Identification .....	6
Theory of Operation .....	15
<b>Section 3 – General Troubleshooting.....</b>	<b>17</b>
1. Clicking Noise During Operation on NEWLY Installed Units ..	17
2. No Hot Water .....	18
3. No Cold Water .....	19
4. No Warm Water .....	20
5. Water Fill Does Not Stop At Proper Level .....	21
6. Timer Does Not Advance (Models with Timer Only).....	22
7. Motor Does Not Run.....	23
8. No Agitation.....	24
9. Constant Agitation .....	25
10. Washer Overheats, Cycles On Motor Thermal Protector, Switch Actuator Kicks In and Out .....	26
11. Slow Spin Or No Spin.....	27
12. Constant Spin .....	28
13. Washer Stops In Cycle; Quits After A Couple Loads; Is Intermittent.....	29
14. Washer Is Locked Up Or Binding.....	30
15. Outer Tub Does Not Empty .....	31
16. Excessive Vibration .....	32
17. Water Leaking From Outer Tub.....	33
18. Troubleshooting Coin Drop .....	34
<b>Coin Slide Operated and Non-Metered Models with the Number         “8” or “9” in the 4th Character of the Model Number .....</b>	<b>39</b>
19. Error Mode.....	39
20. Coin Slide Can Not Fully Insert.....	40
21. Coin Slide Fully Inserts, Switch Does Not Activate.....	41
22. Switch Is Activated Too Soon .....	42
23. Coin Slide Does Not Return Freely .....	43
24. No Cycle Start When the Coin Slide is Activated .....	44
25. Washer Will Not Fill (Pressure Switch Diagnostic) .....	46
26. Washer Will Not Fill (Mixing Valve Diagnostic) .....	48
27. Washer Over Fills (Pressure Switch Open) .....	50
28. No Agitation – Low and High Speed.....	52
29. Washer Will Not Spin – Low Speed.....	54
30. Washer Will Not Spin – High Speed .....	56
<b>EDC Models.....</b>	<b>59</b>
31. EDC Error Code Listing .....	59

© Copyright 2009, Alliance Laundry Systems LLC

All rights reserved. No part of the contents of this book may be reproduced or transmitted in any form or by any means without the expressed written consent of the publisher.

32. Cannot Perform Infrared Communication .....	60
33. Coins Ignored When Entered .....	61
34. Electronic Control Has No Visible Display .....	62
35. No Fill Analysis .....	64
36. No Motor Run — Agitate Analysis .....	66
37. No Motor Run — Spin Analysis .....	68
38. Overflow Analysis .....	70
39. Audit Switch Function Analysis .....	72
<b>MDC Models.....</b>	<b>73</b>
40. MDC Error Code Listing .....	73
41. No Visible Display on Control.....	74
42. Coins Ignored When Entered .....	76
43. Washer Will Not Fill (Pressure Switch Diagnostic) .....	78
44. Washer Will Not Fill (Mixing Valve Diagnostic) .....	80
45. Washer Over Fills (Pressure Switch Open) .....	82
46. No Agitation – Low and High Speed.....	84
47. Washer Will Not Spin – High Speed .....	86
48. Washer Will Not Spin – Low Speed .....	88
<b>NetMaster Models .....</b>	<b>91</b>
49. NetMaster Error Code Listing.....	91
50. Microwand Does Not Communicate With Control .....	95
51. No Visible Display on Control.....	96
52. Coins Ignored When Entered .....	98
53. Washer Will Not Fill (Pressure Switch Diagnostic) .....	100
54. Washer Will Not Fill (Mixing Valve Diagnostic) .....	102
55. Washer Over Fills .....	104
56. No Agitation – Low and High Speed.....	106
57. Washer Will Not Spin – High Speed .....	108
58. Washer Will Not Spin – Low Speed .....	110
<b>Section 4 – Adjustments .....</b>	<b>113</b>
59. Leveling Legs.....	113
60. Pressure Switch .....	114
61. Belt (Agitate and Spin) .....	114
62. Cleaning Non-Electronic Coin Drop.....	114
63. Cleaning Electronic Coin Drop.....	116
<b>Section 5 – Motor Test Procedure .....</b>	<b>119</b>
<b>Section 6 – Cycle Sequence Charts.....</b>	<b>121</b>
Timer No. 28716P and 28719 Cycle Sequence .....	121
Timer No. 31111P, 31504P and 35368P Cycle Sequence .....	122
Timer No. 36986 Cycle Sequence .....	123
Timer No. 34601P, 34603P, 34604 and 36987 Cycle Sequence ....	124
Timer No. 34602P Cycle Sequence .....	125
Timer No. 200914 Cycle Sequence .....	126
Timer No. 201066 Cycle Sequence .....	127
Cycle Sequence For Coin Slide Operated/Non-Metered Models ...	128

# Section 1

## Safety Information

Throughout this manual and on machine decals, you will find precautionary statements (“CAUTION,” “WARNING,” and “DANGER”) followed by specific instructions. These precautions are intended for the personal safety of the operator, user, servicer and those maintaining the machine.

### **▲ DANGER**

Danger indicates an imminently hazardous situation that, if not avoided, will cause severe personal injury or death.

### **▲ WARNING**

Warning indicates a hazardous situation that, if not avoided, could cause severe personal injury or death.

### **▲ CAUTION**

Caution indicates a hazardous situation that, if not avoided, may cause minor or moderate personal injury or property damage.

Additional precautionary statements (“IMPORTANT” and “NOTE”) are followed by specific instructions.


### **IMPORTANT**

The word “IMPORTANT” is used to inform the reader of specific procedures where minor machine damage will occur if the procedure is not followed.

### **NOTE**

The word “NOTE” is used to communicate installation, operation, maintenance or servicing information that is important but not hazard related.

In the interest of safety, some general precautions relating to the operation of this machine follow.

	<b>WARNING</b>
<ul style="list-style-type: none"><li>• <b>Failure to install, maintain and/or operate this product according to the manufacturer’s instructions may result in conditions which can produce serious injury, death and/or property damage.</b></li><li>• <b>Do not repair or replace any part of the product or attempt any servicing unless specifically recommended or published in this Service Manual and unless you understand and have the skills to carry out the servicing.</b></li><li>• <b>Whenever ground wires are removed during servicing, these ground wires must be reconnected to ensure that the product is properly grounded and to reduce the risk of fire, electric shock, serious injury or death.</b></li></ul>	
<small>W006R2</small>	



## WARNING

To reduce the risk of electric shock, fire, explosion, serious injury or death:

- Disconnect electric power to the washer before servicing.
- Never start the washer with any guards/panels removed.
- Whenever ground wires are removed during servicing, these ground wires must be reconnected to ensure that the washer is properly grounded.

W003



## WARNING

Repairs that are made to your products by unqualified persons can result in hazards due to improper assembly or adjustments subjecting you or the inexperienced person making such repairs to the risk of serious injury, electrical shock or death.

W007



## WARNING

If you or an unqualified person perform service on your product, you must assume the responsibility for any personal injury or property damage which may result. The manufacturer will not be responsible for any injury or property damage arising from improper service and/or service procedures.

W008

**NOTE: The WARNINGS and IMPORTANT INSTRUCTIONS appearing in this manual are not meant to cover all possible conditions and situations that may occur. Common sense, caution and care must be exercised when installing, maintaining or operating the washer.**

Always contact your dealer, distributor, service agent or the manufacturer about any problems or conditions you do not understand.

### Locating an Authorized Servicer

Alliance Laundry Systems is not responsible for personal injury or property damage resulting from improper service. Review all service information before beginning repairs.

Warranty service must be performed by an authorized technician, using authorized factory parts. If service is required after the warranty expires, Alliance Laundry Systems also recommends contacting an authorized technician and using authorized factory parts.

# Section 2

## Introduction

### Customer Service

If literature or replacement parts are required, contact the source from whom the machine was purchased or contact Alliance Laundry Systems at (920) 748-3950 for the name and address of the nearest authorized parts distributor.


For technical assistance, call either of the numbers listed below:

(920) 748-3121 Ripon, Wisconsin

+32 56 41 20 54 Wevelgem, Belgium

### Nameplate Location

When calling or writing about your product, be sure to mention model and serial numbers. Model and serial numbers are located on nameplate(s) as shown.

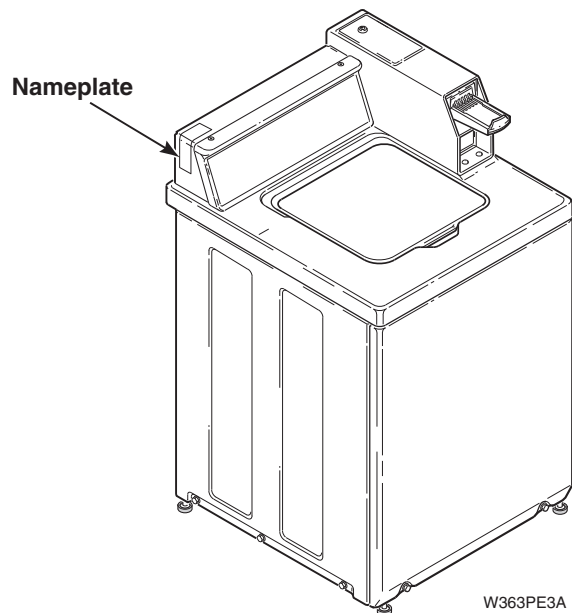

## Introduction

## Model Identification

Information in this manual is applicable to these washers.

Washer Model	Non-metered	Metered	Electronic Control	Coin Slide Ready	Coin Drop Ready	Coin Drop Installed	Card Reader Ready	Card Reader Installed	Motor Speed	Wash-tub
BWT820*N1102	X								2	P
BWT920*N1102		X		X					2	P
BWTT20*N		X	X			X			2	P
HWLX21*N1102		X	X		X				2	S
HWT011*B3073	X								1	S
HWT020*A	X								2	P
HWT020*C	X								2	P
HWT020*M	X								2	P
HWT020*N	X								2	P
HWT021*A1102	X								2	S
HWT021*C1102	X								2	S
HWT021*M1102	X								2	S
HWT021*N1102	X								2	S
HWT110*A		X		X					1	P
HWT110*C		X		X					1	P
HWT110*M		X		X					1	P
HWT110*N		X		X					1	P
HWT111*A1102		X		X					1	S
HWT111*A3000		X		X					1	S
HWT111*B3069		X		X					1	S
HWT111*C1102		X		X					1	S
HWT111*C3000		X		X					1	S
HWT111*M1102		X		X					1	S
HWT111*M3000		X		X					1	S
HWT111*N1102		X		X					1	S
HWT120*A		X		X					2	P
HWT120*C		X		X					2	P
HWT120*M		X		X					2	P
HWT120*N		X		X					2	P
HWT121*A1102		X		X					2	S
HWT121*C1102		X		X					2	S
HWT121*C1123		X		X					2	S
HWT121*M1102		X		X					2	S
HWT121*M1123		X		X					2	S
HWT121*N1102		X		X					2	S
HWT1A0*N		X		X					2	P
HWT210*A1102		X		X					1	P
HWT210*C1102		X		X					1	P
HWT210*M1102		X		X					1	P
HWT210*N1102		X		X					1	P

\* Add Letter To Designate Color. L – Almond W – White Q – Bisque

Key: 1 = 1 Speed Motor, 2 = 2 Speed Motor, P = Porcelain Washtub, S = Stainless Steel Washtub



Washer Model	Non-metered	Metered	Electronic Control	Coin Slide Ready	Coin Drop Ready	Coin Drop Installed	Card Reader Ready	Card Reader Installed	Motor Speed	Wash-tub
HWT211*A3000		X		X					1	S
HWT211*B3020		X		X					1	S
HWT211*C1102		X		X					1	S
HWT211*C3000		X		X					1	S
HWT211*M3000		X		X					1	S
HWT211*M3020		X		X					1	S
HWT211*N3020		X		X					1	S
HWT220*A1102		X		X					2	P
HWT220*C1102		X		X					2	P
HWT220*M1102		X		X					2	P
HWT220*M3000		X		X					2	P
HWT220*M3020		X		X					2	P
HWT221*A1102		X		X					2	S
HWT221*C1102		X		X					2	S
HWT221*M1102		X		X					2	S
HWT221*N1102		X		X					2	S
HWT221*N1127		X		X					2	S
HWT521*A1102		X	X			X			2	S
HWT521*C1102		X	X			X			2	S
HWT621*A1102		X	X				X		2	S
HWT621*C1102		X	X				X		2	S
HWT721*A1102		X	X					X	2	S
HWT721*C1102		X	X					X	2	S
HWT820*N	X								2	P
HWT821*N1102	X								2	S
HWT910*N		X		X					1	P
HWT911*N1102		X		X					1	S
HWT911*N3020		X		X					1	S
HWT920*N		X		X					2	P
HWT921*N1102		X		X					2	S
HWT921*N1127		X		X					2	S
HWTB21*M1102		X	X			X			2	S
HWTB21*N1102		X	X			X			2	S
HWTF21*M1102		X	X					X	2	S
HWTF21*N1102		X	X					X	2	S
HWTR21*N1102		X	X			X			2	S
HWTT20*N		X	X			X			2	P
HWTT21*N1102		X	X			X			2	S
HWTV20*N		X		X					2	P
HWTX21*M3020		X	X		X				2	S
HWTX21*M3022		X	X		X				2	S
HWTX21*N1102		X	X		X				2	S

\* Add Letter To Designate Color. L – Almond W – White Q – Bisque

Key: 1 = 1 Speed Motor, 2 = 2 Speed Motor, P = Porcelain Washtub, S = Stainless Steel Washtub

**Introduction**

Washer Model	Non-metered	Metered	Electronic Control	Coin Slide Ready	Coin Drop Ready	Coin Drop Installed	Card Reader Ready	Card Reader Installed	Motor Speed	Wash-tub
HWTX21*N3020		X	X		X				2	S
HWTX21*N3022		X	X		X				2	S
HWTY20*M		X	X				X		2	P
HWTY20*N		X	X				X		2	P
HWTY21*M1102		X	X				X		2	S
HWTY21*N1102		X	X				X		2	S
HWTZ20*M		X	X			X			2	P
HWTZ20*N		X	X			X			2	P
HWTZ21*M1102		X	X			X			2	S
HWTZ21*N1102		X	X			X			2	S
JWT110*A		X		X					1	P
JWT110*M		X		X					1	P
JWT110*N		X		X					1	P
JWT810*N3020	X								1	P
JWT810*N3050	X								1	P
JWT810*N5400	X								1	P
JWT820*N	X								2	P
JWT820*N3050	X								2	P
JWT910*N		X		X					1	P
JWT910*N3020		X		X					1	P
JWT910*N3050		X		X					1	P
JWT910*N3069		X		X					1	P
JWT920*N		X		X					2	P
JWT920*N3050		X		X					2	P
NWNBX2SP301NW22		X	X		X				2	S
NWT721*A1126		X	X					X	2	S
NWT811*N5422	X								1	S
NWT821*N3022	X								2	S
NWT911*N5422		X		X					1	S
NWT921*N3022		X		X					2	S
NWTF21*M1126		X	X					X	2	S
NWTF21*N1126		X	X					X	2	S
SWL520*N		X	X			X			2	P
SWL521*N		X	X			X			2	S
SWLB20*N		X	X			X			2	P
SWLB21*N		X	X			X			2	S
SWLF20*N		X	X					X	2	P
SWLF21*N		X	X					X	2	S
SWLT20*N		X	X			X			2	P
SWLT21*N		X	X			X			2	S
SWLY20*N		X	X				X		2	P
SWLY21*N		X	X				X		2	S

\* Add Letter To Designate Color. L – Almond W – White Q – Bisque  
 Key: 1 = 1 Speed Motor, 2 = 2 Speed Motor, P = Porcelain Washtub, S = Stainless Steel Washtub

Washer Model	Non-metered	Metered	Electronic Control	Coin Slide Ready	Coin Drop Ready	Coin Drop Installed	Card Reader Ready	Card Reader Installed	Motor Speed	Wash-tub
SWNBC2PP111TW02		X	X			X			2	P
SWNSX2PP111TW02		X		X					2	P
SWT011*A3000	X								1	S
SWT011*A3022	X								1	S
SWT011*A3028	X								1	S
SWT011*A3050	X								1	S
SWT011*A3062	X								1	S
SWT011*M3000	X								1	S
SWT011*M3022	X								1	S
SWT011*M3050	X								1	S
SWT011*N3000	X								1	S
SWT011*N3022	X								1	S
SWT011*N3028	X								1	S
SWT011*N3050	X								1	S
SWT011*N3062	X								1	S
SWT020*A	X								2	P
SWT020*M	X								2	P
SWT020*N	X								2	P
SWT021*A	X								2	S
SWT021*M	X								2	S
SWT021*N	X								2	S
SWT110*A		X		X					1	P
SWT110*M		X		X					1	P
SWT110*N		X		X					1	P
SWT111*A		X		X					1	S
SWT111*A1200		X		X					1	S
SWT111*A1300		X		X					1	S
SWT111*A3000		X		X					1	S
SWT111*A3022		X		X					1	S
SWT111*A3028		X		X					1	S
SWT111*A3050		X		X					1	S
SWT111*A5412		X		X					1	S
SWT111*B3069		X		X					1	S
SWT111*M		X		X					1	S
SWT111*M1200		X		X					1	S
SWT111*M1300		X		X					1	S
SWT111*M3000		X		X					1	S
SWT111*M3022		X		X					1	S
SWT111*M3050		X		X					1	S
SWT111*M3069		X		X					1	S
SWT111*M5412		X		X					1	S
SWT111*N		X		X					1	S

\* Add Letter To Designate Color. L – Almond W – White Q – Bisque

Key: 1 = 1 Speed Motor, 2 = 2 Speed Motor, P = Porcelain Washtub, S = Stainless Steel Washtub

**Introduction**

Washer Model	Non-metered	Metered	Electronic Control	Coin Slide Ready	Coin Drop Ready	Coin Drop Installed	Card Reader Ready	Card Reader Installed	Motor Speed	Wash-tub
SWT111*N3000		X		X					1	S
SWT111*N3022		X		X					1	S
SWT111*N3028		X		X					1	S
SWT111*N3050		X		X					1	S
SWT111*N3069		X		X					1	S
SWT111*N5412		X		X					1	S
SWT111*N5417		X		X					1	S
SWT120*A		X		X					1	P
SWT120*M		X		X					1	P
SWT120*N		X		X					1	P
SWT121*A		X		X					2	S
SWT121*A3000		X		X					2	S
SWT121*M		X		X					2	S
SWT121*M3000		X		X					2	S
SWT121*N		X		X					2	S
SWT210*A		X		X					1	P
SWT210*A1124		X		X					1	P
SWT210*M		X		X					1	P
SWT210*M1124		X		X					1	P
SWT210*N		X		X					1	P
SWT210*N1124		X		X					1	P
SWT211*A1200		X		X					1	S
SWT211*A1300		X		X					1	S
SWT211*A3000		X		X					1	S
SWT211*A3020		X		X					1	S
SWT211*A3022		X		X					1	S
SWT211*A3062		X		X					1	S
SWT211*B3020		X		X					1	S
SWT211*M3000		X		X					1	S
SWT211*M3020		X		X					1	S
SWT211*M3022		X		X					1	S
SWT211*N3000		X		X					1	S
SWT211*N3020		X		X					1	S
SWT211*N3022		X		X					1	S
SWT211*N3050		X		X					1	S
SWT211*N3062		X		X					1	S
SWT220*A		X		X					2	P
SWT220*M		X		X					2	P
SWT220*M1124		X		X					2	P
SWT220*N		X		X					2	P
SWT220*N1124		X		X					2	P
SWT221*A		X		X					2	S

\* Add Letter To Designate Color. L – Almond W – White Q – Bisque  
 Key: 1 = 1 Speed Motor, 2 = 2 Speed Motor, P = Porcelain Washtub, S = Stainless Steel Washtub

Washer Model	Non-metered	Metered	Electronic Control	Coin Slide Ready	Coin Drop Ready	Coin Drop Installed	Card Reader Ready	Card Reader Installed	Motor Speed	Wash-tub
SWT221*M		X		X					2	S
SWT221*N		X		X					2	S
SWT2A0*N		X		X					2	P
SWT2A0*N1124		X		X					2	P
SWT2B0*N1124		X		X					1	P
SWT320*A		X		X					2	P
SWT320*M		X		X					2	P
SWT321*A		X		X					2	S
SWT321*M		X		X					2	S
SWT420*A		X	X		X				2	P
SWT420*D		X	X		X				2	P
SWT420*M		X	X		X				2	P
SWT421*A		X	X		X				2	S
SWT421*A3000		X	X		X				2	S
SWT421*A3022		X	X		X				2	S
SWT421*A3028		X	X		X				2	S
SWT421*A3050		X	X		X				2	S
SWT421*D		X	X		X				2	S
SWT421*M		X	X		X				2	S
SWT421*M3000		X	X		X				2	S
SWT421*M3022		X	X		X				2	S
SWT421*M3050		X	X		X				2	S
SWT520*A		X	X			X			2	P
SWT520*M		X	X			X			2	P
SWT520*N		X	X			X			2	P
SWT521*A		X	X			X			2	S
SWT521*A1119		X	X			X			2	S
SWT521*M		X	X			X			2	S
SWT521*N		X	X			X			2	S
SWT620*A		X	X				X		2	P
SWT620*C		X	X				X		2	P
SWT620*D		X	X				X		2	P
SWT620*M		X	X				X		2	P
SWT621*C		X	X				X		2	S
SWT621*D		X	X				X		2	S
SWT621*D1121		X	X				X		2	S
SWT621*M		X	X				X		2	S
SWT621*M1121		X	X				X		2	S
SWT720*A		X	X					X	2	P
SWT720*M		X	X					X	2	P
SWT721*A		X	X					X	2	S
SWT721*M		X	X					X	2	S

\* Add Letter To Designate Color. L – Almond W – White Q – Bisque

Key: 1 = 1 Speed Motor, 2 = 2 Speed Motor, P = Porcelain Washtub, S = Stainless Steel Washtub

**Introduction**

Washer Model	Non-metered	Metered	Electronic Control	Coin Slide Ready	Coin Drop Ready	Coin Drop Installed	Card Reader Ready	Card Reader Installed	Motor Speed	Wash-tub
SWT811*N3000	X								1	S
SWT811*N3022	X								1	S
SWT811*N3050	X								1	S
SWT811*N3062	X								1	S
SWT820*N	X								2	P
SWT821*N	X								2	S
SWT910*N		X		X					1	P
SWT910*N1124		X		X					1	P
SWT910*N3050		X		X					1	P
SWT911*N		X		X					1	S
SWT911*N3000		X		X					1	S
SWT911*N3020		X		X					1	S
SWT911*N3022		X		X					1	S
SWT911*N3028		X		X					1	S
SWT911*N3050		X		X					1	S
SWT911*N3062		X		X					1	S
SWT911*N3069		X		X					1	S
SWT911*N5412		X		X					1	S
SWT920*N		X		X					2	P
SWT920*N1124		X		X					2	P
SWT921*N		X		X					2	S
SWTA21*M		X	X		X				2	S
SWTA21*M3022		X	X		X				2	S
SWTA21*M3050		X	X		X				2	S
SWTA21*N		X	X		X				2	S
SWTA21*N3050		X	X		X				2	S
SWTB20*M		X	X			X			2	P
SWTB20*N		X	X			X			2	P
SWTB21*M		X	X			X			2	S
SWTB21*N		X	X			X			2	S
SWTBA0*N		X	X			X			2	P
SWTBA1*N		X	X			X			2	S
SWTC20*M		X	X				X		2	P
SWTC20*N		X	X				X		2	P
SWTC21*M		X	X				X		2	S
SWTC21*N		X	X				X		2	S
SWTF20*M		X	X					X	2	P
SWTF20*N		X	X					X	2	P
SWTF21*M		X	X					X	2	S
SWTF21*M3050		X	X					X	2	S
SWTF21*N		X	X					X	2	S
SWTF21*N3050		X	X					X	2	S

\* Add Letter To Designate Color. L – Almond W – White Q – Bisque  
 Key: 1 = 1 Speed Motor, 2 = 2 Speed Motor, P = Porcelain Washtub, S = Stainless Steel Washtub

Washer Model	Non-metered	Metered	Electronic Control	Coin Slide Ready	Coin Drop Ready	Coin Drop Installed	Card Reader Ready	Card Reader Installed	Motor Speed	Wash-tub
SWTH20*M		X	X			X			2	P
SWTH20*N		X	X			X			2	P
SWTH21*M		X	X			X			2	S
SWTH21*N		X	X			X			2	S
SWTJ21*M		X	X					X	2	S
SWTJ21*N		X	X					X	2	S
SWTT20*M		X	X			X			2	P
SWTT20*N		X	X			X			2	P
SWTT20*N99M6		X	X			X			2	P
SWTT21*M		X	X			X			2	S
SWTT21*N		X	X			X			2	S
SWTV20*N		X		X					2	P
SWTW20*N		X		X					2	P
SWTW21*N		X		X					2	S
SWTX21*M		X	X		X				2	S
SWTX21*M3000		X	X		X				2	S
SWTX21*M3020		X	X		X				2	S
SWTX21*M3022		X	X		X				2	S
SWTX21*M3050		X	X		X				2	S
SWTX21*M3069		X	X		X				2	S
SWTX21*N		X	X		X				2	S
SWTX21*N1127		X	X		X				2	S
SWTX21*N3000		X	X		X				2	S
SWTX21*N3020		X	X		X				2	S
SWTX21*N3022		X	X		X				2	S
SWTX21*N3050		X	X		X				2	S
SWTX21*N3069		X	X		X				2	S
SWTY20*M		X	X				X		2	P
SWTY20*N		X	X				X		2	P
SWTY21*M		X	X				X		2	S
SWTY21*N		X	X				X		2	S
SWTZ20*M		X	X			X			2	P
SWTZ20*N		X	X			X			2	P
SWTZ21*M		X	X			X			2	S
SWTZ21*N		X	X			X			2	S
UWT011*A3022	X								1	S
UWT011*A3025	X								1	S
UWT011*M3022	X								1	S
UWT021*A	X								2	S
UWT021*M	X								2	S
UWT021*N	X								2	S

\* Add Letter To Designate Color. L – Almond W – White Q – Bisque

Key: 1 = 1 Speed Motor, 2 = 2 Speed Motor, P = Porcelain Washtub, S = Stainless Steel Washtub

**Introduction**


Washer Model	Non-metered	Metered	Electronic Control	Coin Slide Ready	Coin Drop Ready	Coin Drop Installed	Card Reader Ready	Card Reader Installed	Motor Speed	Wash-tub
UWT821*N	X								2	S
UWT821*N1102	X								2	S

\* Add Letter To Designate Color. L – Almond W – White Q – Bisque

Key: 1 = 1 Speed Motor, 2 = 2 Speed Motor, P = Porcelain Washtub, S = Stainless Steel Washtub



## Theory of Operation

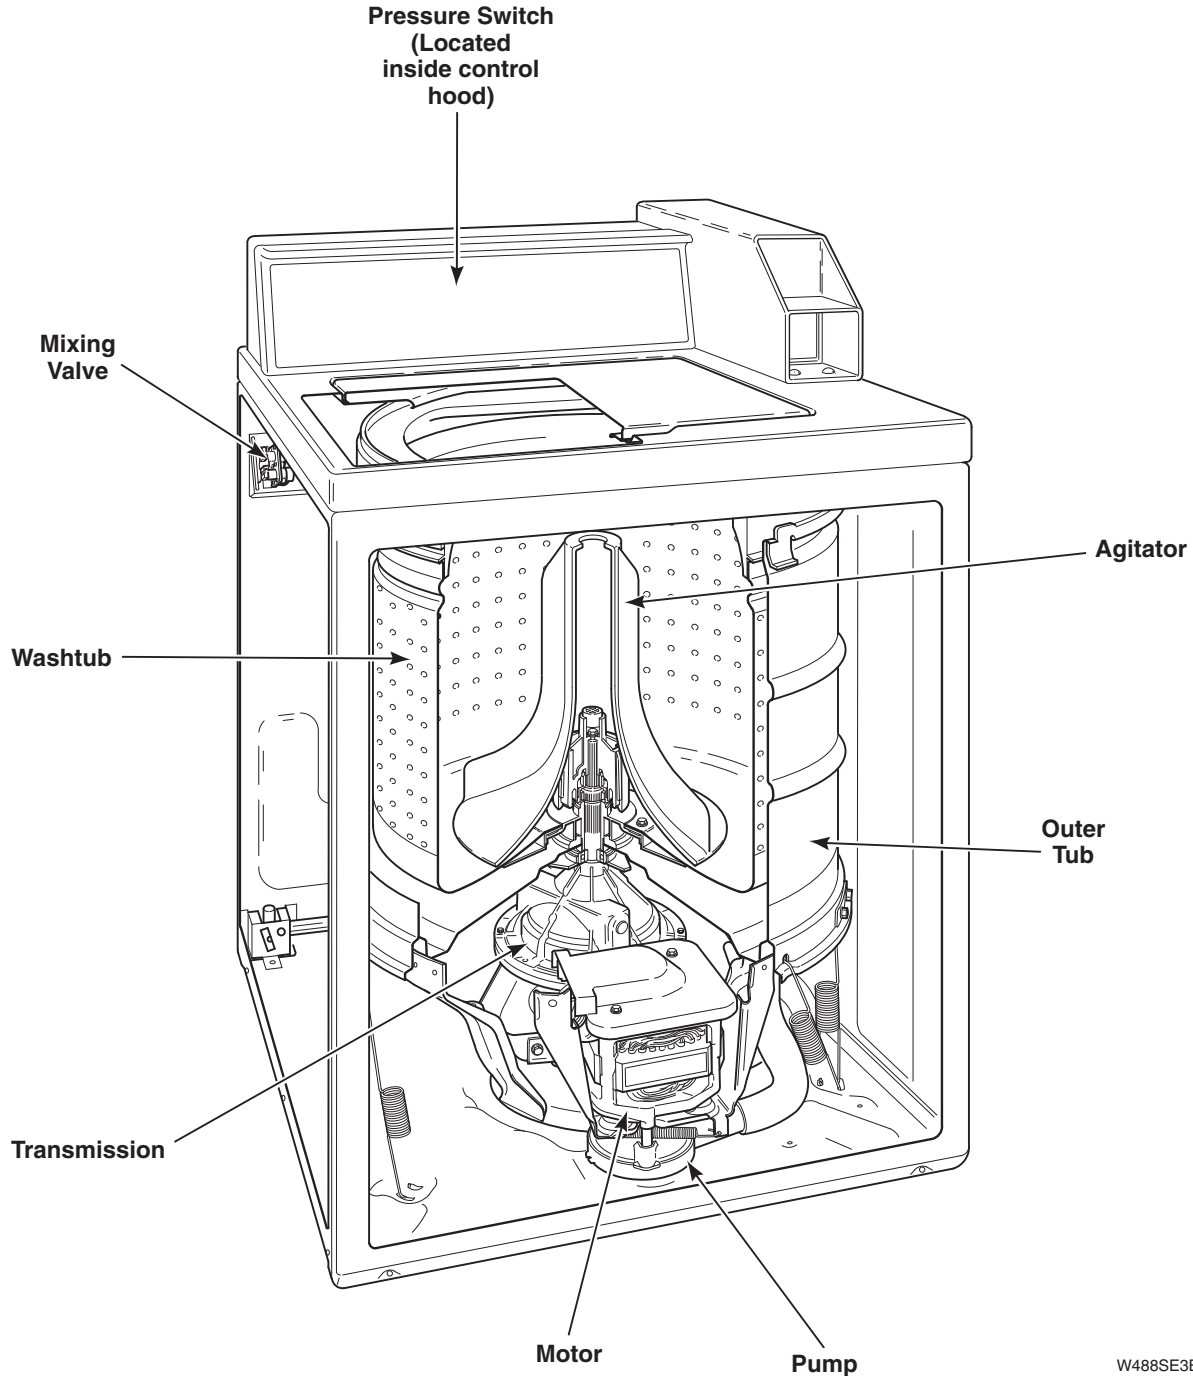

W488SE3B

The cycle begins with a wash fill. The water temperature is determined by the temperature selected. While water fills the washtub, a column of air is trapped in a pressure bulb and hose. The air pressure continues to increase as the washtub fills with water until it is great enough to activate the pressure switch. The pressure switch then causes the wash fill to stop

and wash agitation to begin. However, the lid must be closed for the washer to agitate or spin.

The washer uses a reversing type motor, a special drive belt and an idler assembly. The idler assembly applies tension to the outside of the drive belt.

During agitation, the motor runs in the counterclockwise direction. The spring tension on the idler pulley applies the tension required to reduce the slack on the drive belt and maintain maximum belt to motor pulley contact. This eliminates belt slippage and ensures an efficient wash action, even with extra large loads.

The belt drives the transmission drive pulley in the counterclockwise direction. The pulley drives the helix which is splined to the input shaft of the transmission. This causes the input shaft to turn inside of a roller clutch which is pressed into the transmission cover. This roller clutch acts as a bearing in the counterclockwise direction allowing the transmission gears to operate. The transmission's rack and pinion gear design produces a 210 degree agitation stroke at the output shaft of the transmission which drives the agitator. The brake assembly remains locked during the agitation mode since no pressure is applied to it by the transmission drive pulley.

After the wash agitation is completed, the timer advances into the first spin. During spin, the motor reverses turning in the clockwise direction to spin the water out of the washtub. The combination of water, washtub and load weight cause the drive belt tension on the idler side of the belt to overtake the idler spring pressure allowing the belt to become slack on the opposite side. This reduces the belt to pulley contact and allows slipping between the belt and pulley.

As water is removed by the pump and the momentum of the washtub increases, the idler spring tension gradually overcomes the belt tension removing the belt slack. This eventually increases the belt to pulley contact until maximum spin speed is achieved.

The drive pulley turns clockwise riding up the ramps of the helix, exerting pressure on the brake and forcing it to release from brake pads. The helix drives the input shaft of the transmission, and when the input shaft turns in the clockwise direction the roller clutch locks onto the shaft causing the entire transmission assembly to turn. None of the gears in the transmission are operating at this time. The hub of the washtub is splined to the transmission tube and rotates with the transmission assembly. The centrifugal force created by the spinning washtub causes water to be extracted from the clothes.

Water is introduced during the first spin to "SPRAY" the garments and remove suds from them. The initial spin is followed by rinse agitation to rinse away any detergent residue. The washer fills and then agitates like the wash portion of the cycle. Following rinse agitation, a final spin extracts the rinse water from the clothes preparing them for the dryer.

# Section 3

## General Troubleshooting



### WARNING

To reduce the risk of electric shock, fire, explosion, serious injury or death:

- Disconnect electric power to the washer before servicing.
- Never start the washer with any guards/panels removed.
- Whenever ground wires are removed during servicing, these ground wires must be reconnected to ensure that the washer is properly grounded.

W003

**IMPORTANT:** Refer to appropriate model wiring diagram for aid in testing washer components.


### 1. Clicking Noise During Operation on NEWLY Installed Units

If a clicking noise is heard when first starting up a new topload washer, the noise is related to the belt taking a temporary “set” around the idler pulley. The set causes a slight bump in the belt which in turn causes the idler lever to tap the motor bracket making the clicking noise. **THE BELT DOES NOT NEED TO BE REPLACED.**

To correct this condition please perform the following break-in procedure:


1. After installing the unit start a fill cycle to make sure the seals have been lubricated.
2. Stop the fill cycle and place the unit into a spin cycle.
3. Run the cycle for several minutes until the belt has warmed up. This will remove the “set.”
4. Normal use will keep the belt from resetting.
5. For extended periods of non-use (three to four weeks), this procedure might need to be repeated.

## 2. No Hot Water

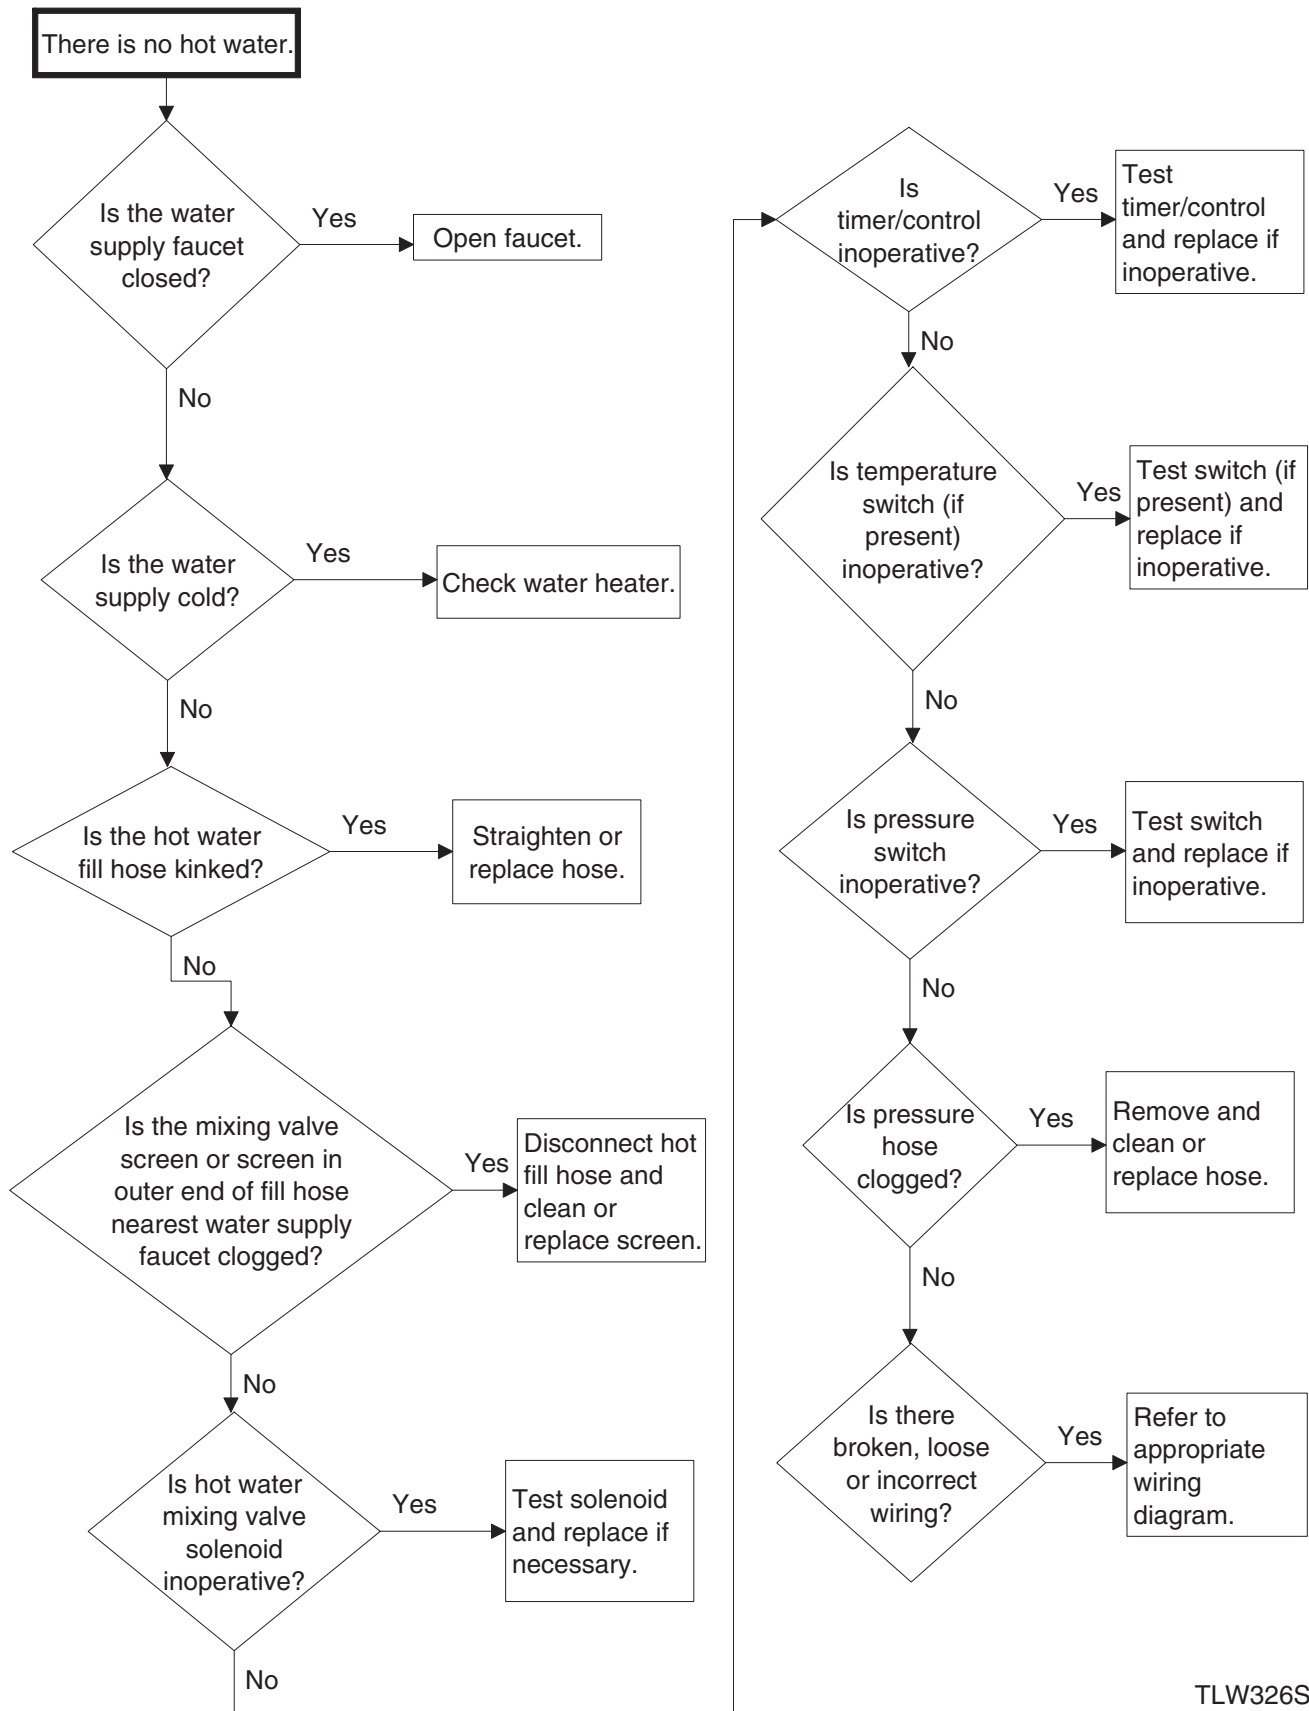

TLW326S


### 3. No Cold Water

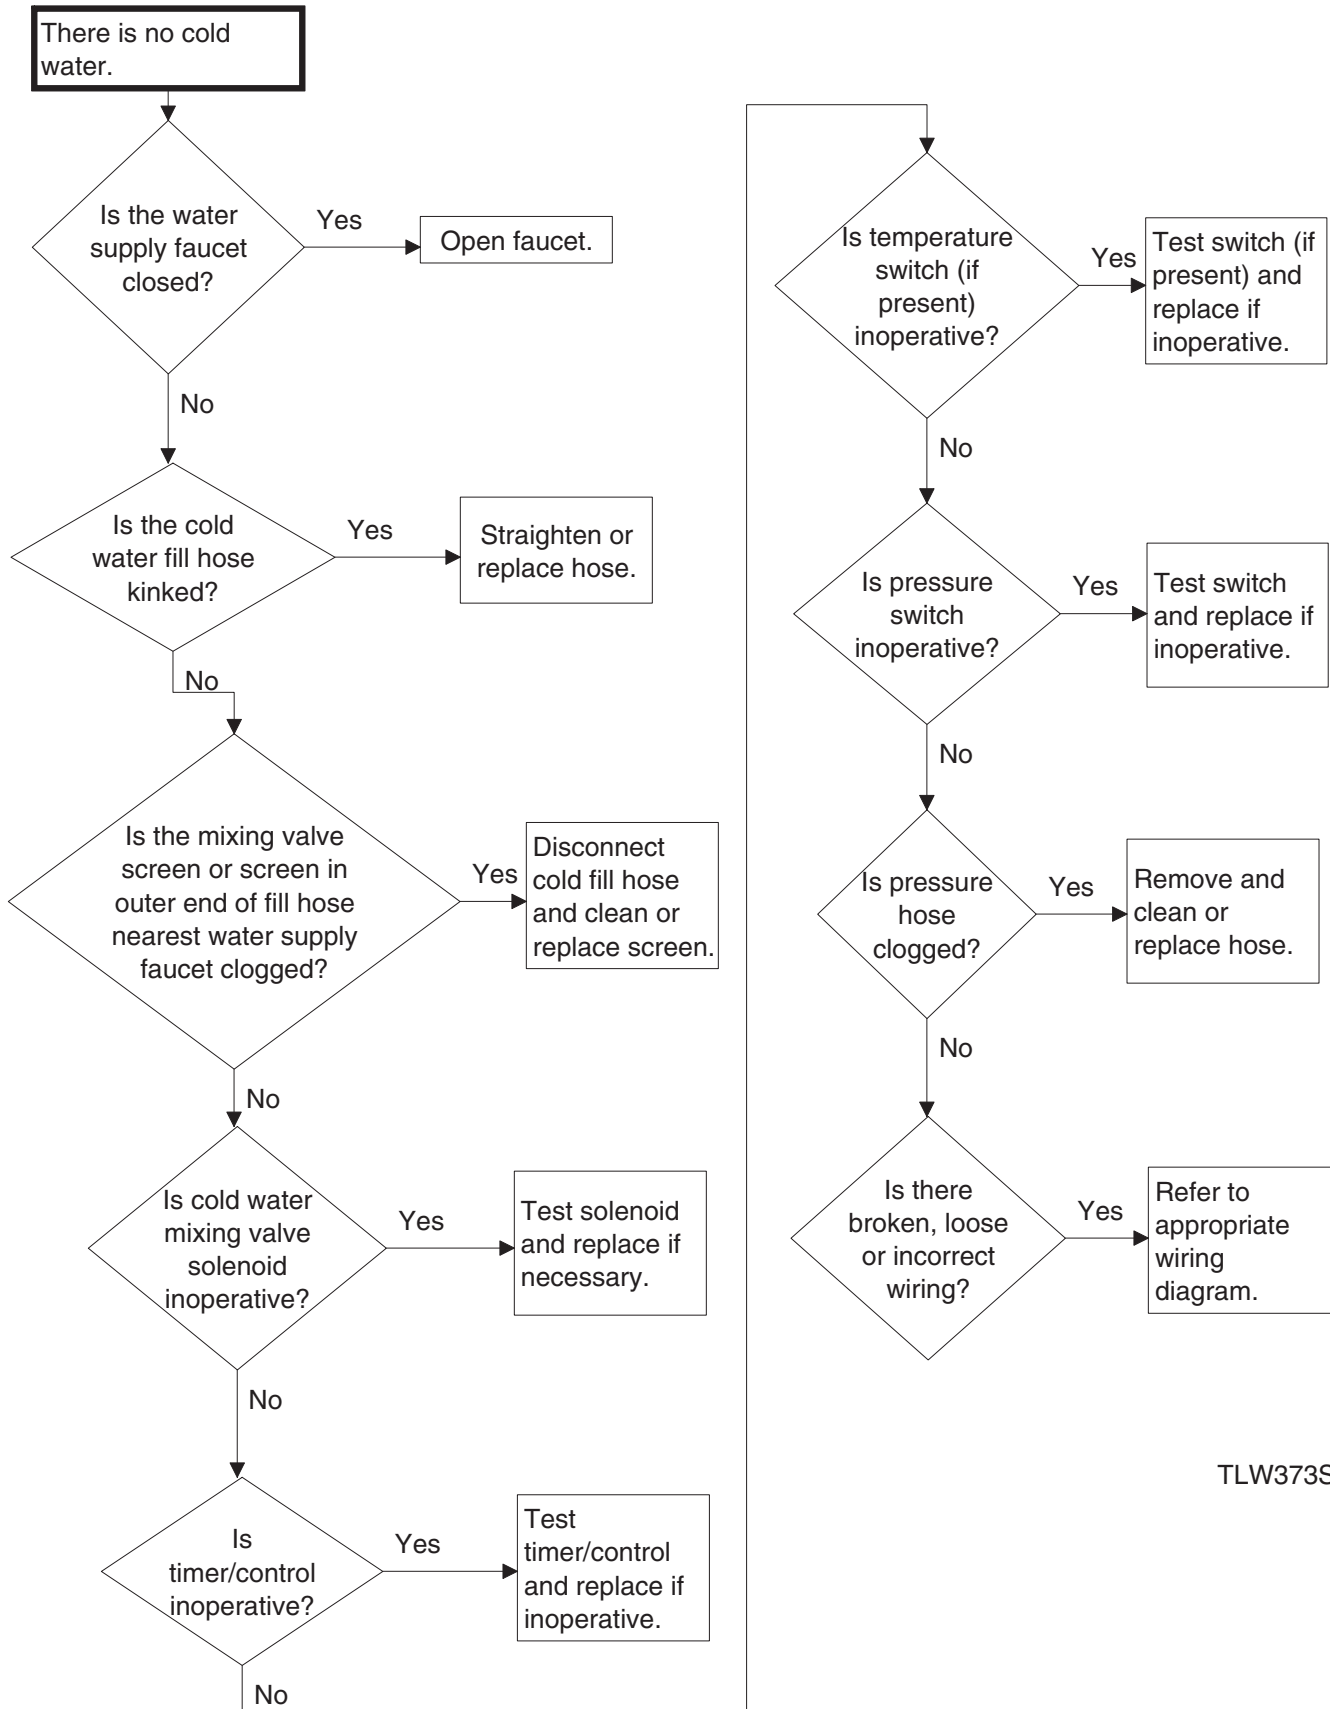

TLW373S


General Troubleshooting

4. No Warm Water

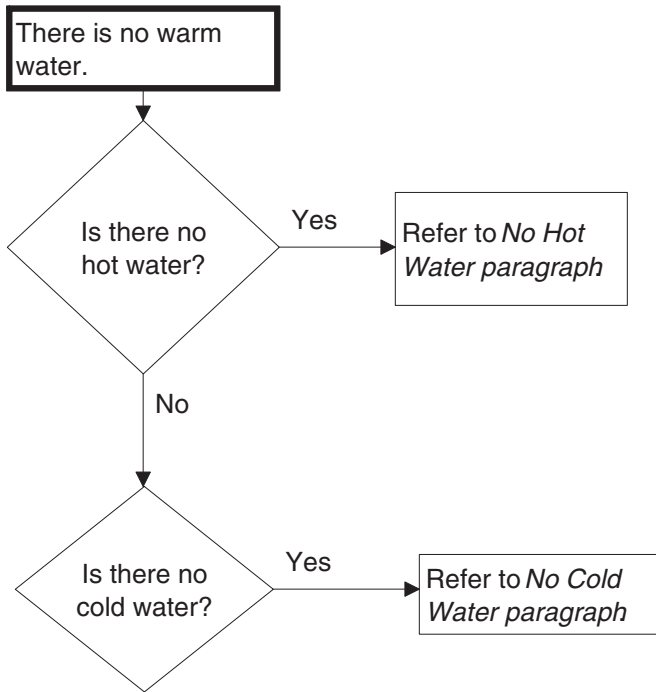


TLW362S

### 5. Water Fill Does Not Stop At Proper Level

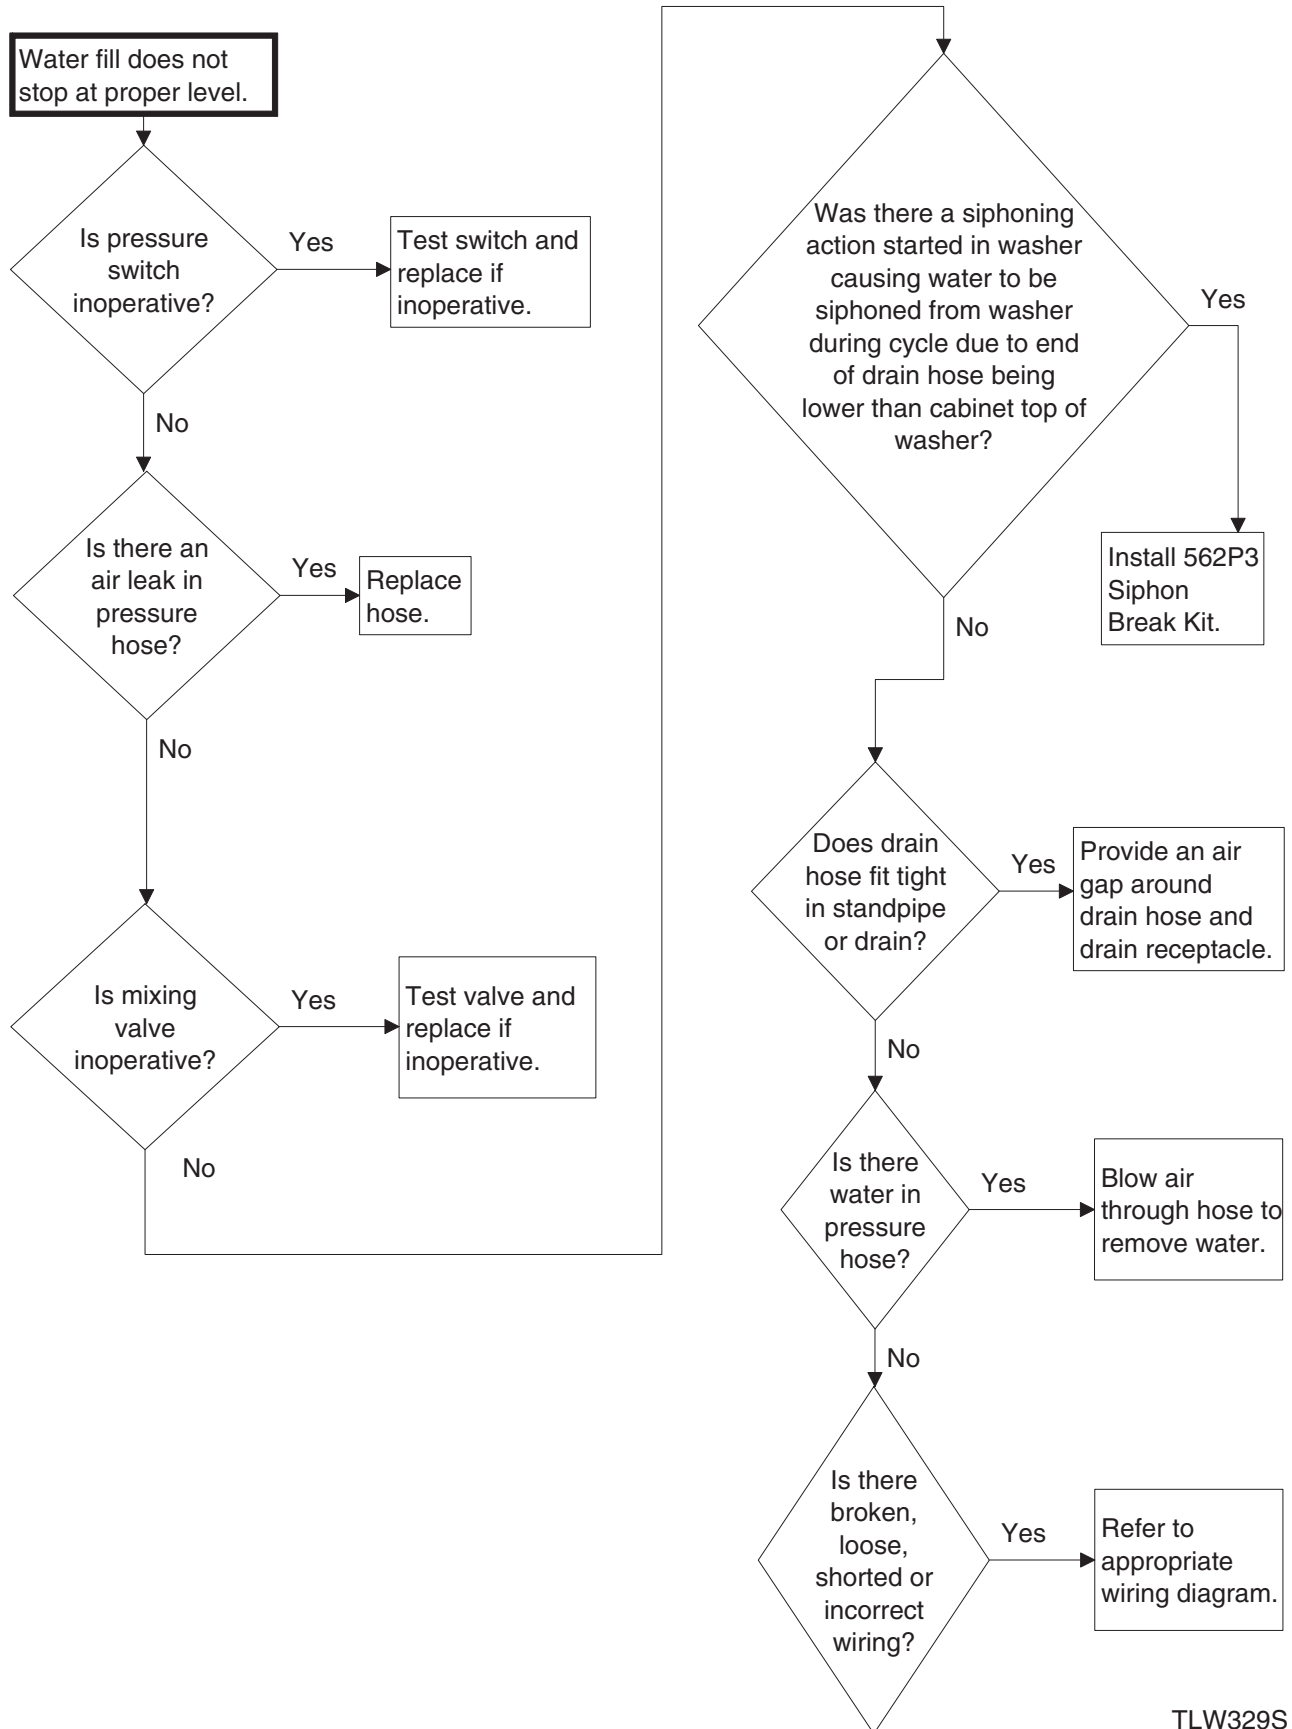

TLW329S


## 6. Timer Does Not Advance (Models with Timer Only)

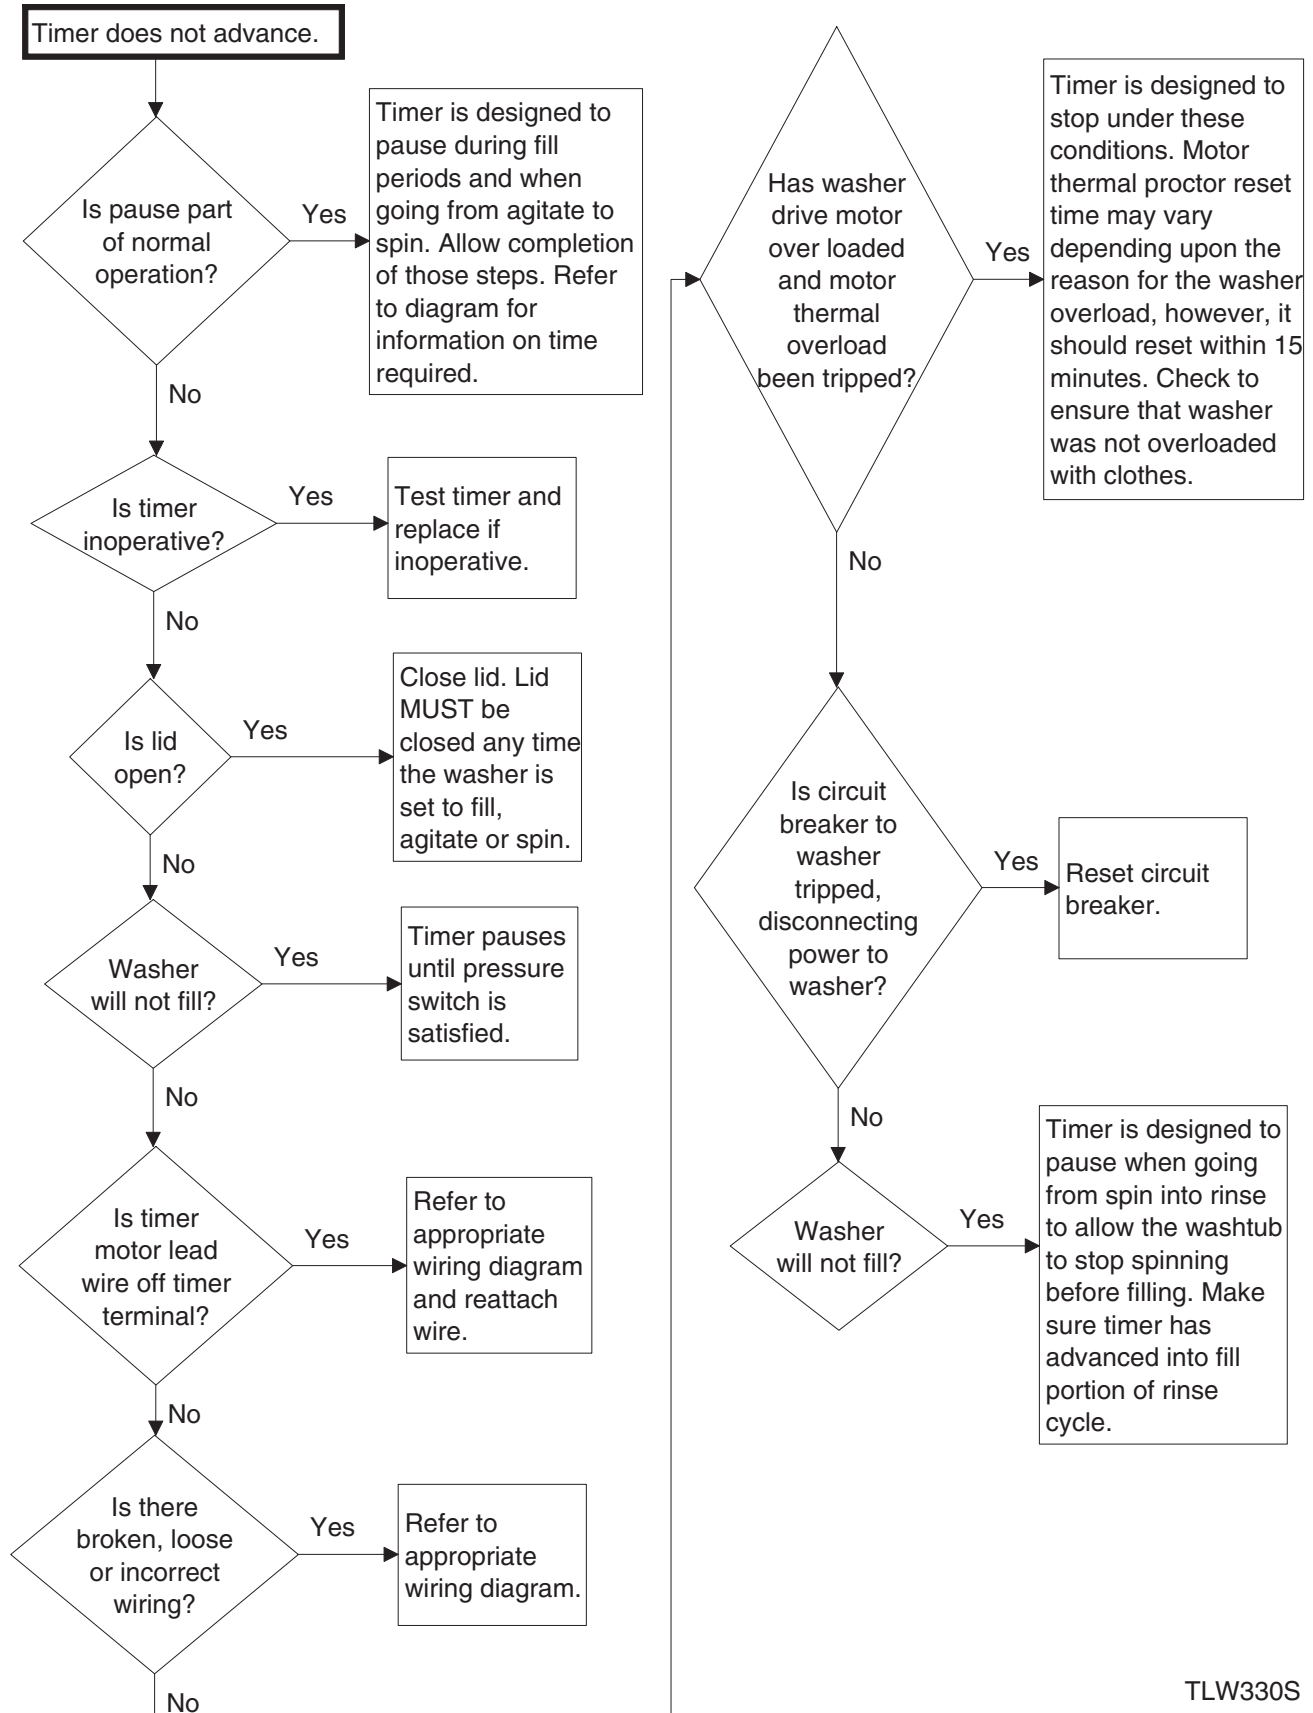

TLW330S




## 7. Motor Does Not Run

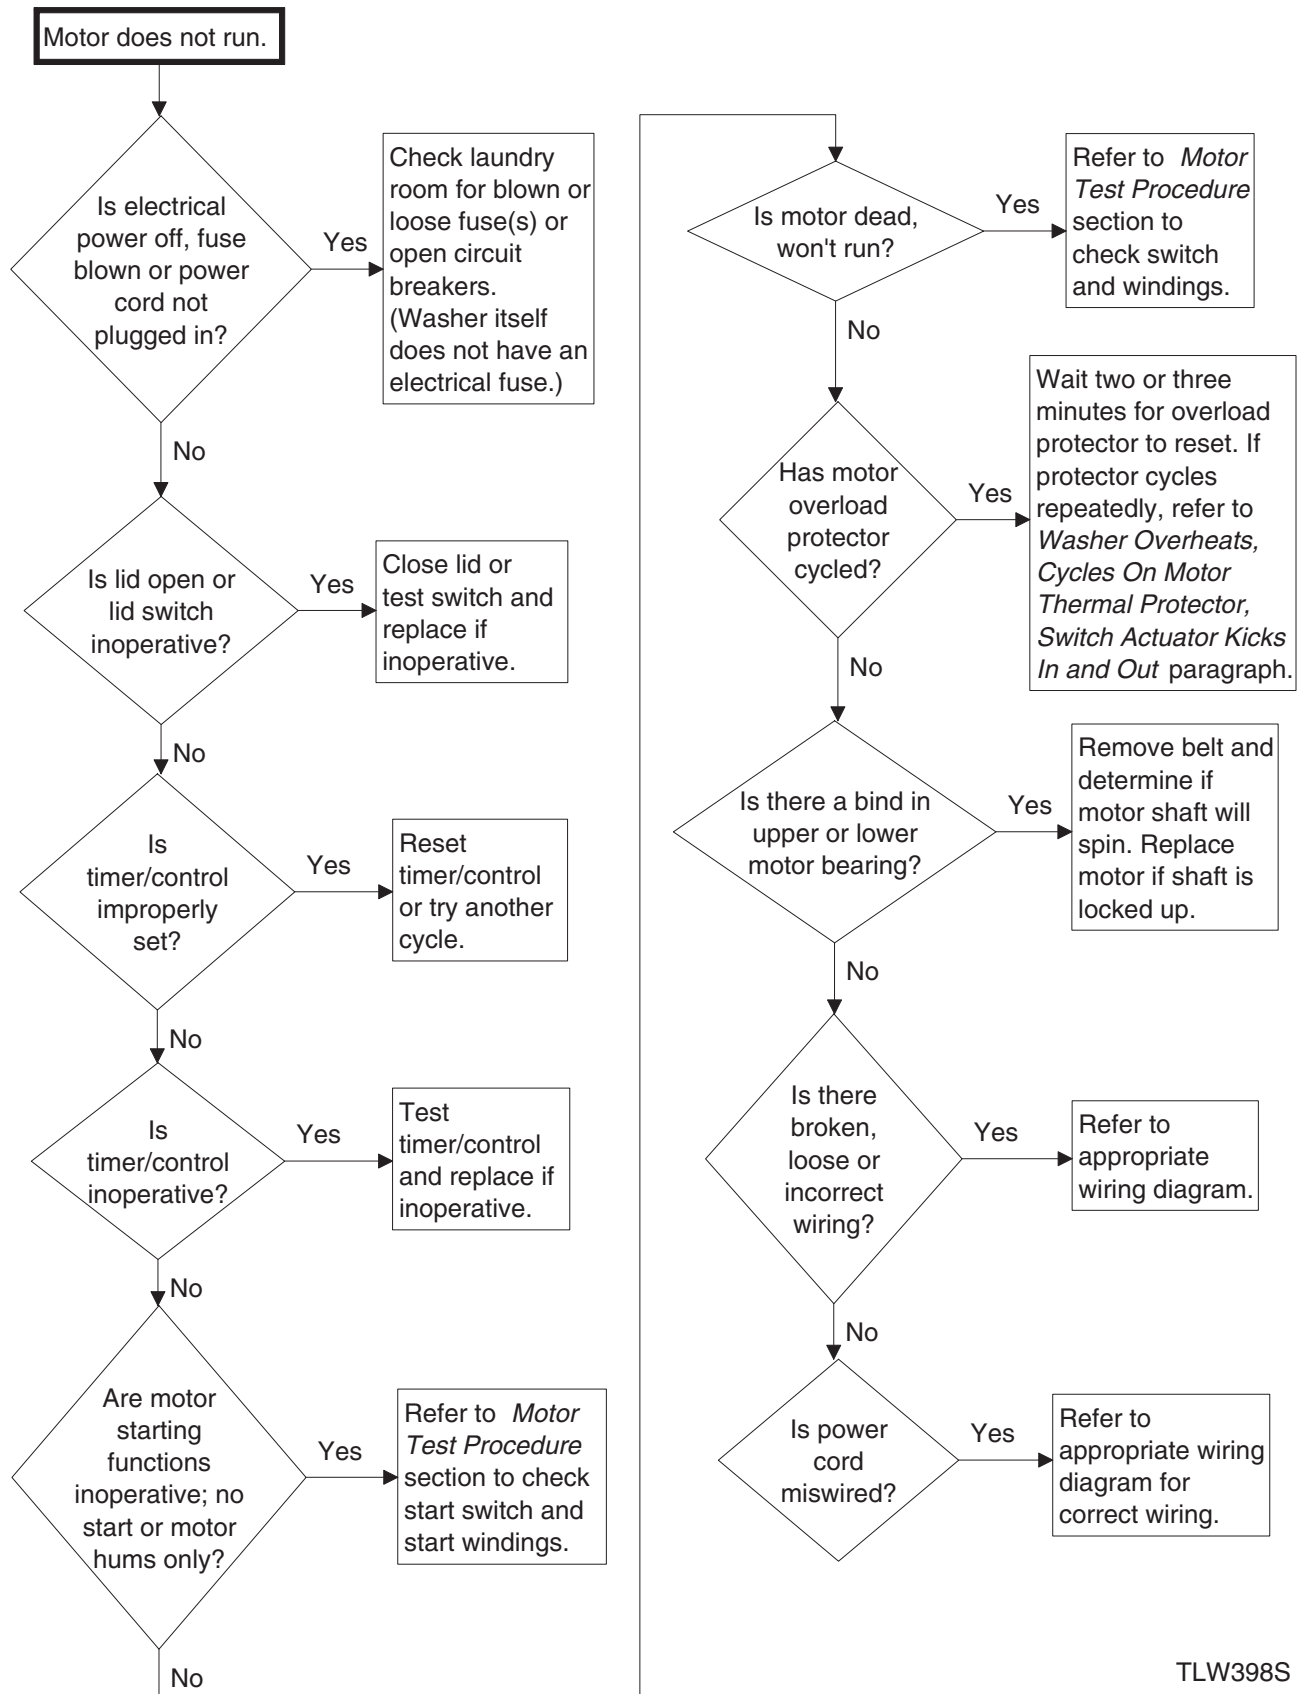


TLW398S

## 8. No Agitation

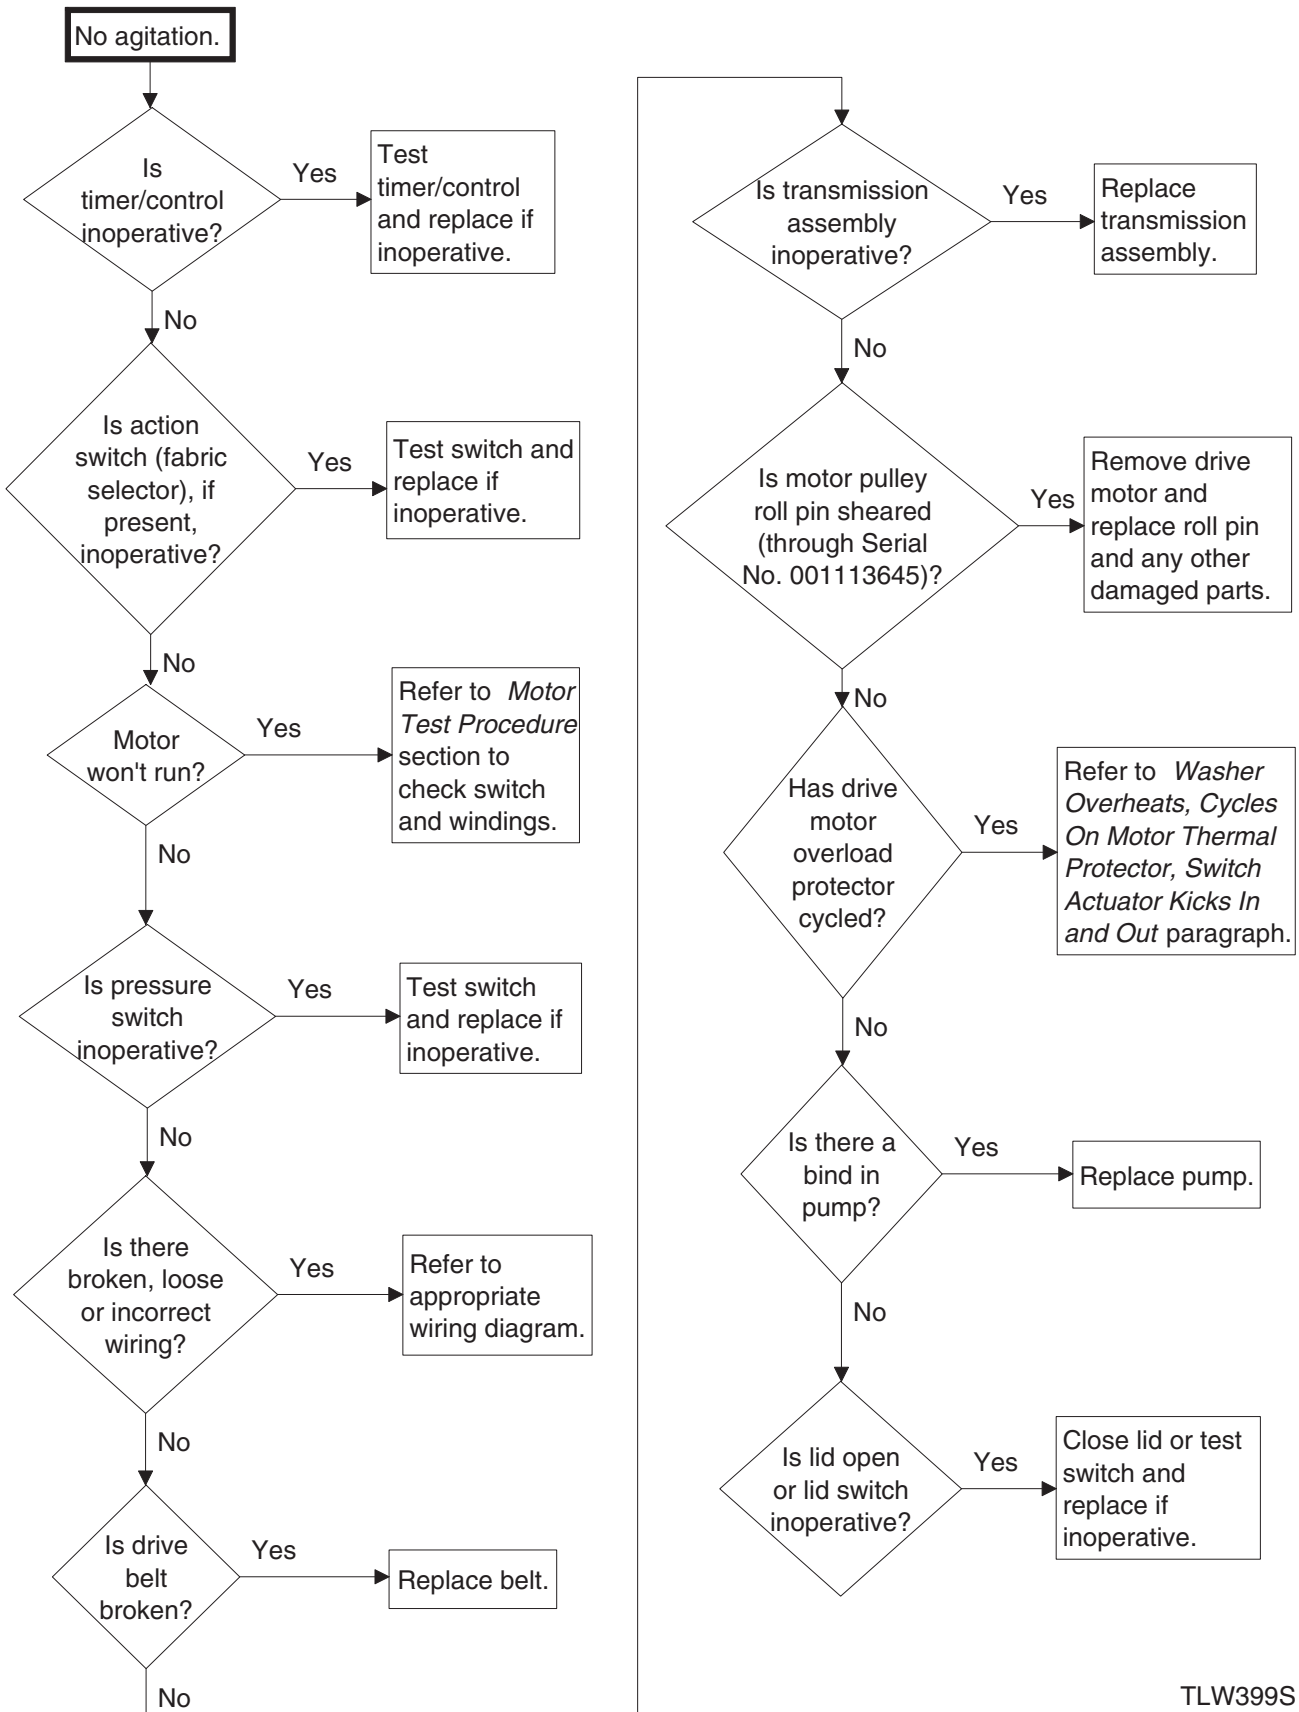


TLW399S

## 9. Constant Agitation

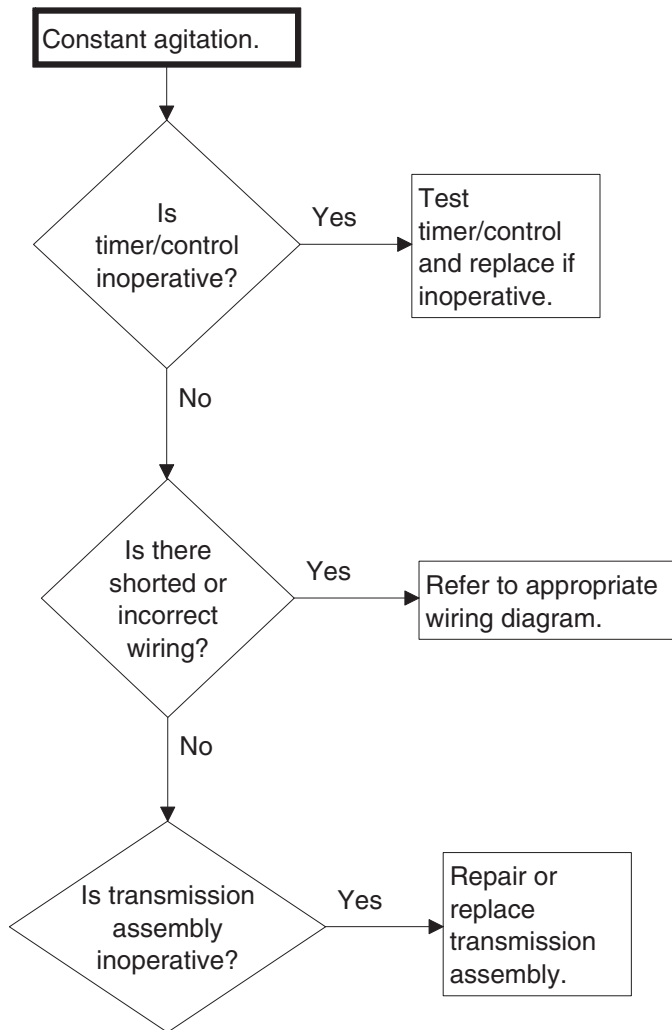


TLW333S

### 10. Washer Overheats, Cycles On Motor Thermal Protector, Switch Actuator Kicks In and Out

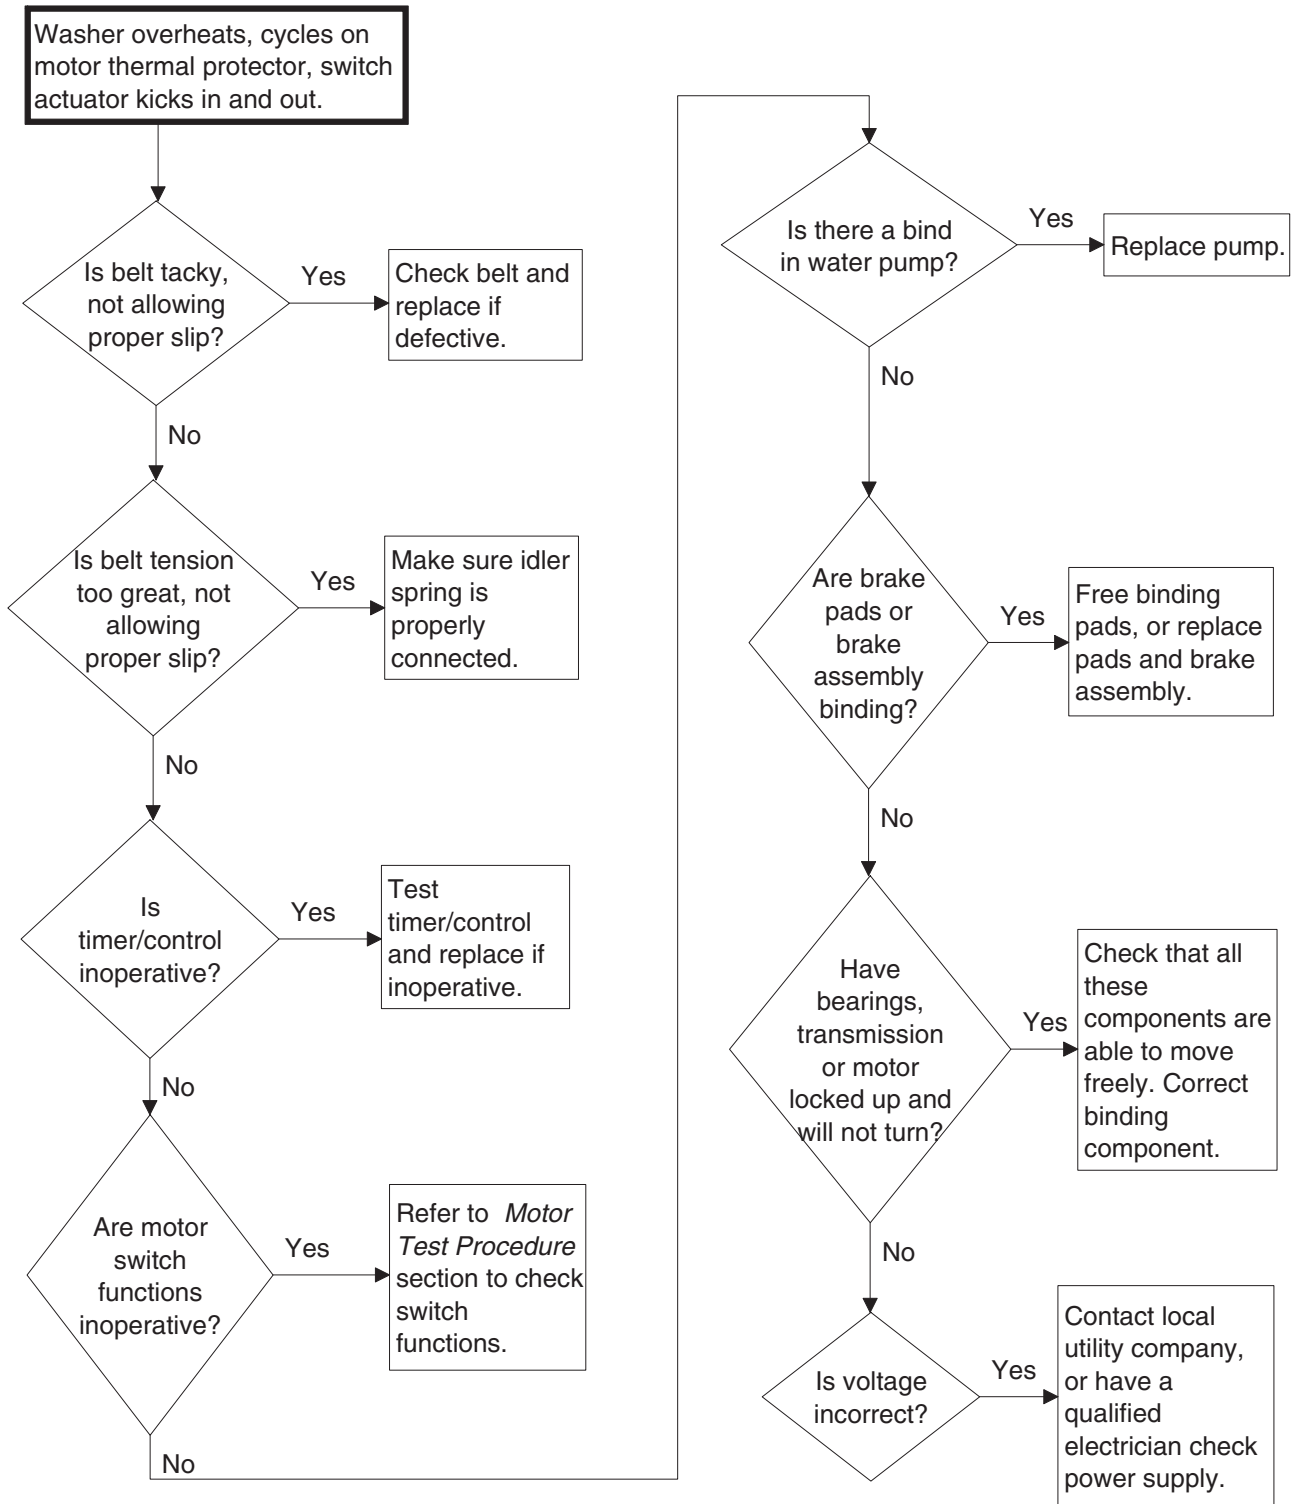


# 11. Slow Spin Or No Spin

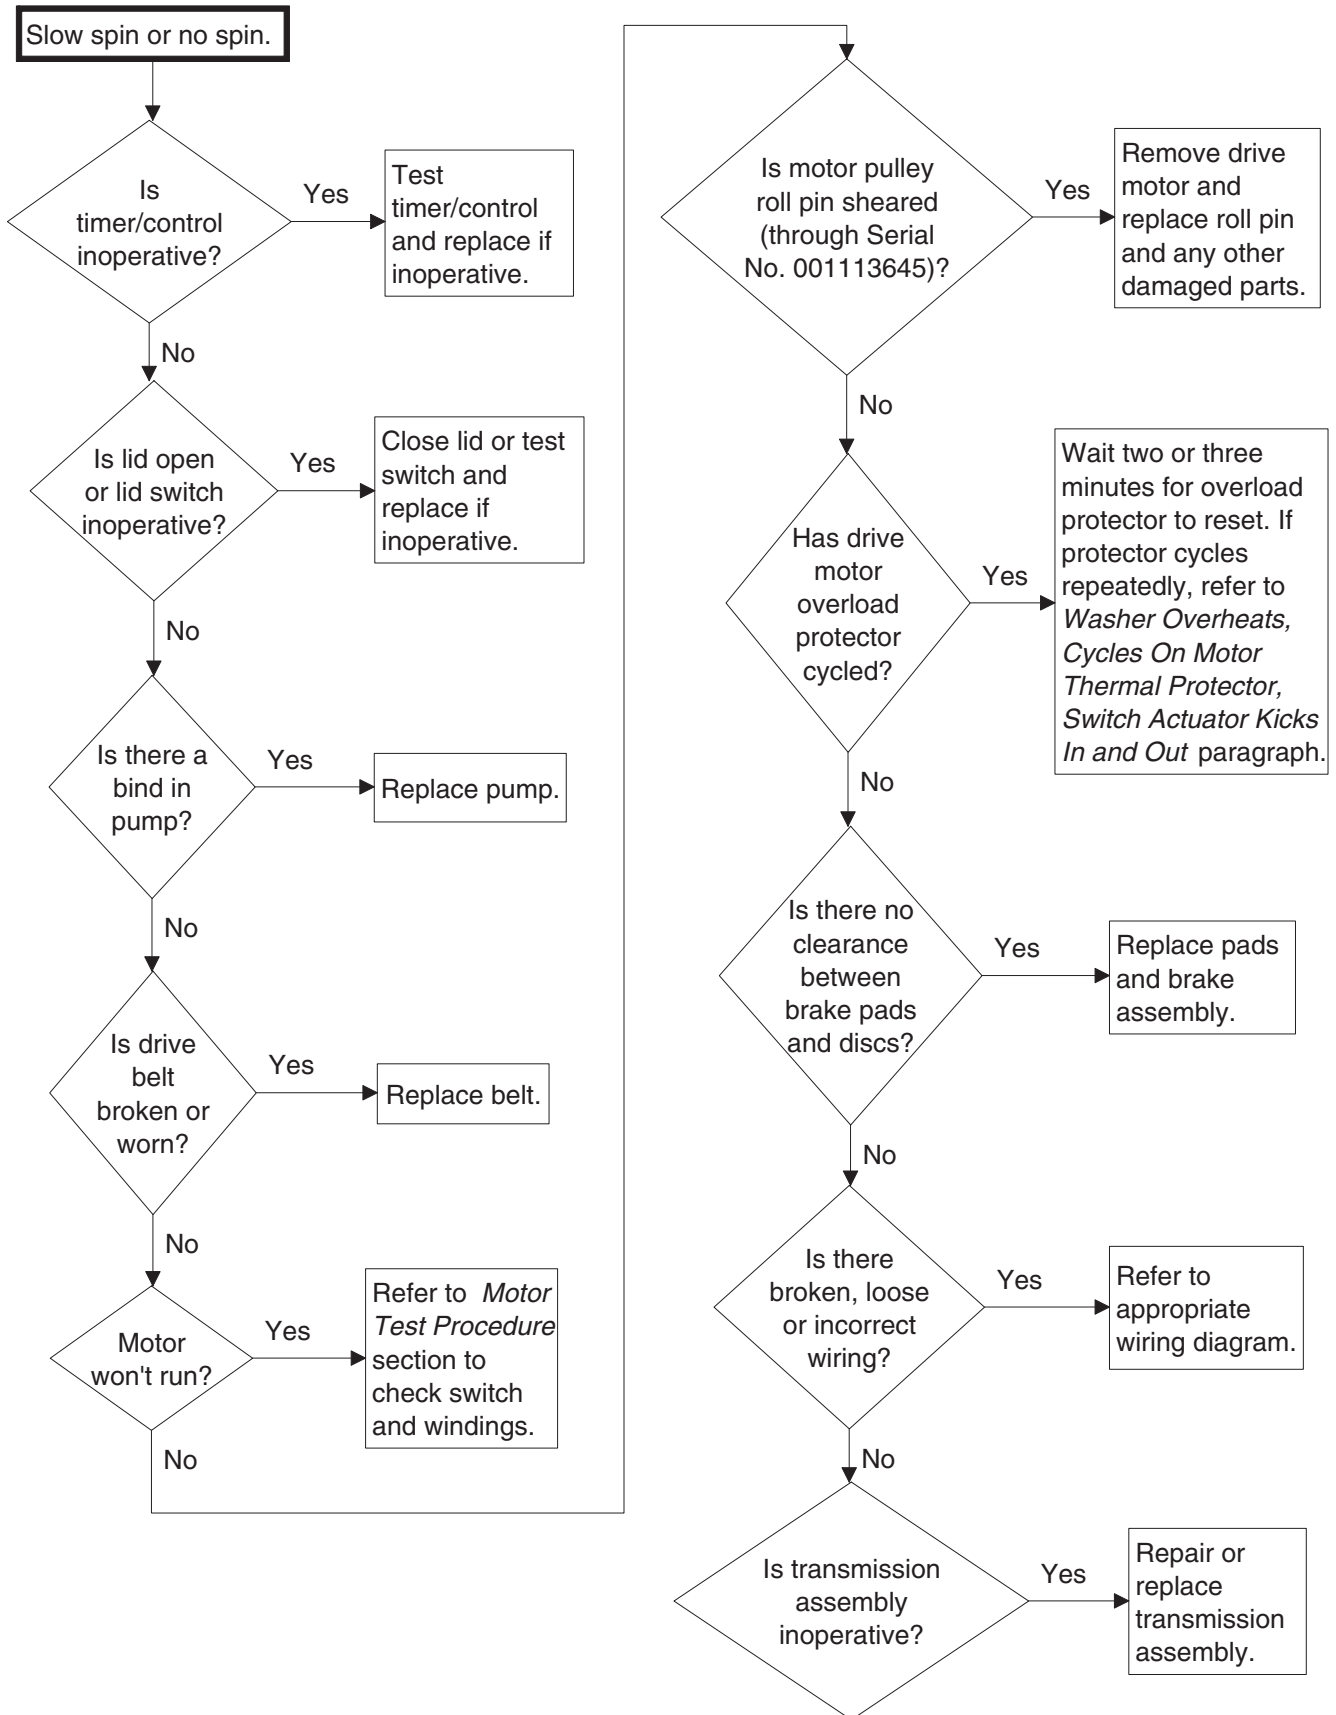


TLW400S

## 12. Constant Spin

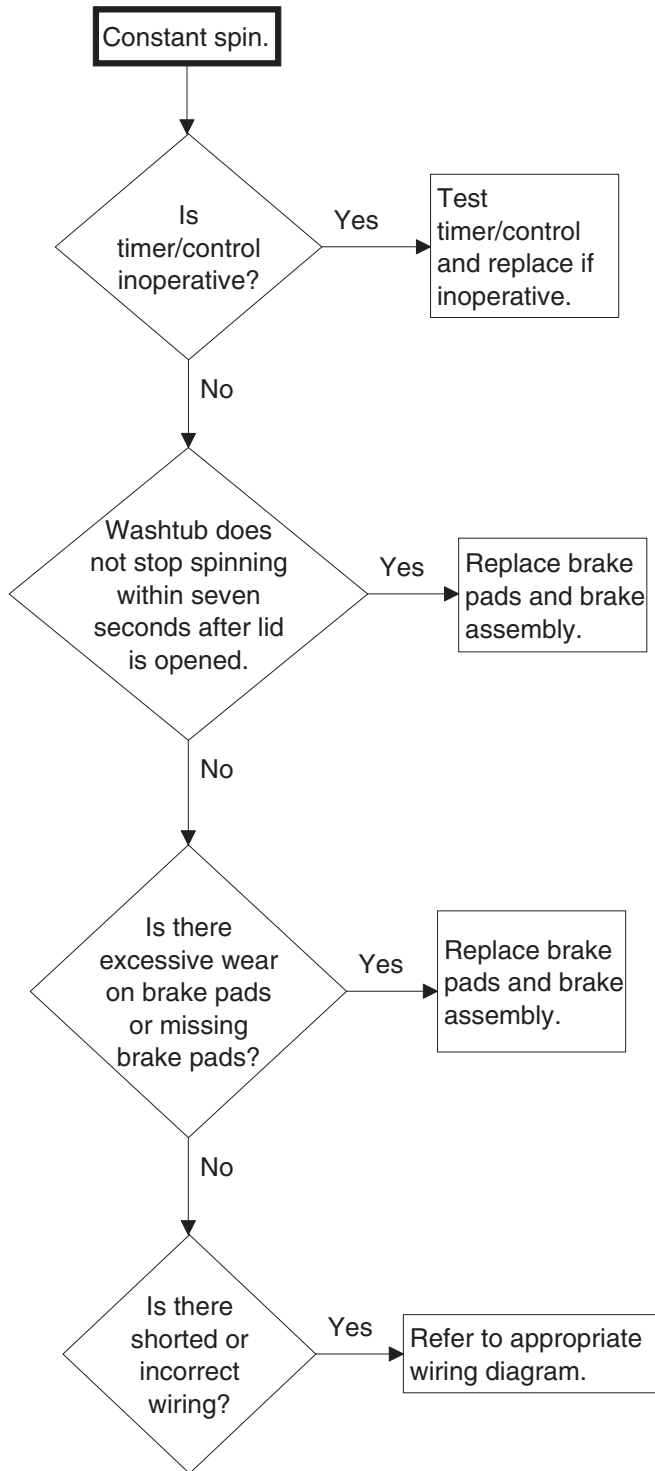


TLW336S

### 13. Washer Stops In Cycle; Quits After A Couple Loads; Is Intermittent

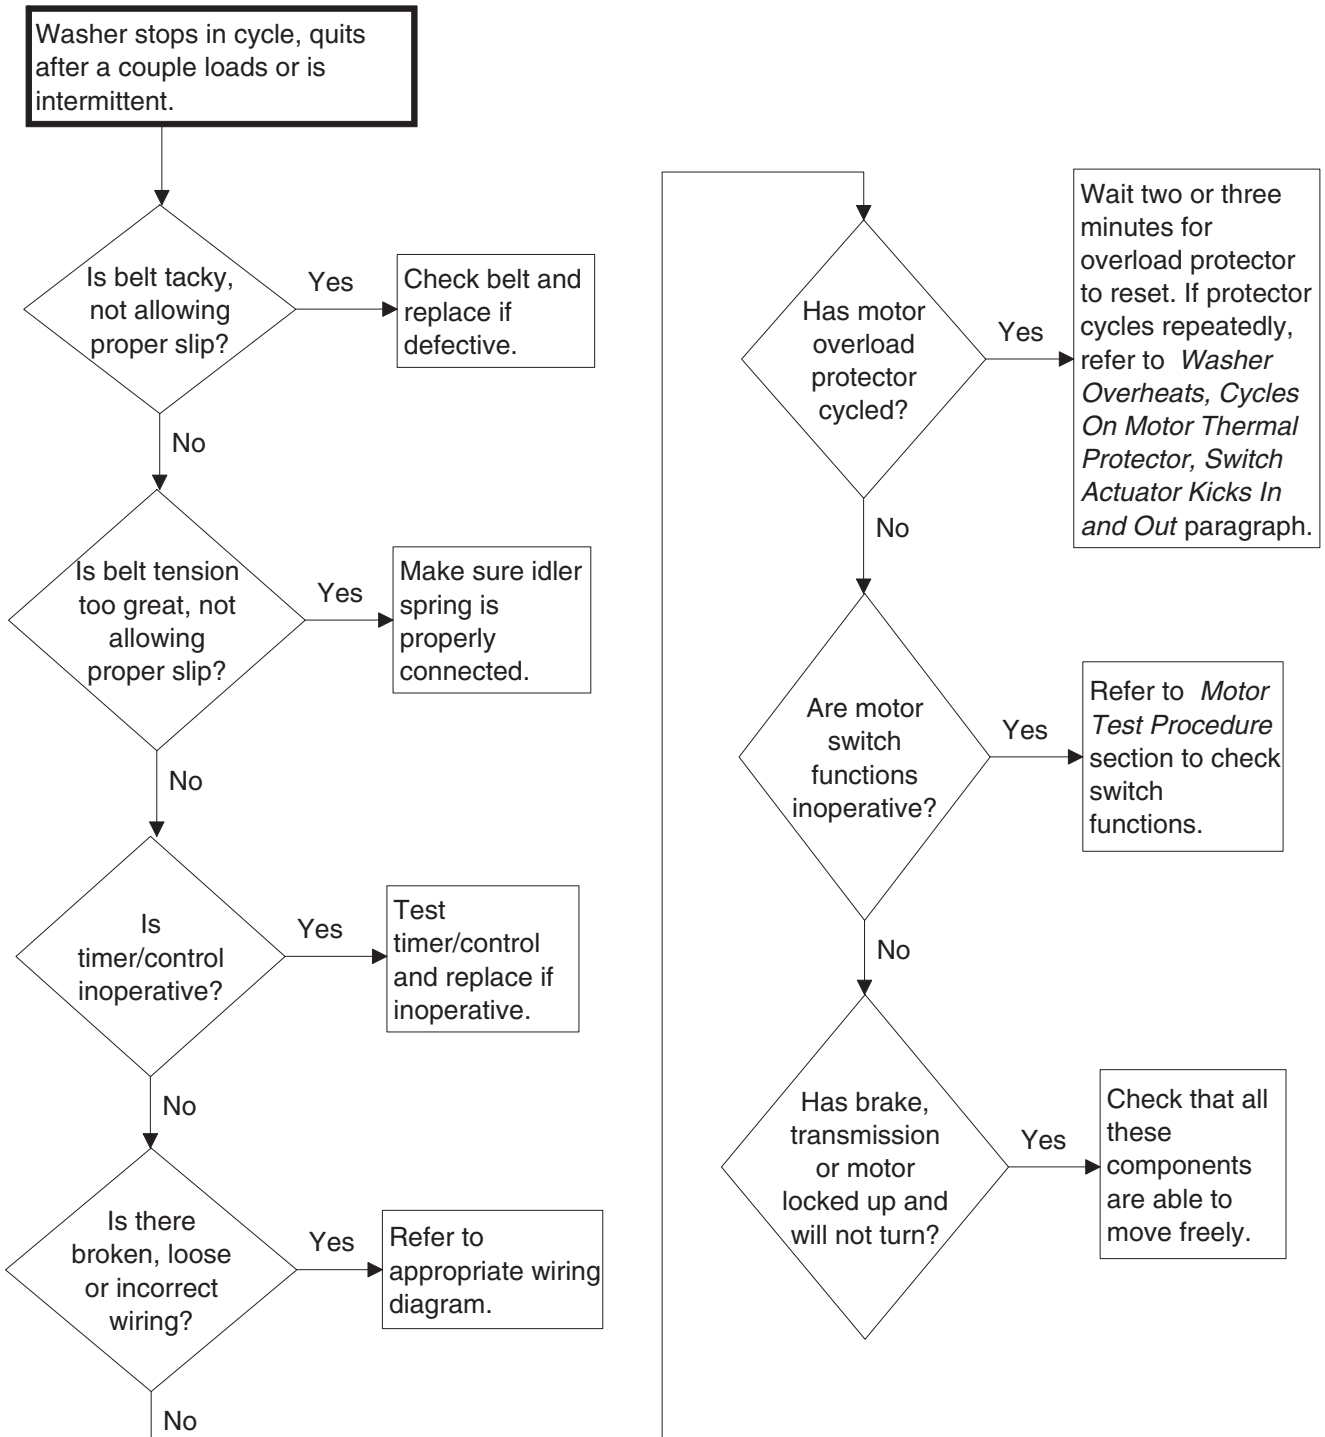


### 14. Washer Is Locked Up Or Binding

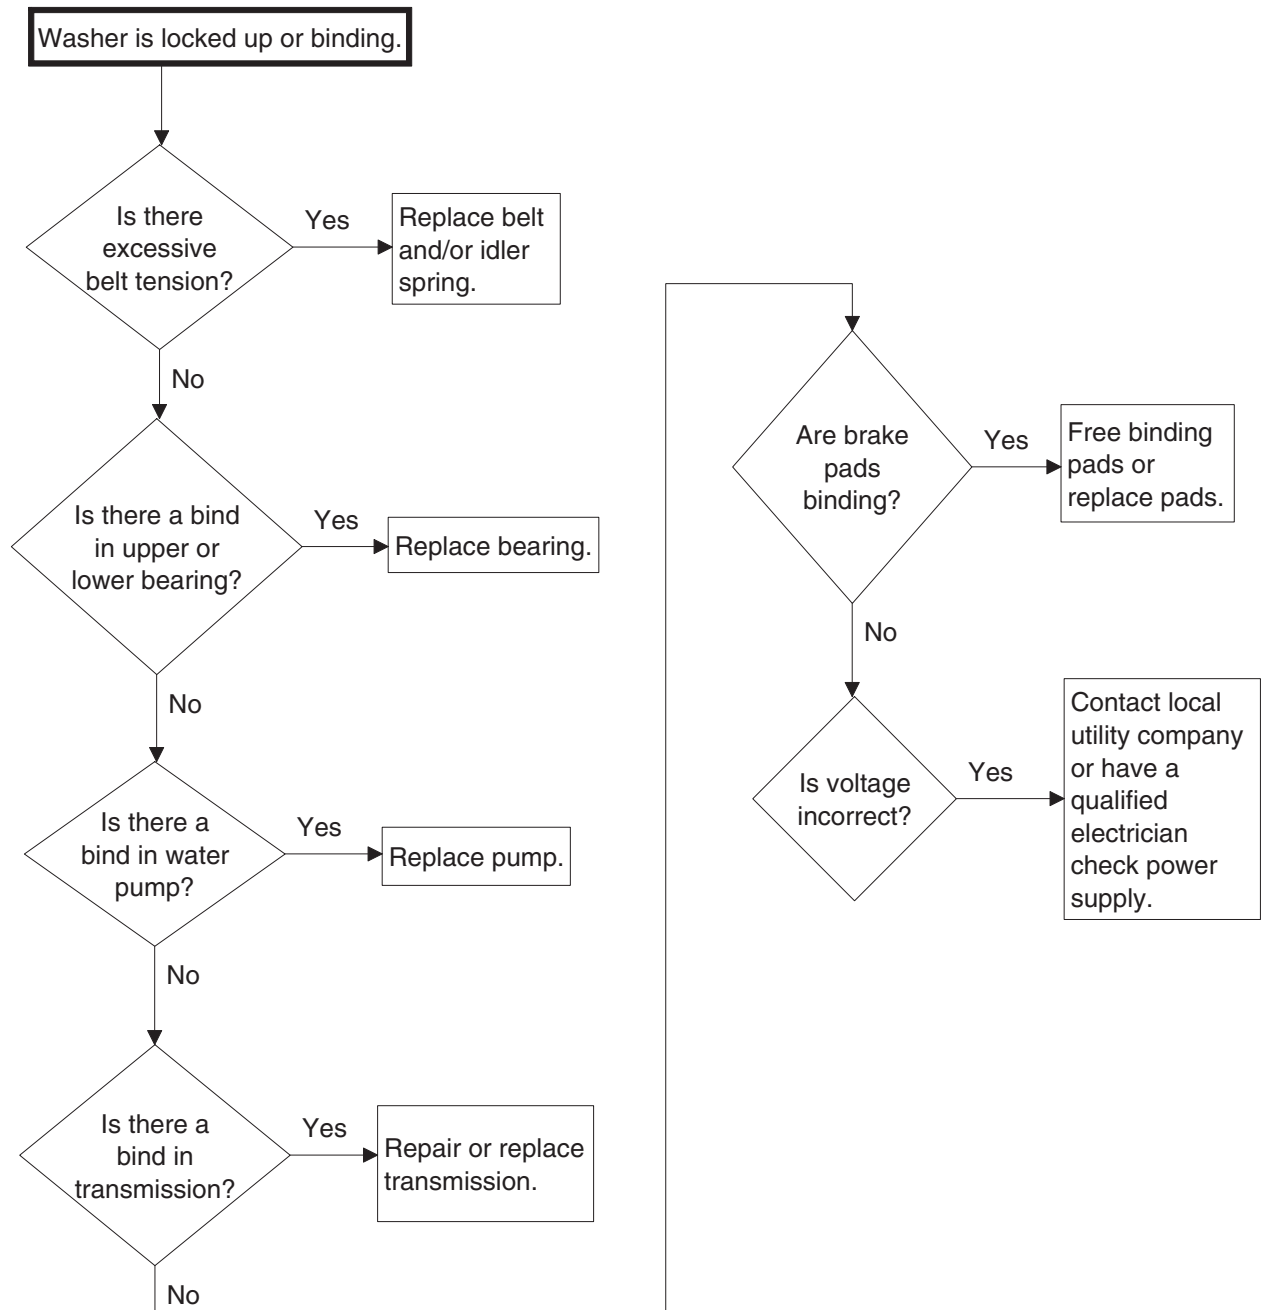

TLW338S




### 15. Outer Tub Does Not Empty

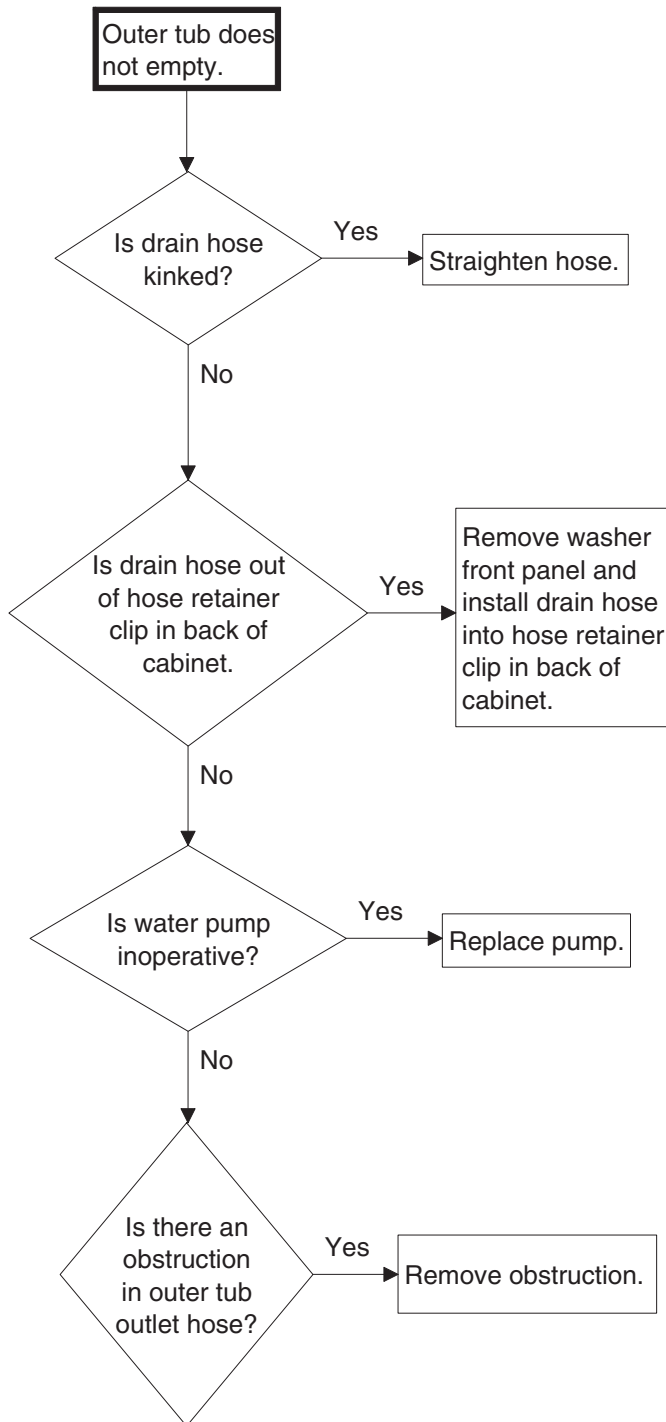


TLW339S

### 16. Excessive Vibration

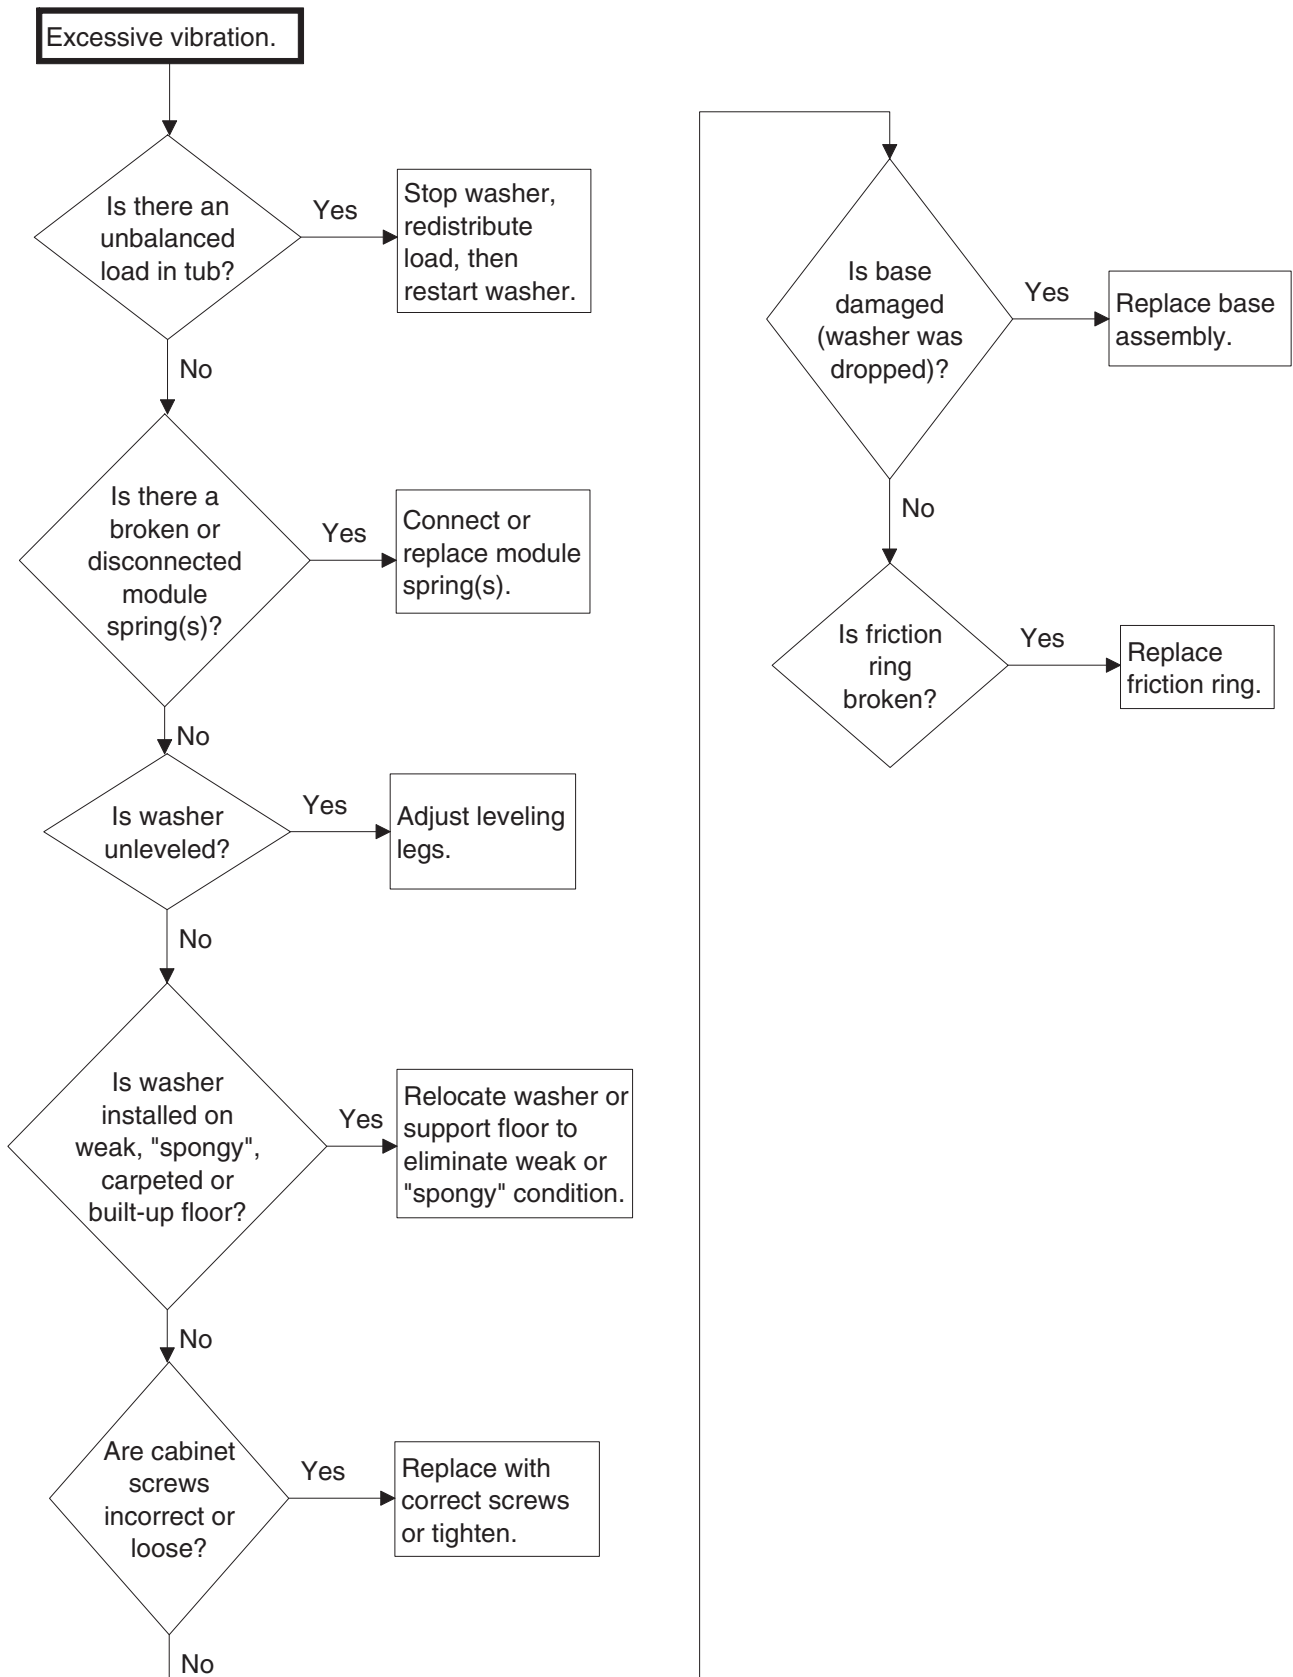

TLW340S

### 17. Water Leaking From Outer Tub

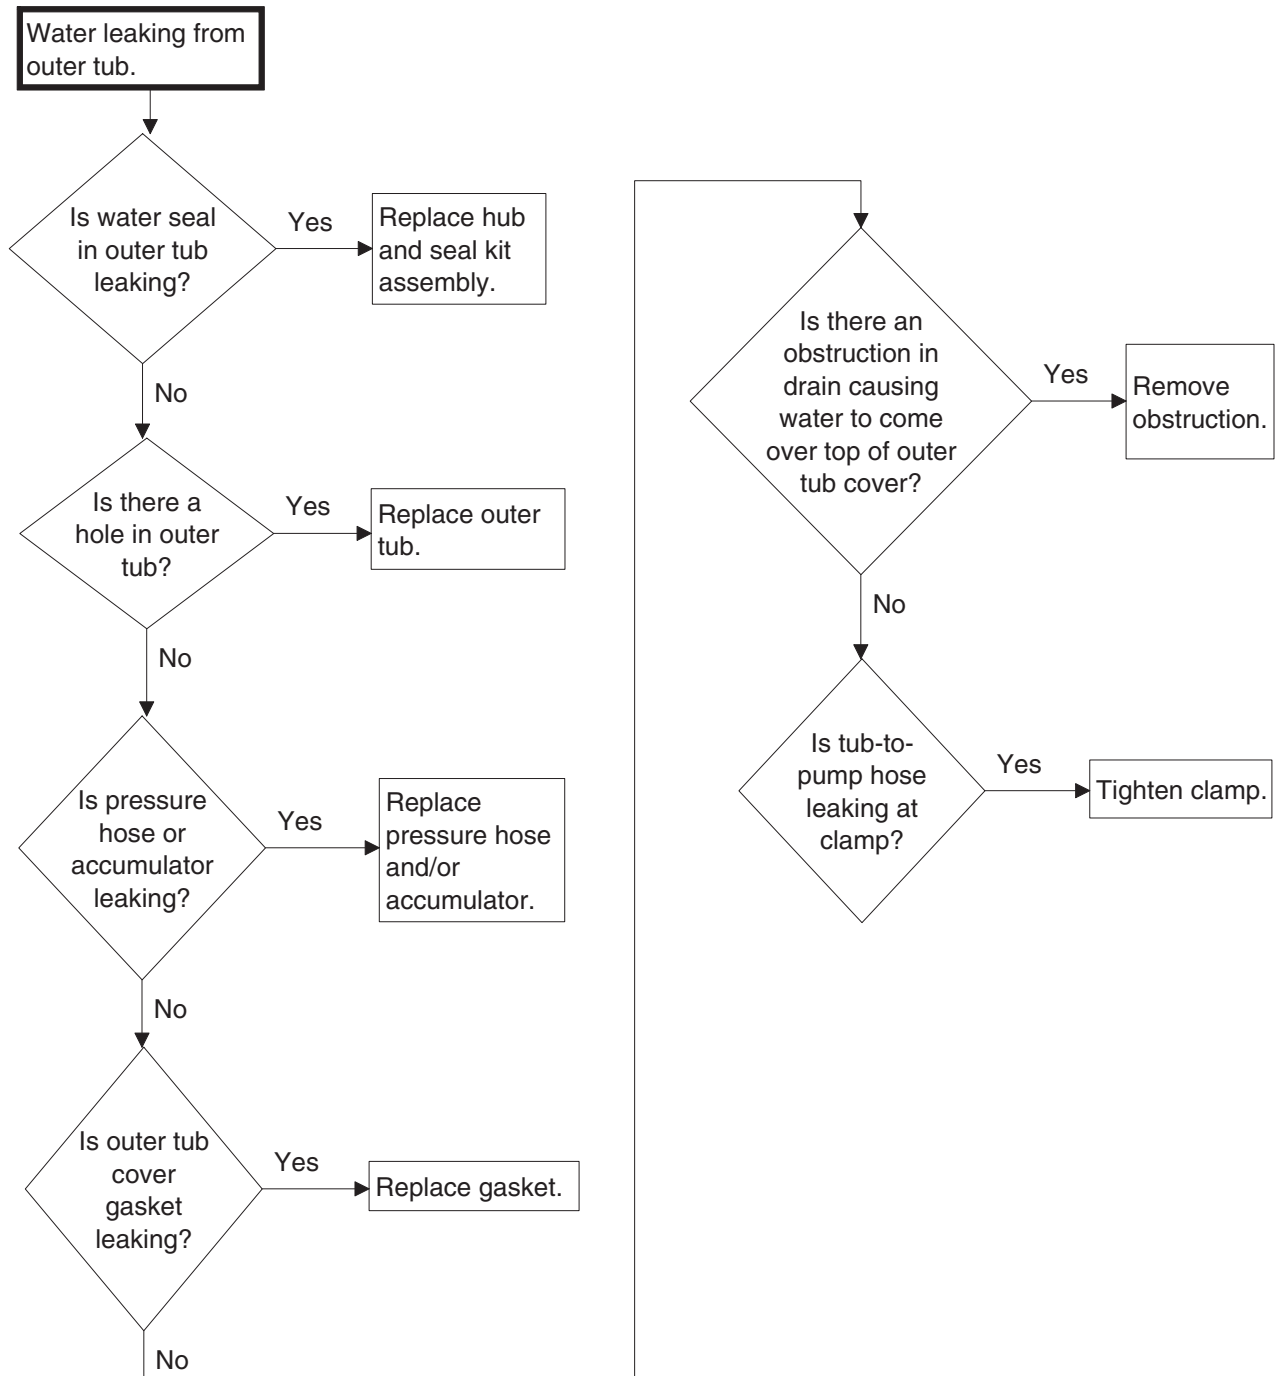

TLW341S

## General Troubleshooting

### 18. Troubleshooting Coin Drop

#### a. Non-Electronic Coin Drops:

When coin is placed into coin slot, the coin should roll down drop and be heard dropping into coin vault. If coin does not fall into coin vault or if coin drop sensor does not register that coin has been entered, follow troubleshooting instructions on the following page. Refer to *Figure 1* for path that coin follows when working properly.

**IMPORTANT:** Never use oil to correct coin drop problems. Oil residue will prevent coins from rolling properly.

**IMPORTANT:** Do not bend or damage mechanical parts within coin drop.


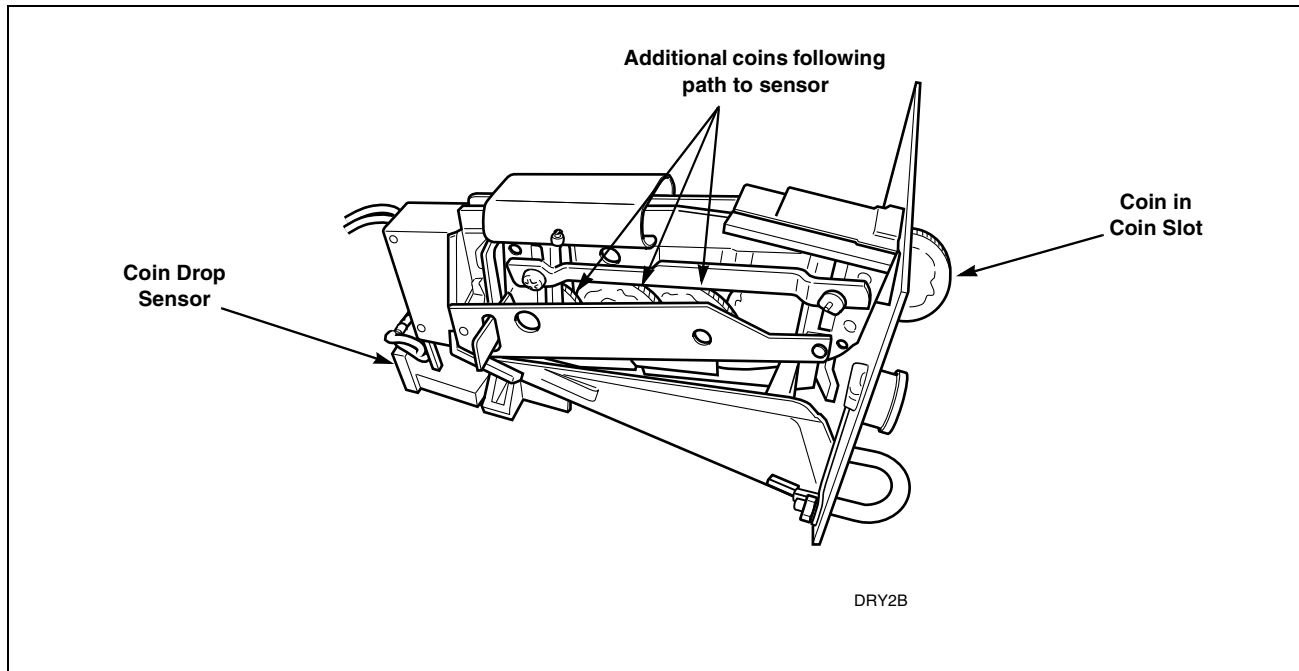


Figure 1

### Troubleshooting Coin Drop

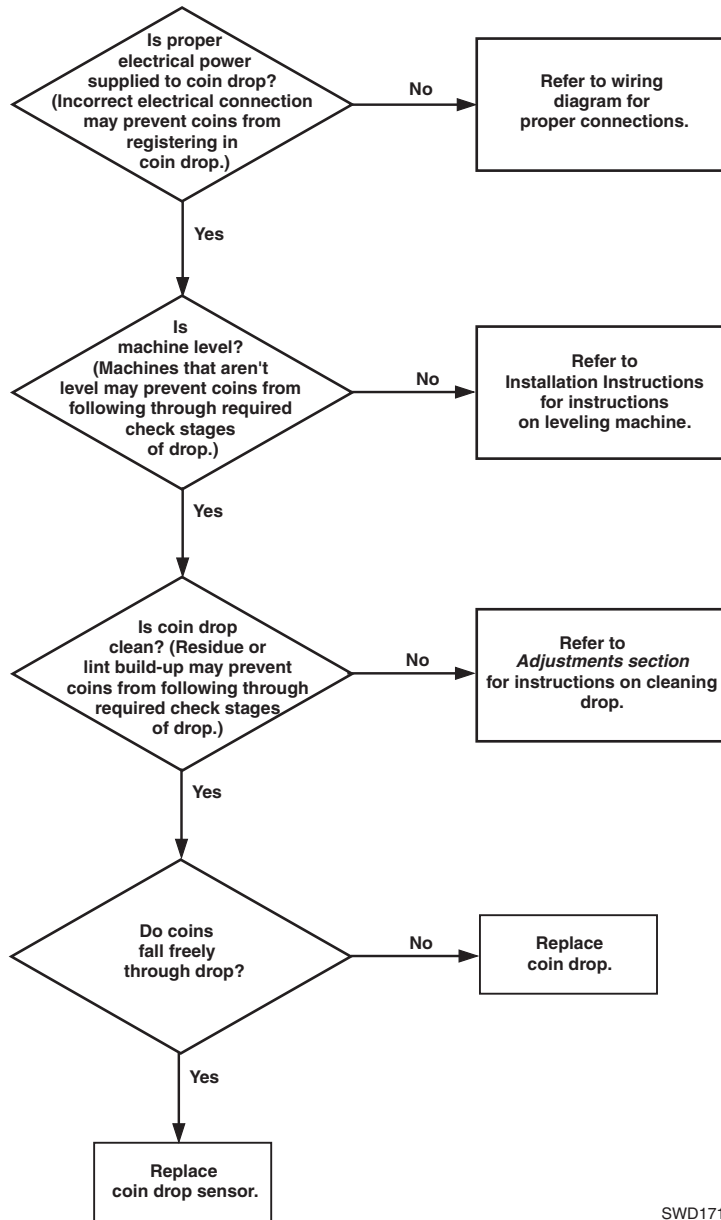

SWD1714S

## General Troubleshooting

### b. Electronic Coin Drops:

If coin drop is not accepting coins, perform the following:

- (1) Clean coin drop. Refer to *Paragraph 62*.
- (2) Test and replace tension spring using the following instructions.

## Remove Coin Drop From Machine

- (1) Disconnect electrical power to machine and drop.
- (2) Remove coin drop from machine.

## Test Tension Spring

- (1) Push coin return button to open and close coin drop cover to clear possible coin jams. Refer to *Figure 2*.

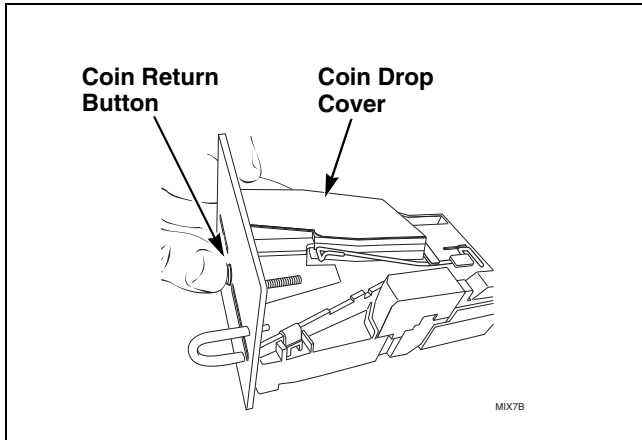


Figure 2

- (2) Manually hold down coin drop cover and insert coin. Refer to *Figure 3*.

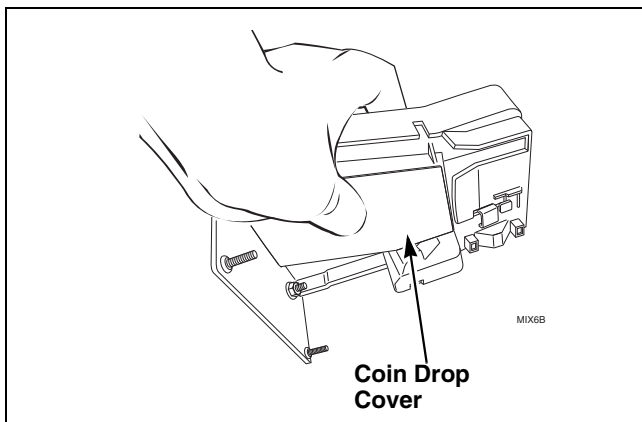


Figure 3

- (3) If coin drop now operates properly, replace tension spring using instructions on following pages.

## Replace Tension Spring

- (1) Move tension spring downward until cover catch is free. Refer to *Figure 4*.

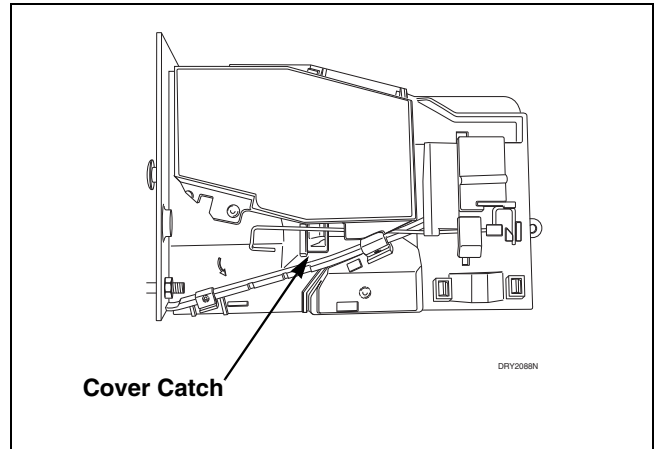


Figure 4

- (2) Open cover for coin drop.
- (3) Place a small flathead screwdriver under right side of tension spring and lift up. Refer to *Figure 5*.


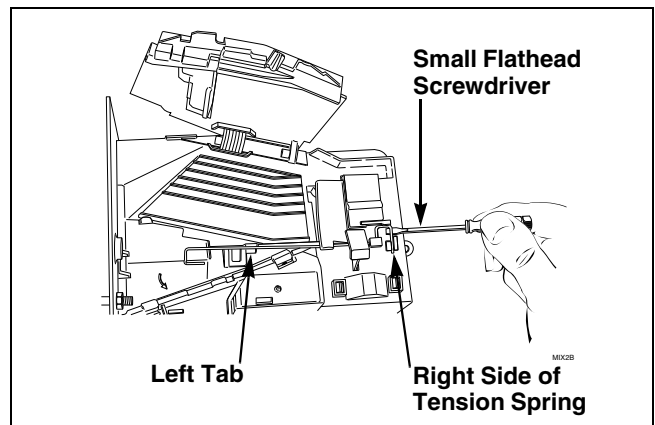


Figure 5


- (4) Use screwdriver to move spring approximately 3 mm to left.
- (5) Lift spring over left tab. Refer to *Figure 5*.

- (6) Rotate spring clockwise, 40 to 60 degrees, until it is free from right tabs. Refer to *Figure 6*.

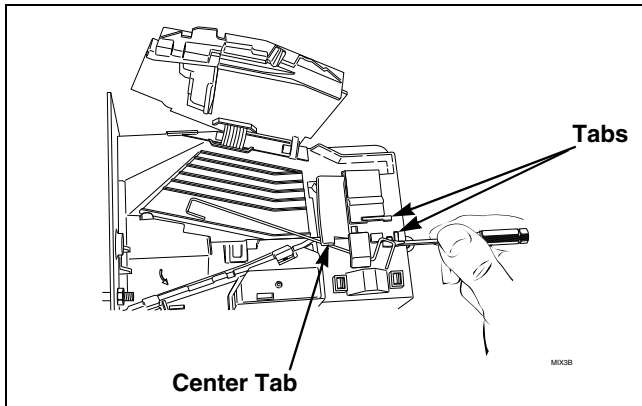


**Figure 6**

- (7) Use screwdriver to remove spring from center tab. Refer to *Figure 6*.
- (8) Lift spring, with attached clip, off drop.
- (9) Remove clip from spring. Refer to *Figure 7*.

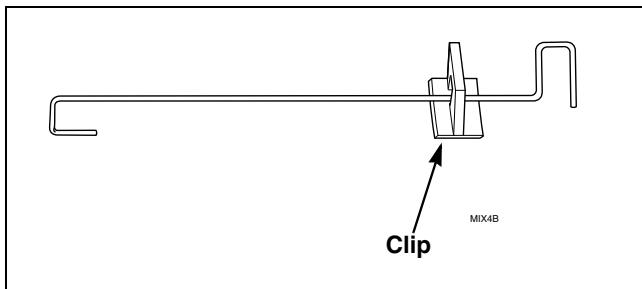


**Figure 7**

- (10) Attach clip to new tension spring, Part No. 209/00598/02.
- (11) Place clip, installed on spring, in slot on coin drop. Refer to *Figure 8*.

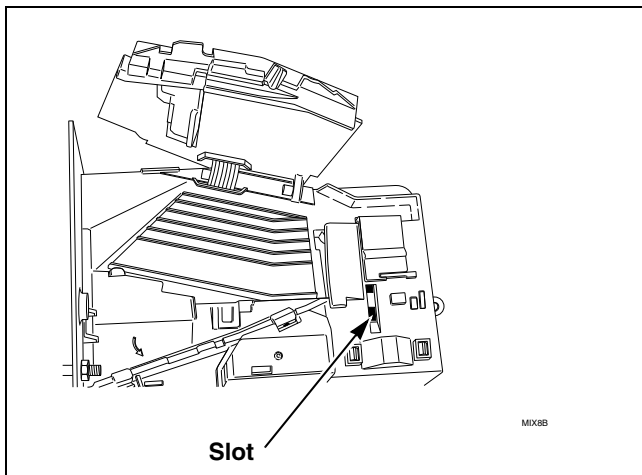

**Figure 8**

- (12) Use a small flathead screwdriver to push spring under center tab. Refer to *Figure 9*.

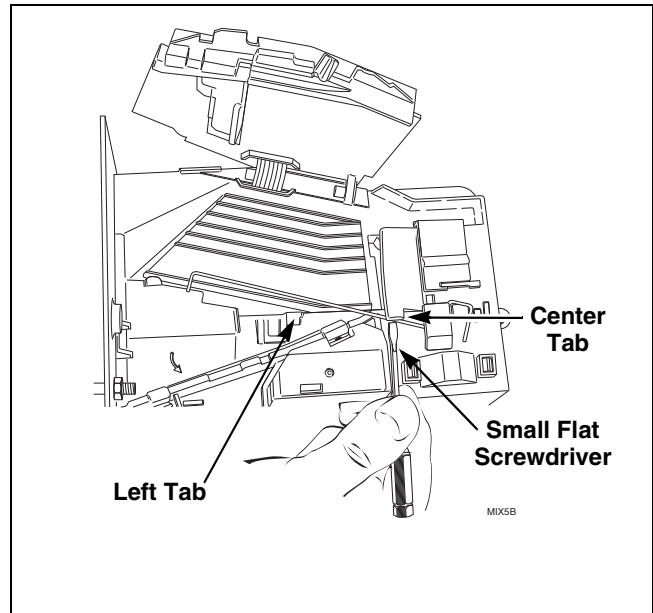

**Figure 9**

- (13) Lift spring gently to place in position under left tab.
- (14) Push spring to right until it snaps into position. Refer to *Figure 5*.
- (15) Close coin drop cover.
- (16) Move tension spring over cover catch. Refer to *Figure 4*.

**Reinstall Coin Drop Into Machine**

- (1) Reinstall coin drop into machine.
- (2) Reconnect electrical power to machine and drop.
- (3) Add a coin to drop to verify that coin drop is operating properly and that electrical connection is working properly.





# Troubleshooting

## Coin Slide Operated and Non-Metered Models with the Number “8” or “9” in the 4th Character of the Model Number



### WARNING

To reduce the risk of electric shock, fire, explosion, serious injury or death:

- Disconnect electric power to the washer before servicing.
- Never start the washer with any guards/panels removed.
- Whenever ground wires are removed during servicing, these ground wires must be reconnected to ensure that the washer is properly grounded.

W003

## 19. Error Mode

In Error Mode, the *IN USE* LED flashes to display fill and drain errors (refer to paragraphs below). Error Mode can only be exited by powering down washer.


### *Fill Error*

A Fill Error will occur if the tub does not fill within 62 minutes of the start of the cycle. A Fill Error is indicated by the control repeatedly flashing the *IN USE* LED twice separated by a one and a half second pause until the control is powered down. If Error Mode is turned off, the fill error will not occur and the control will continue to wait for the fill level to be reached.

### *Drain Error*


A Drain Error will occur if the tub is not empty after a spin cycle. A Drain Error is indicated by the control repeatedly flashing the *IN USE* LED three times separated by a one and a half second pause until the control is powered down. If Error Mode is turned off, the drain error will not occur and the machine cycle will advance to the next cycle step as though the water had been pumped out.

## 20. Coin Slide Can Not Fully Insert

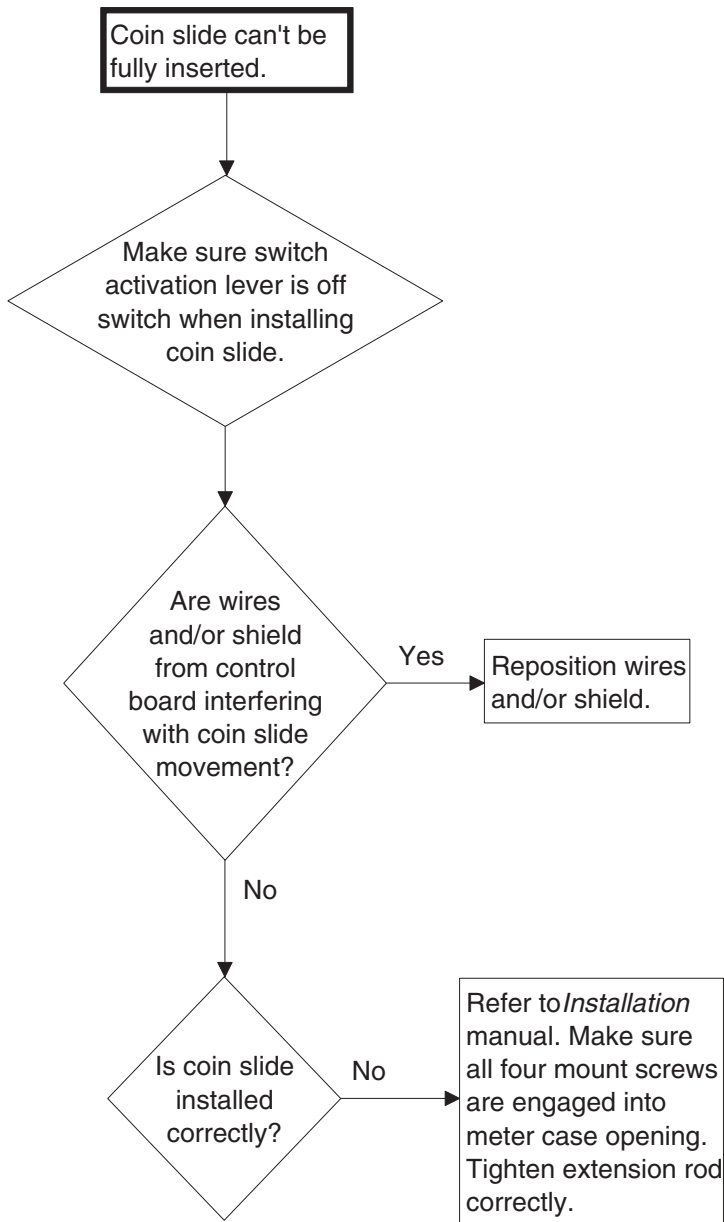


TLW1836B

## 21. Coin Slide Fully Inserts, Switch Does Not Activate

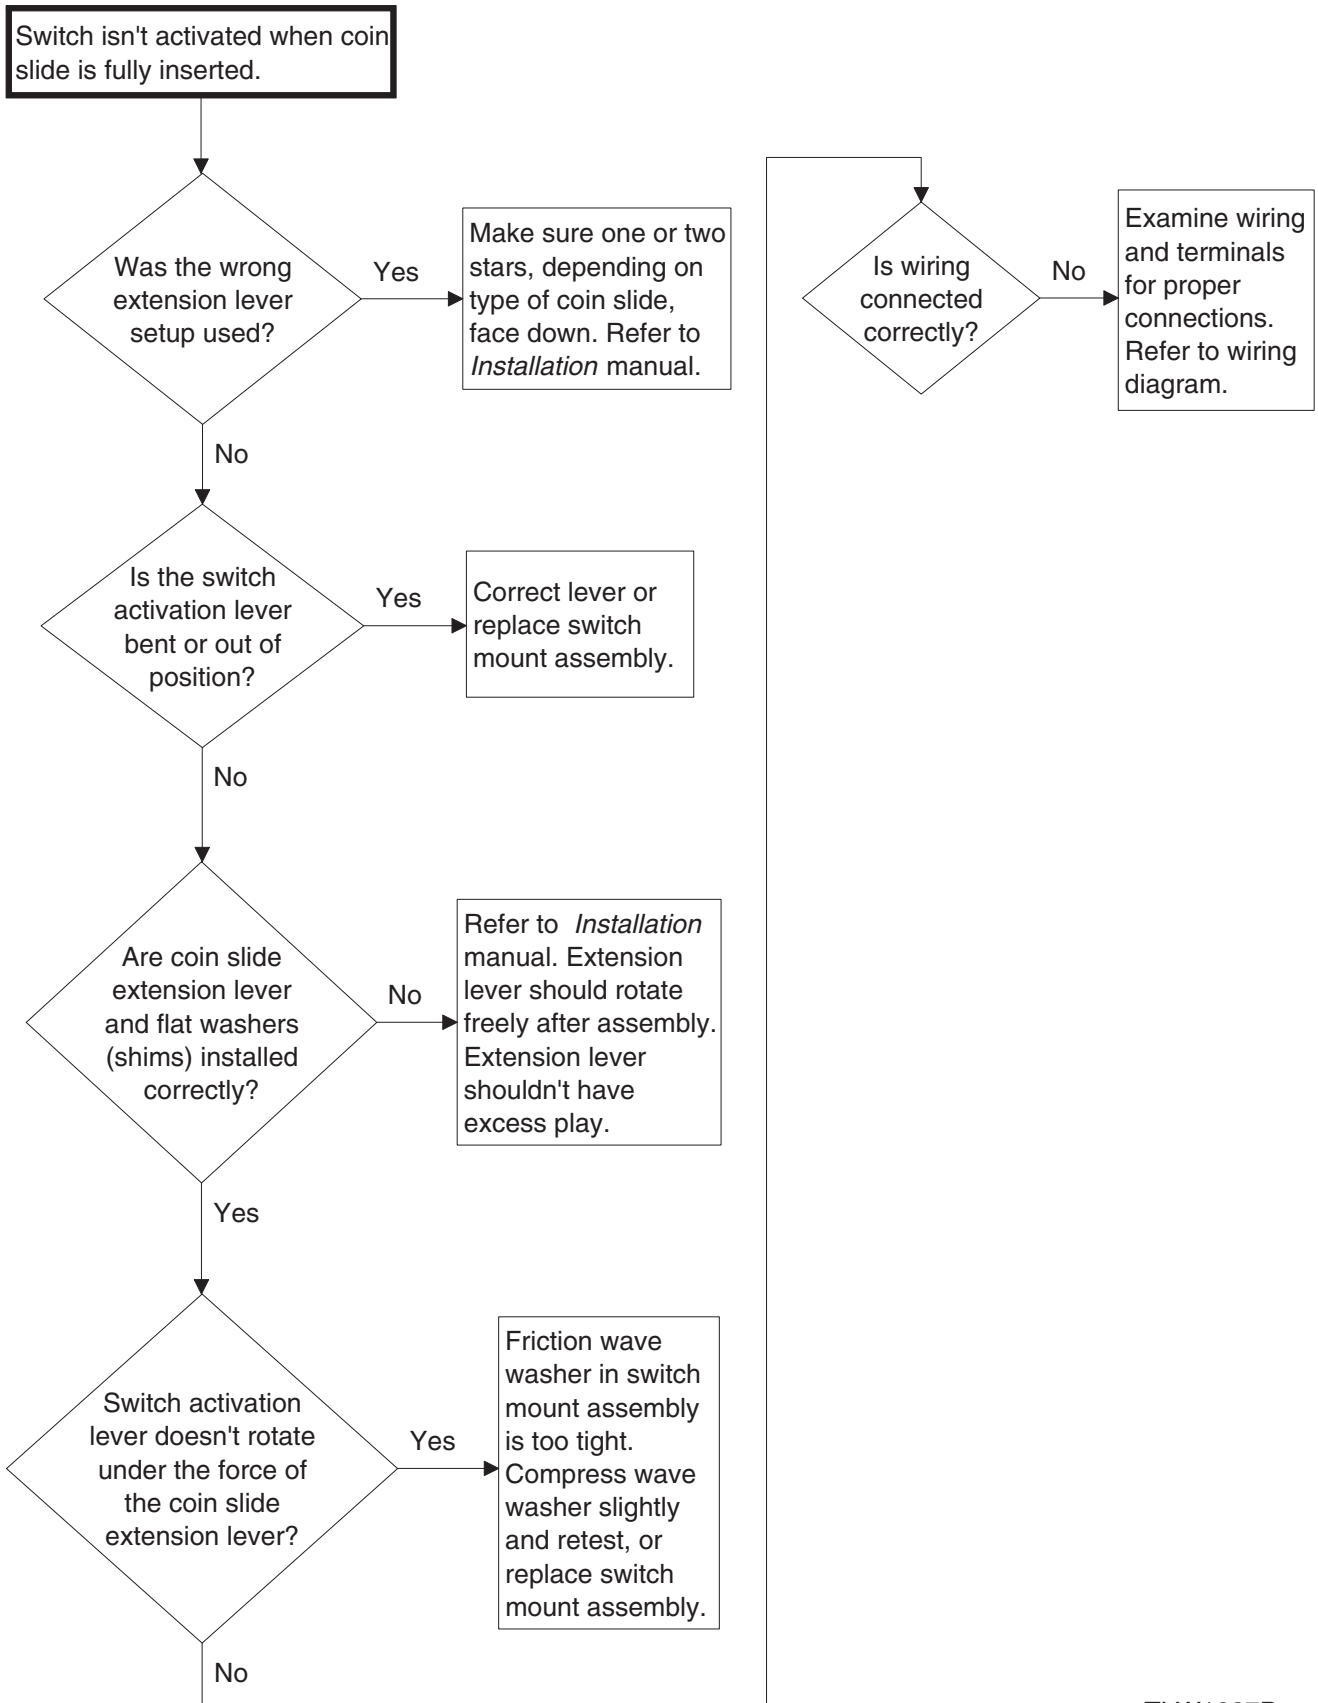


TLW1837B

## 22. Switch Is Activated Too Soon

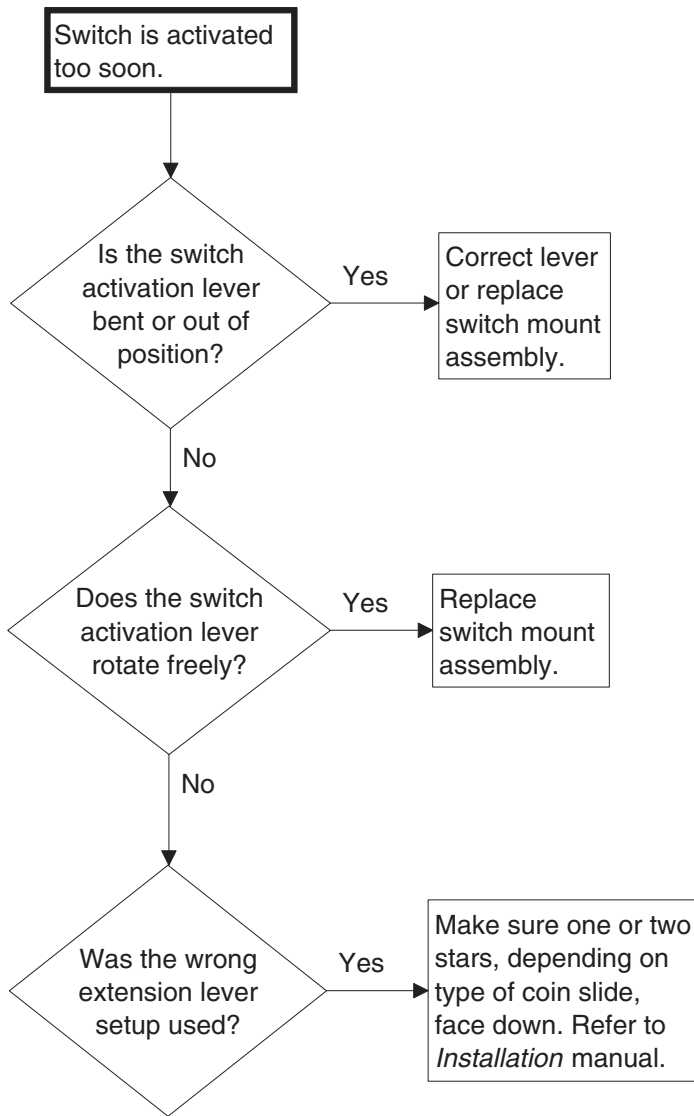


TLW1838B

### 23. Coin Slide Does Not Return Freely

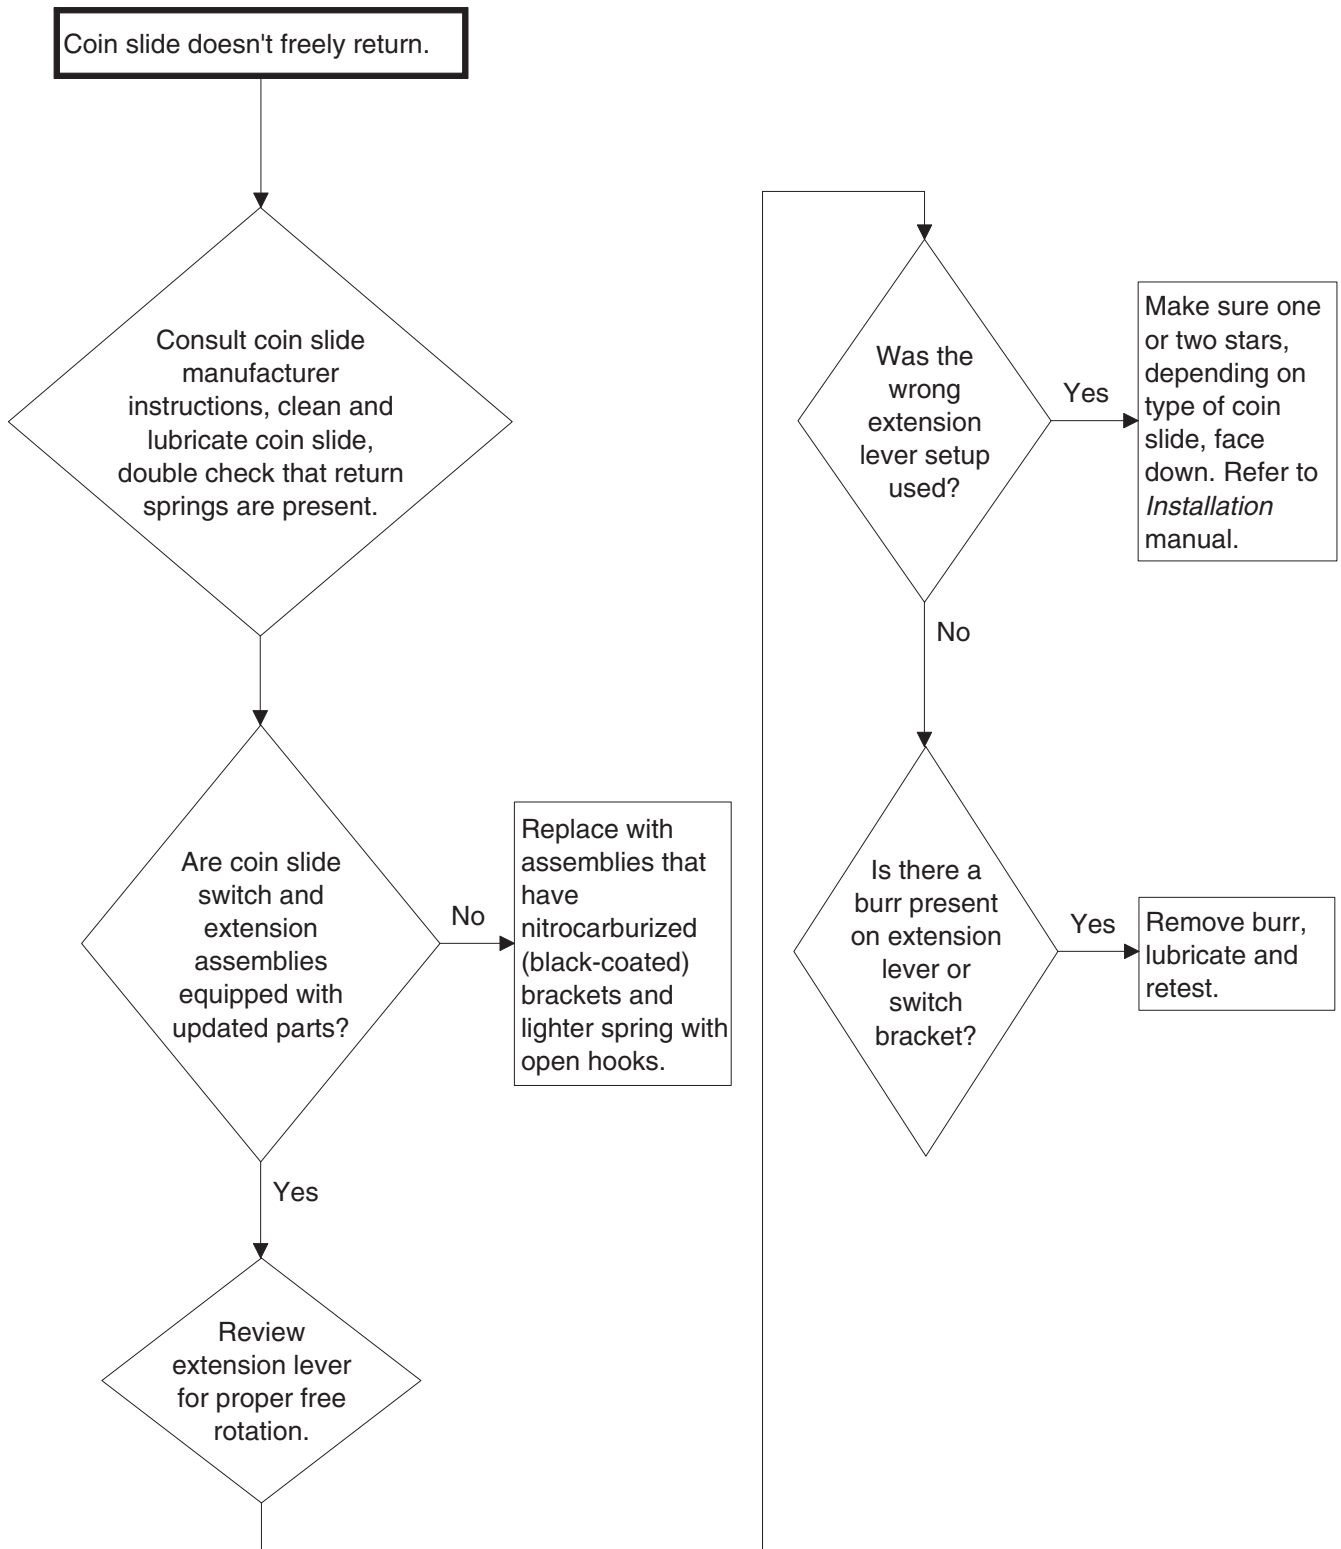


## 24. No Cycle Start When the Coin Slide is Activated

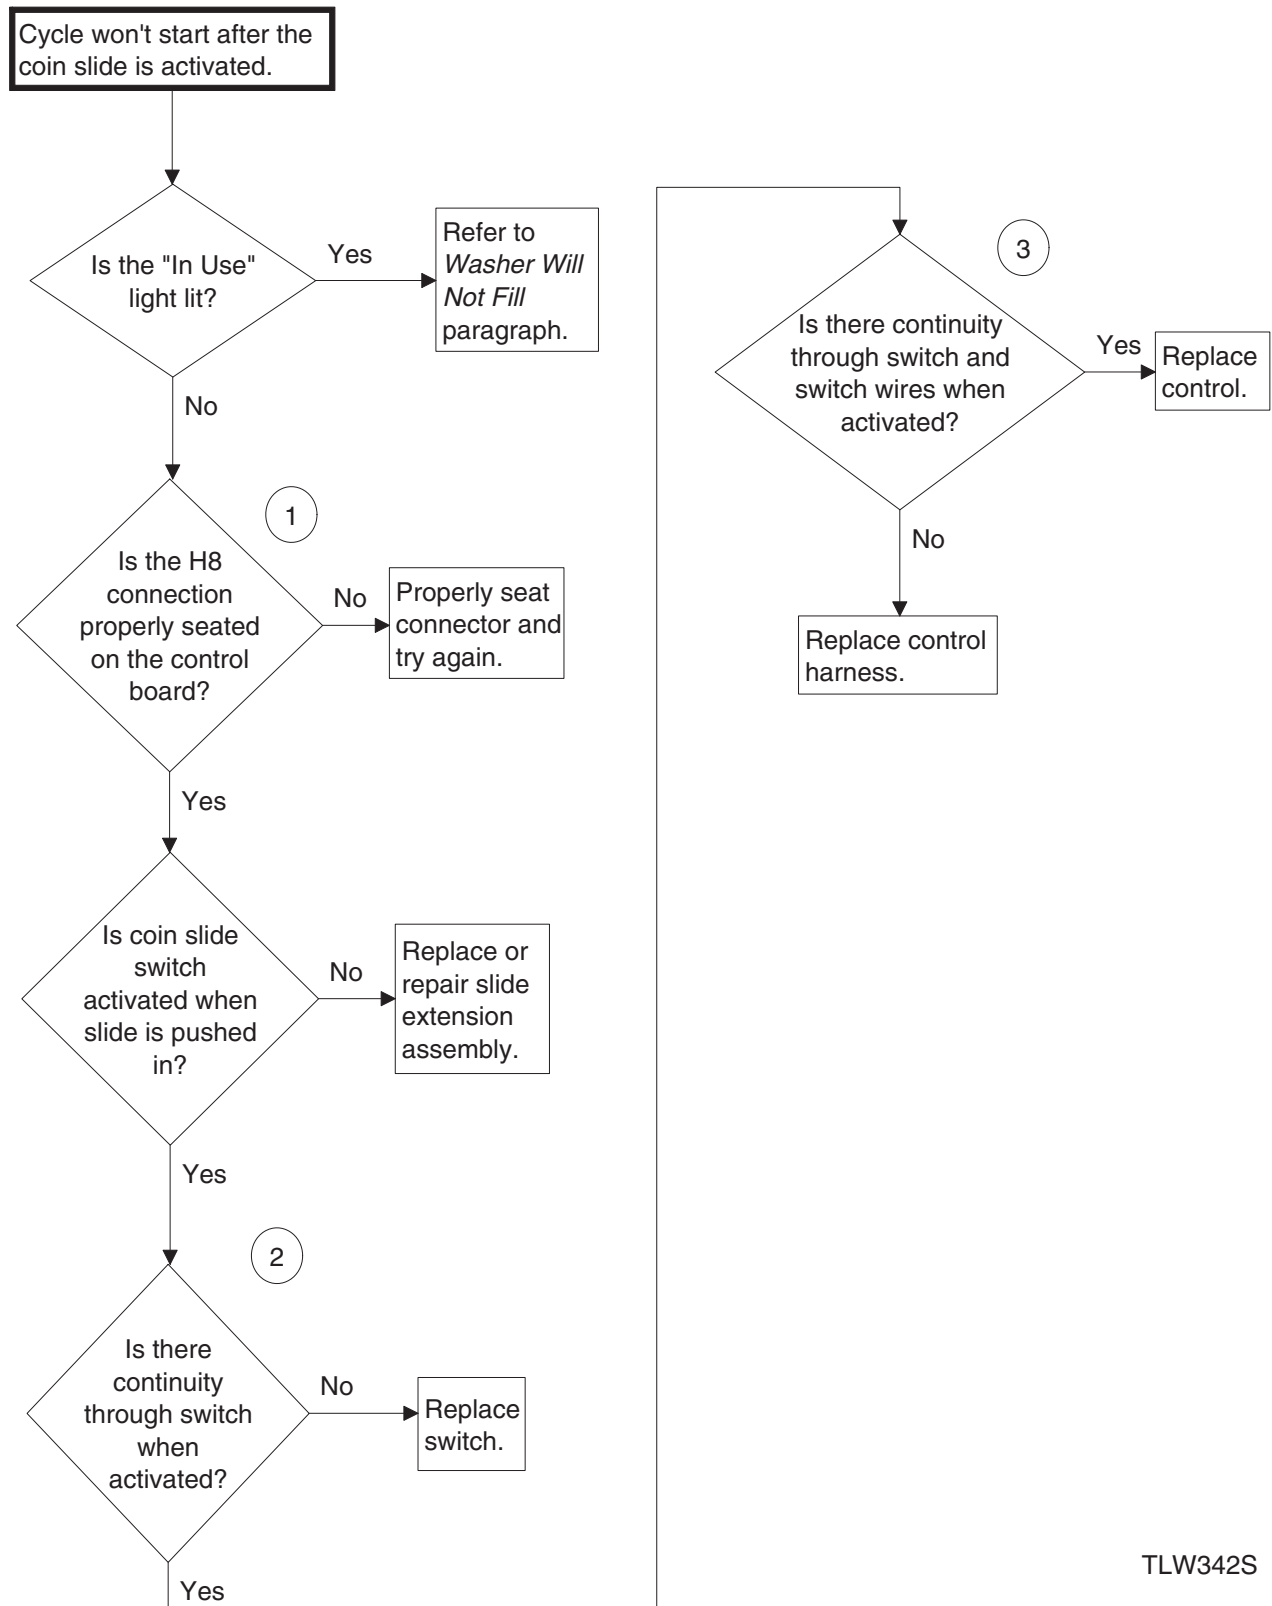


TLW342S

# No Cycle Start When the Coin Slide is Activated

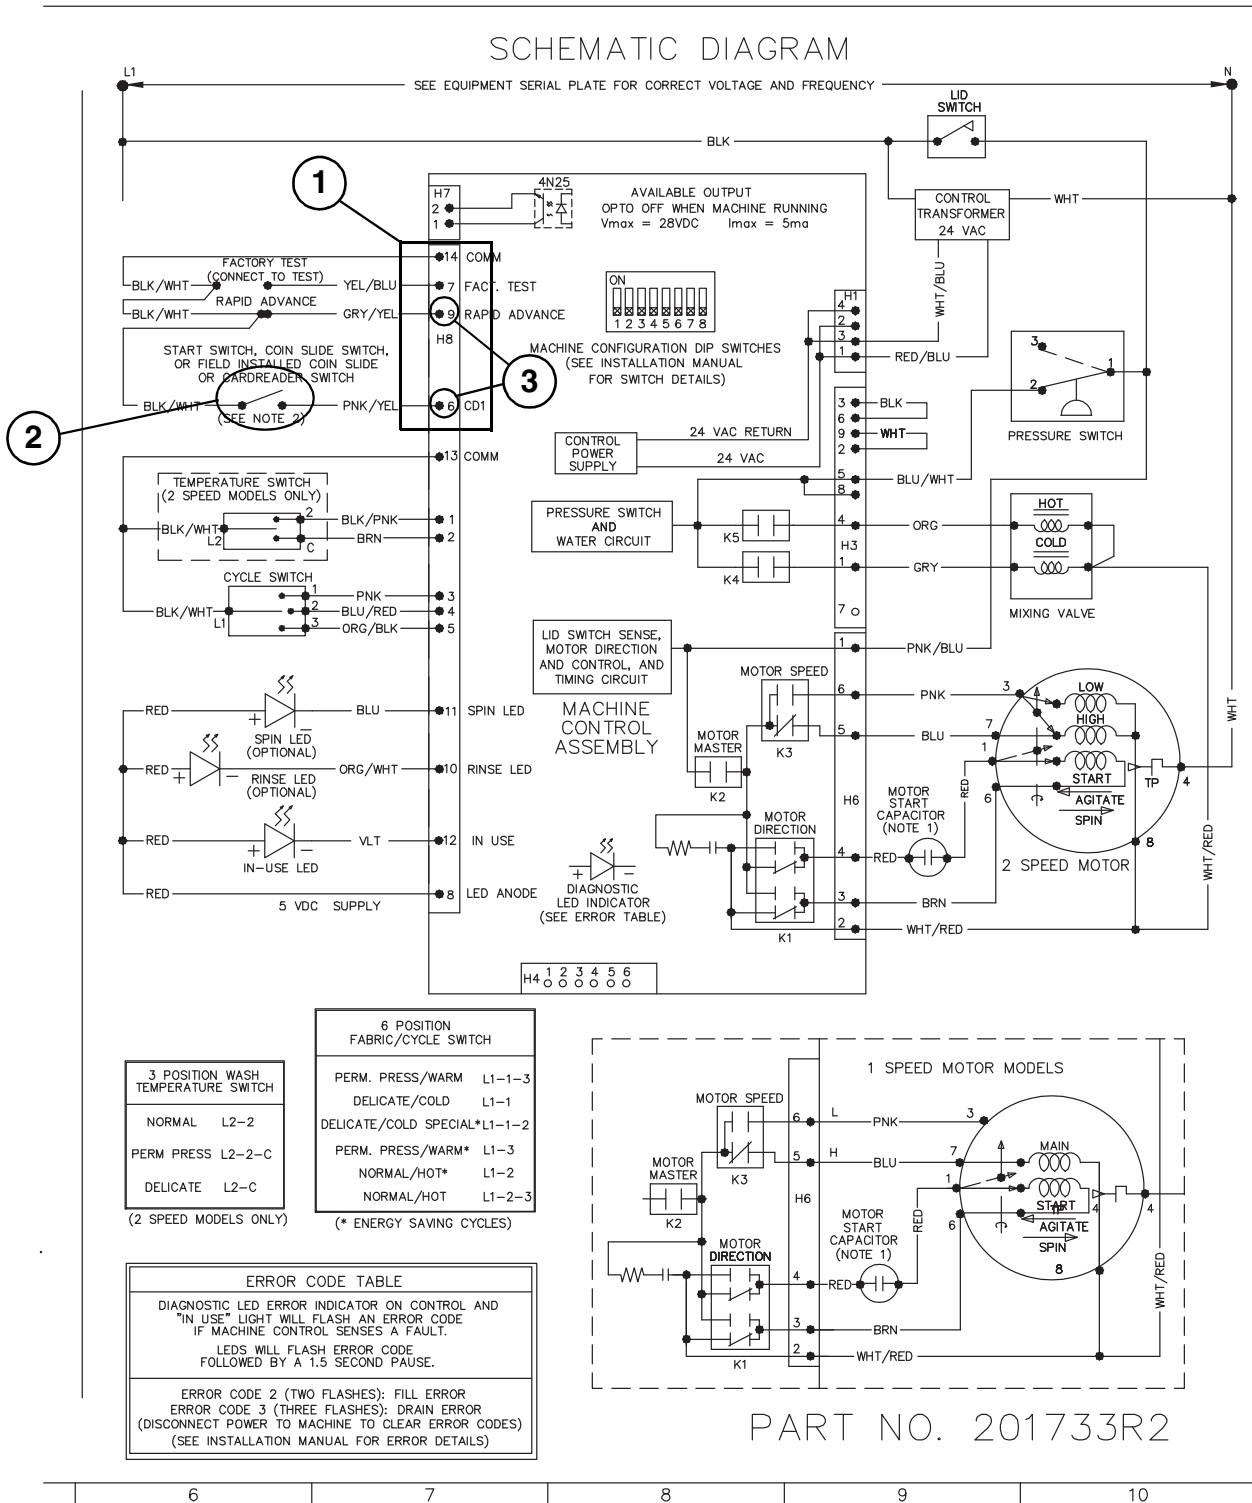

## 25. Washer Will Not Fill (Pressure Switch Diagnostic)


Note: Assuming water is turned on.

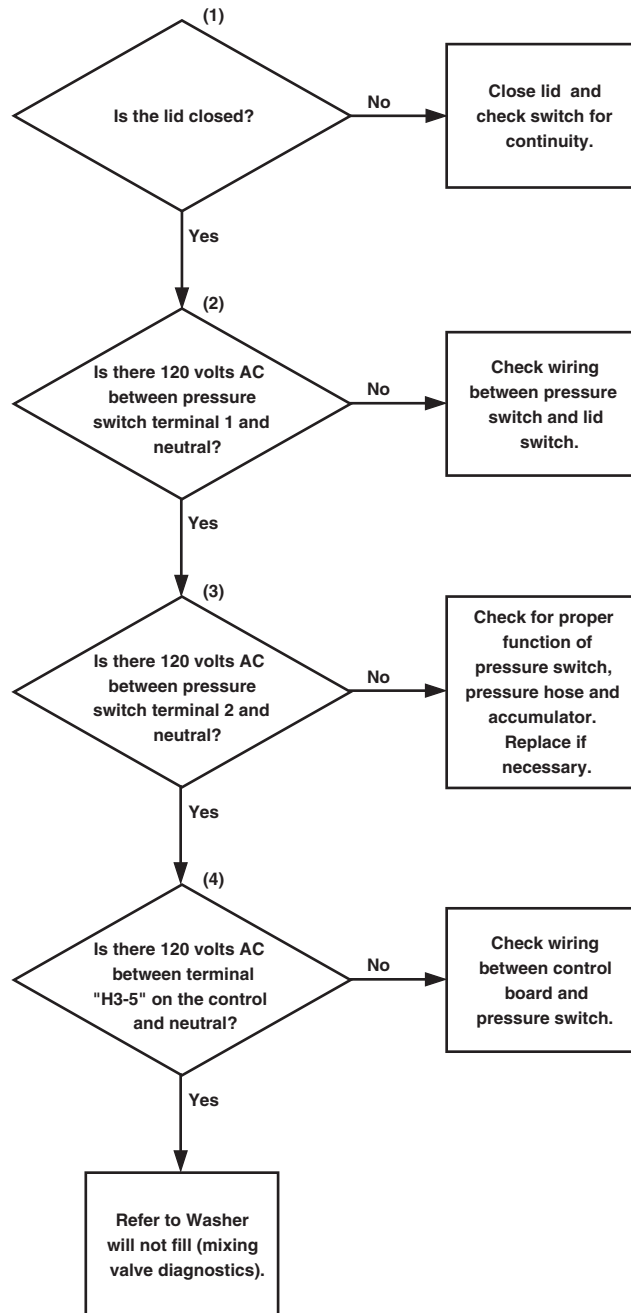

TLW343S




# Washer Will Not Fill (Pressure Switch Diagnostic)

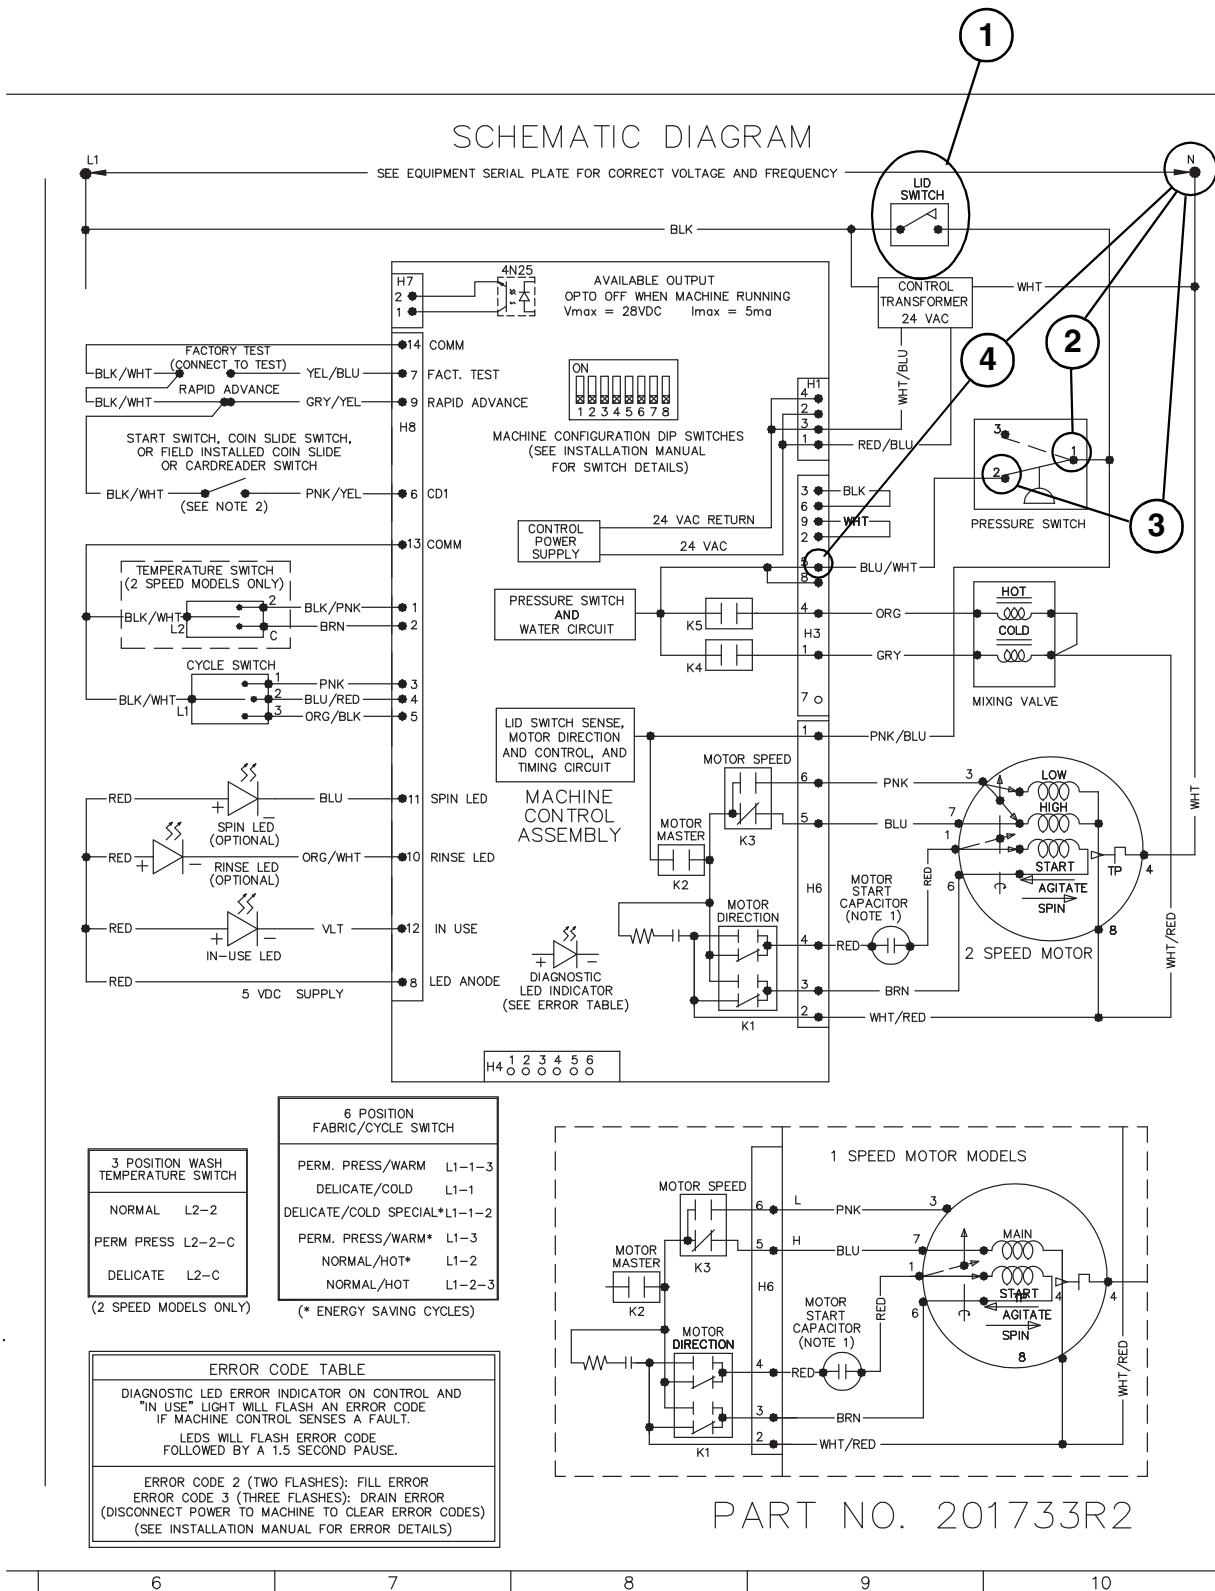


## 26. Washer Will Not Fill (Mixing Valve Diagnostic)

Note: Assuming No Fill (pressure switch diagnostics) checks out okay, and cycle is started and "In Use" light is lit.

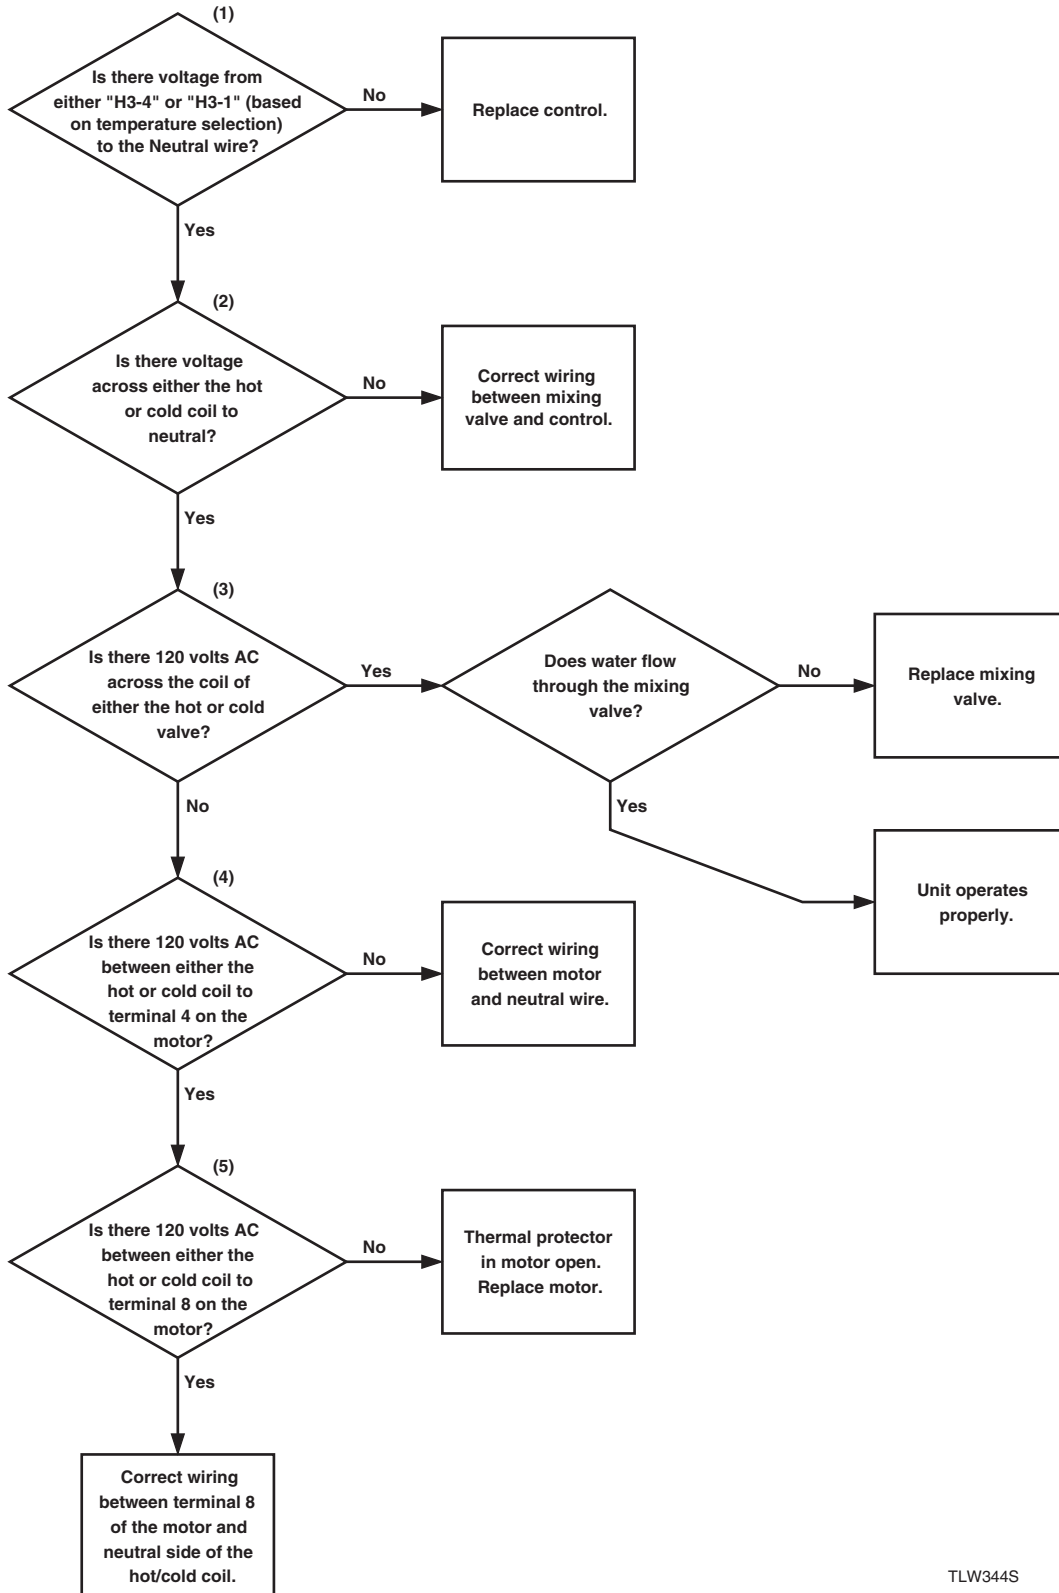


TLW344S

## Washer Will Not Fill (Mixing Valve Diagnostic)

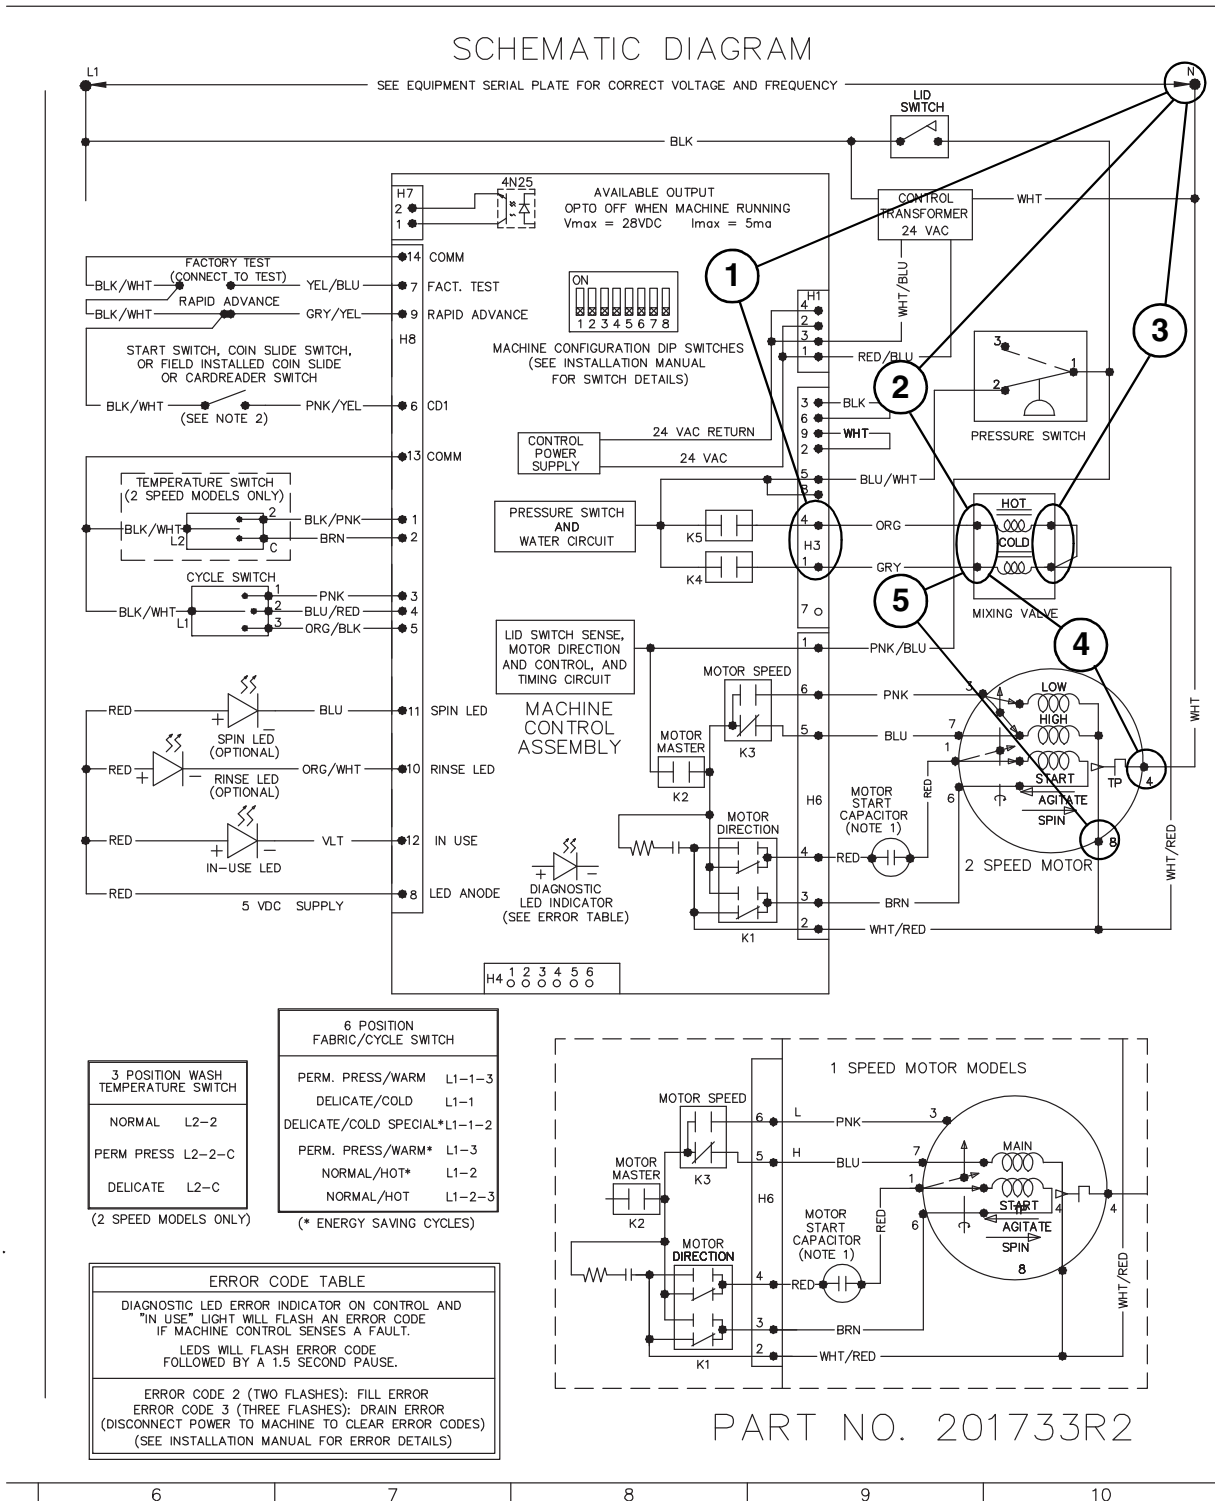


## 27. Washer Over Fills (Pressure Switch Open)

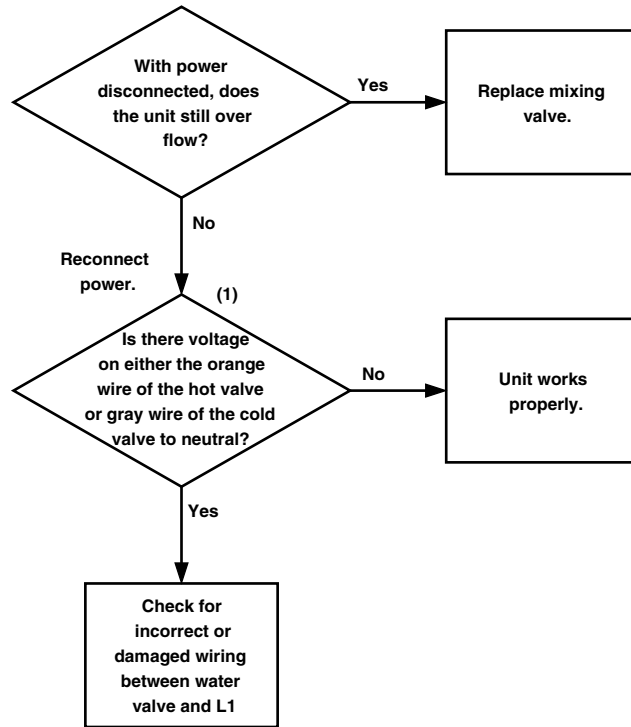


TLW287S

# Washer Over Fills (Pressure Switch Open)

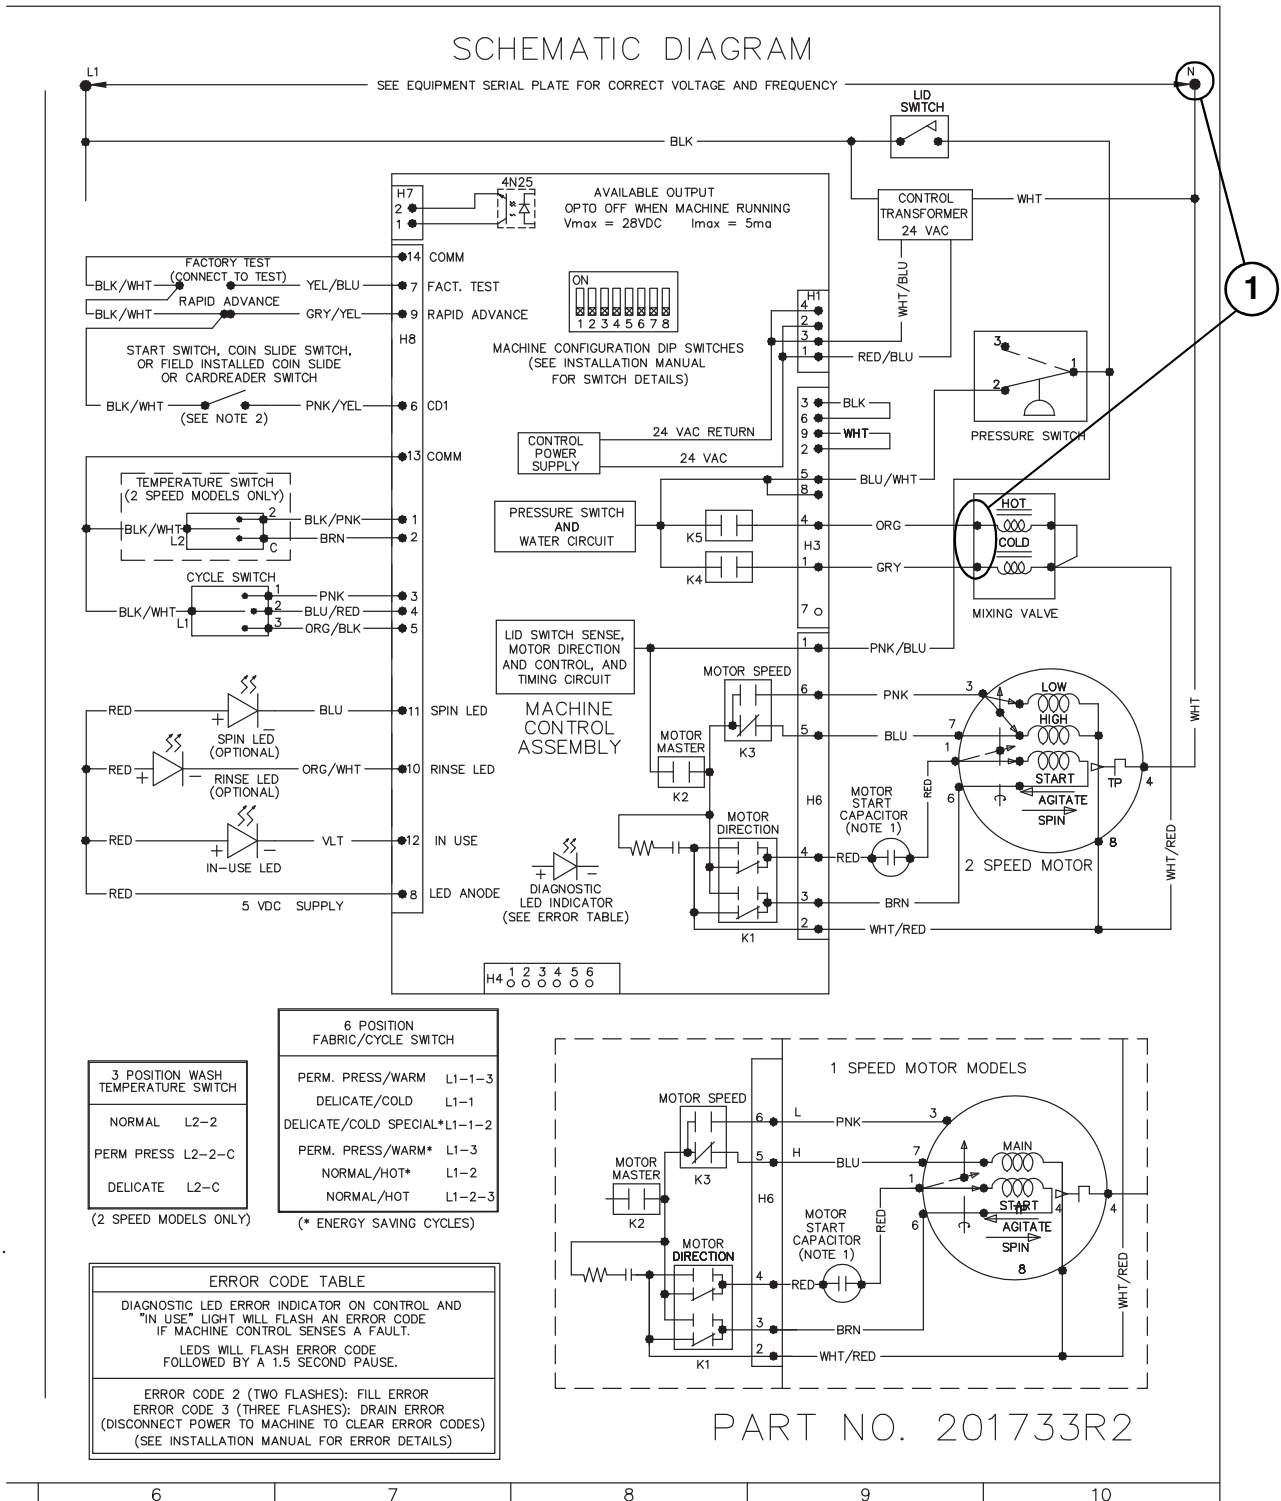


## 28. No Agitation – Low and High Speed

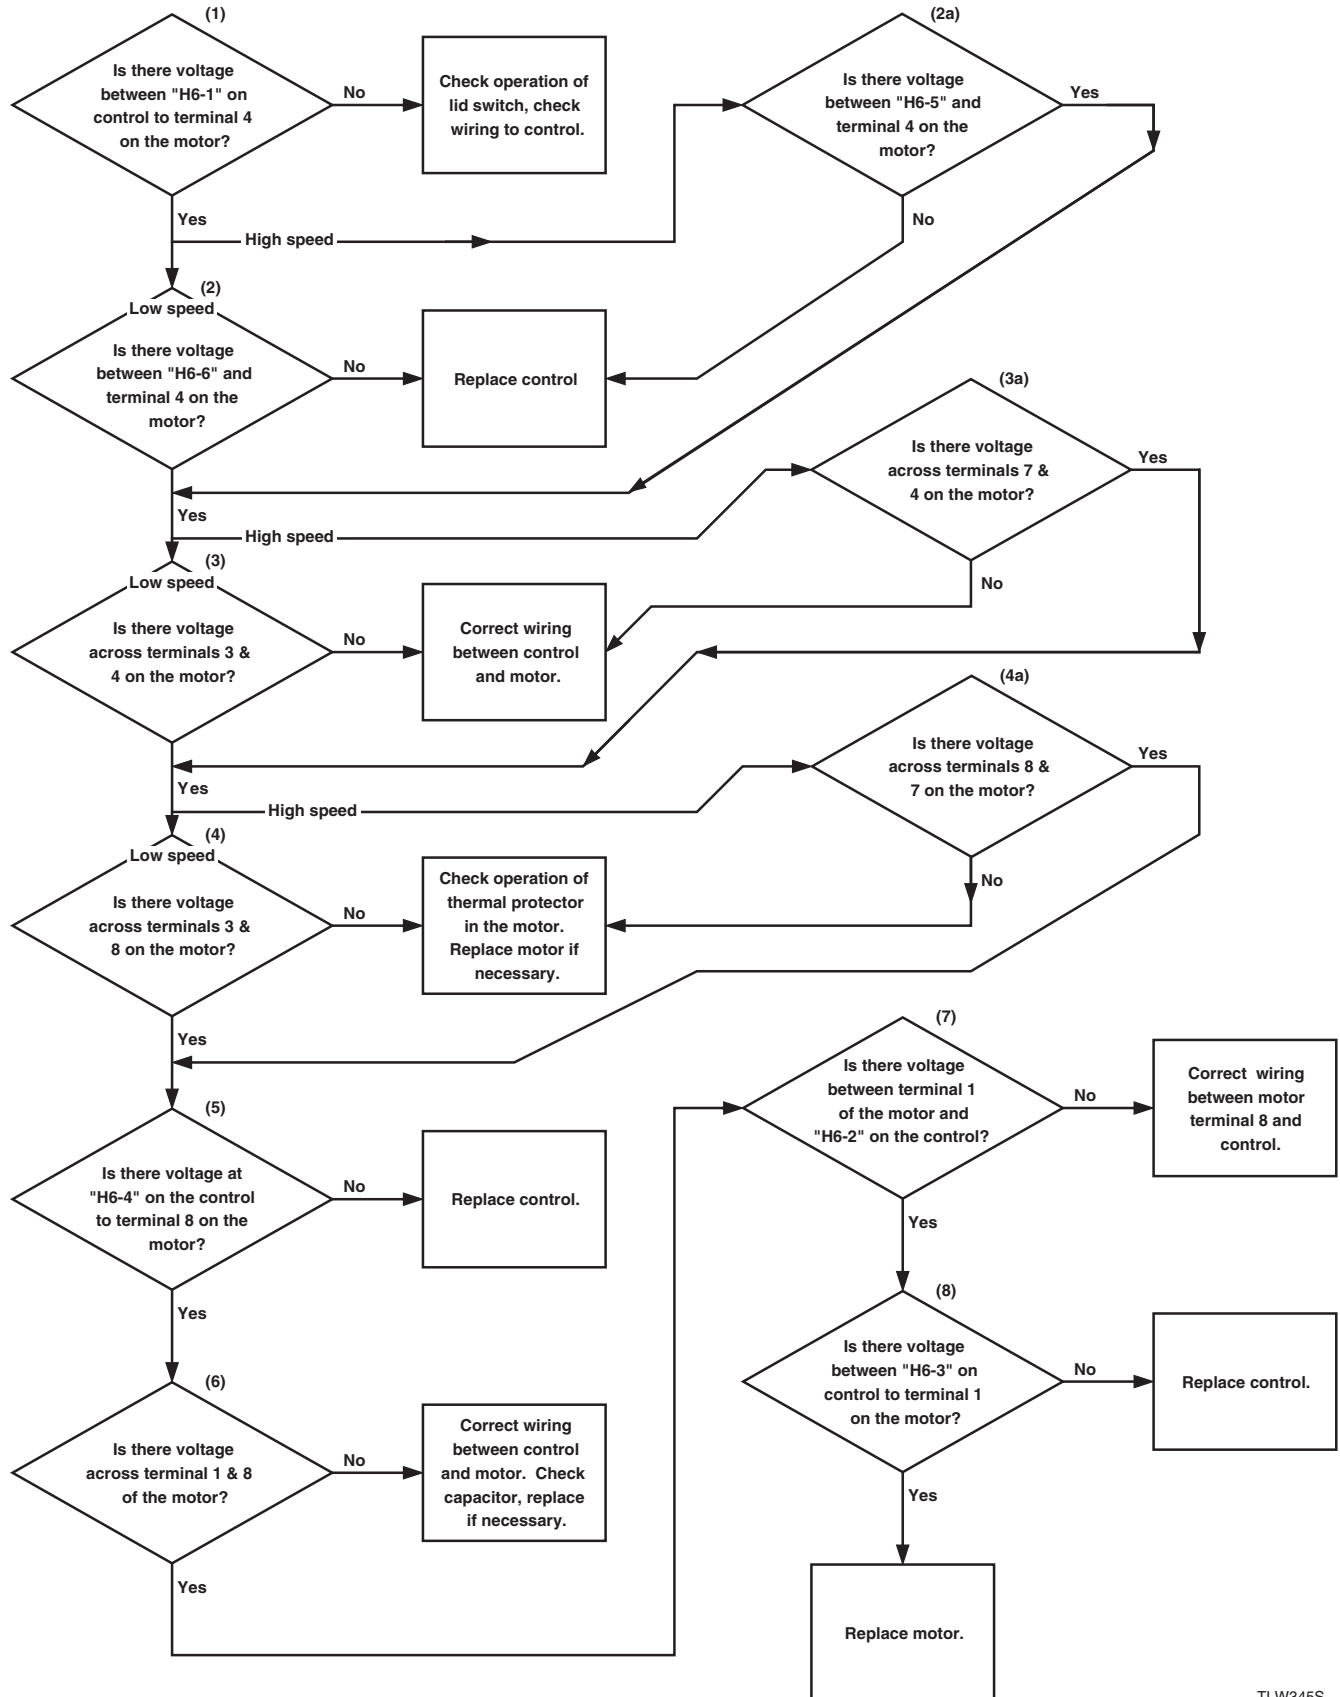


TLW345S

## No Agitation – Low and High Speed

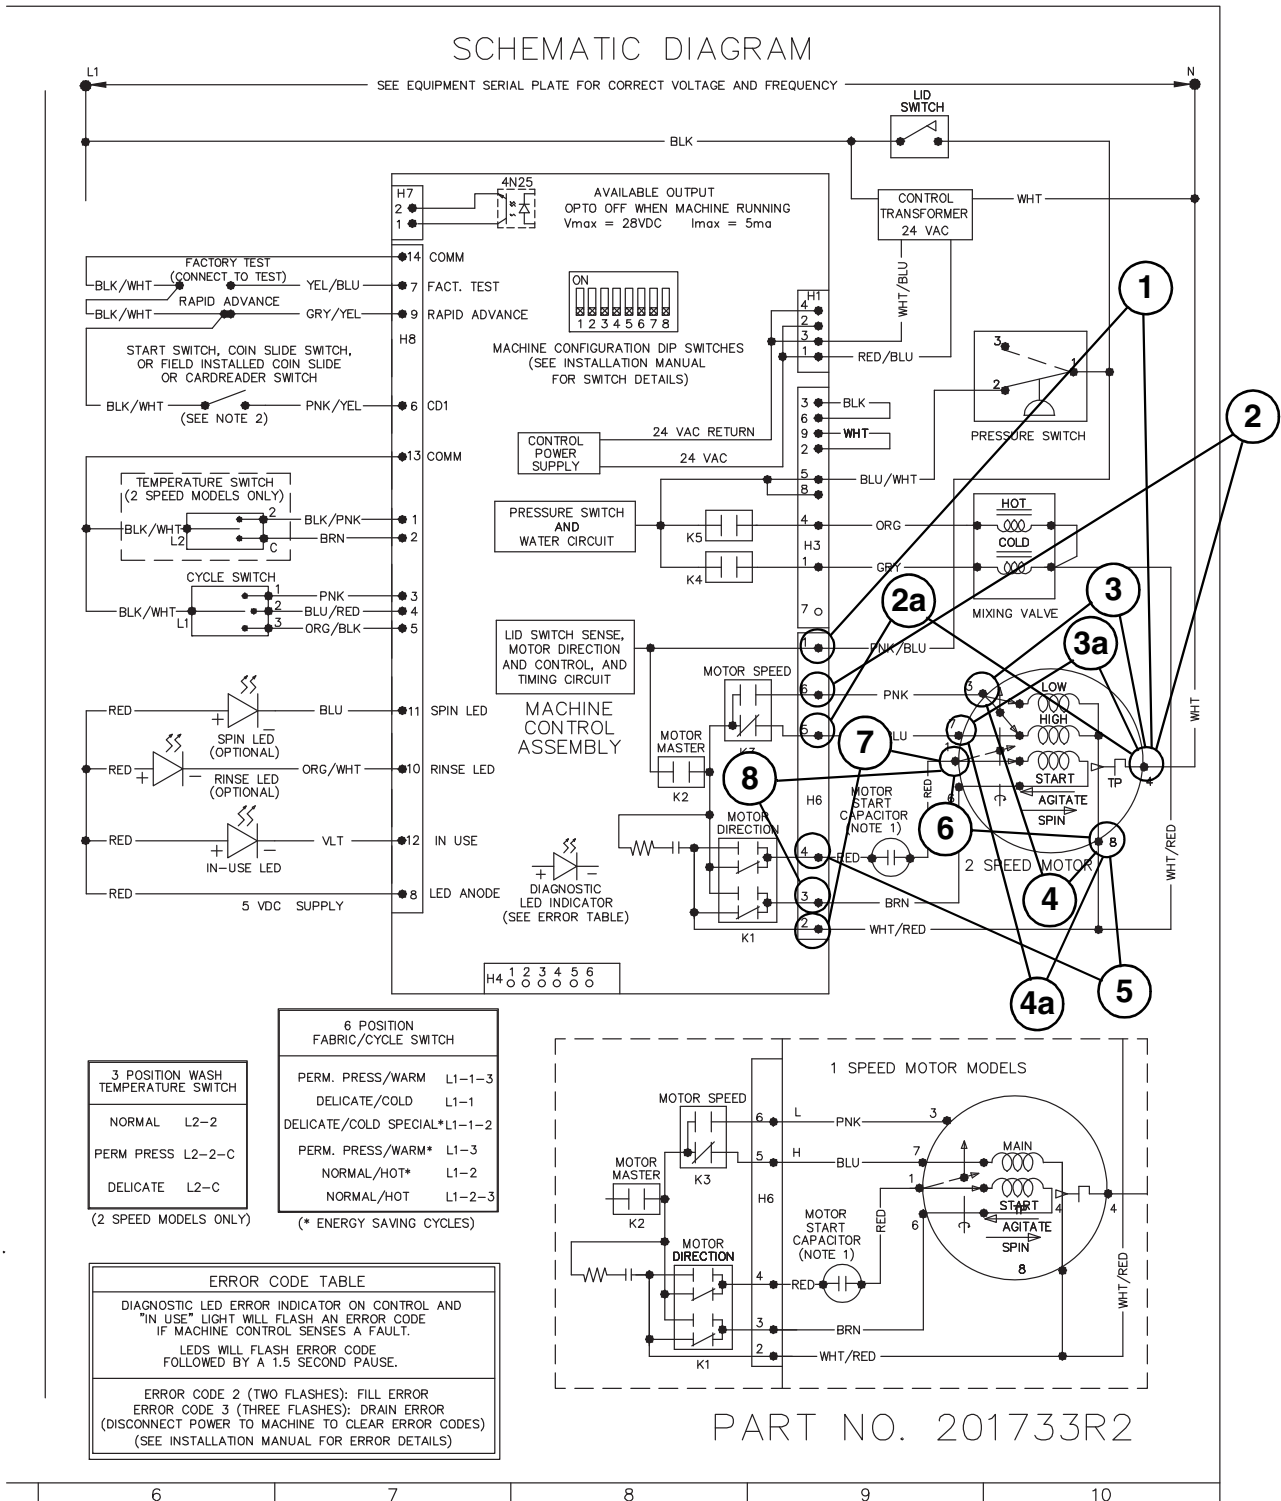


## 29. Washer Will Not Spin – Low Speed

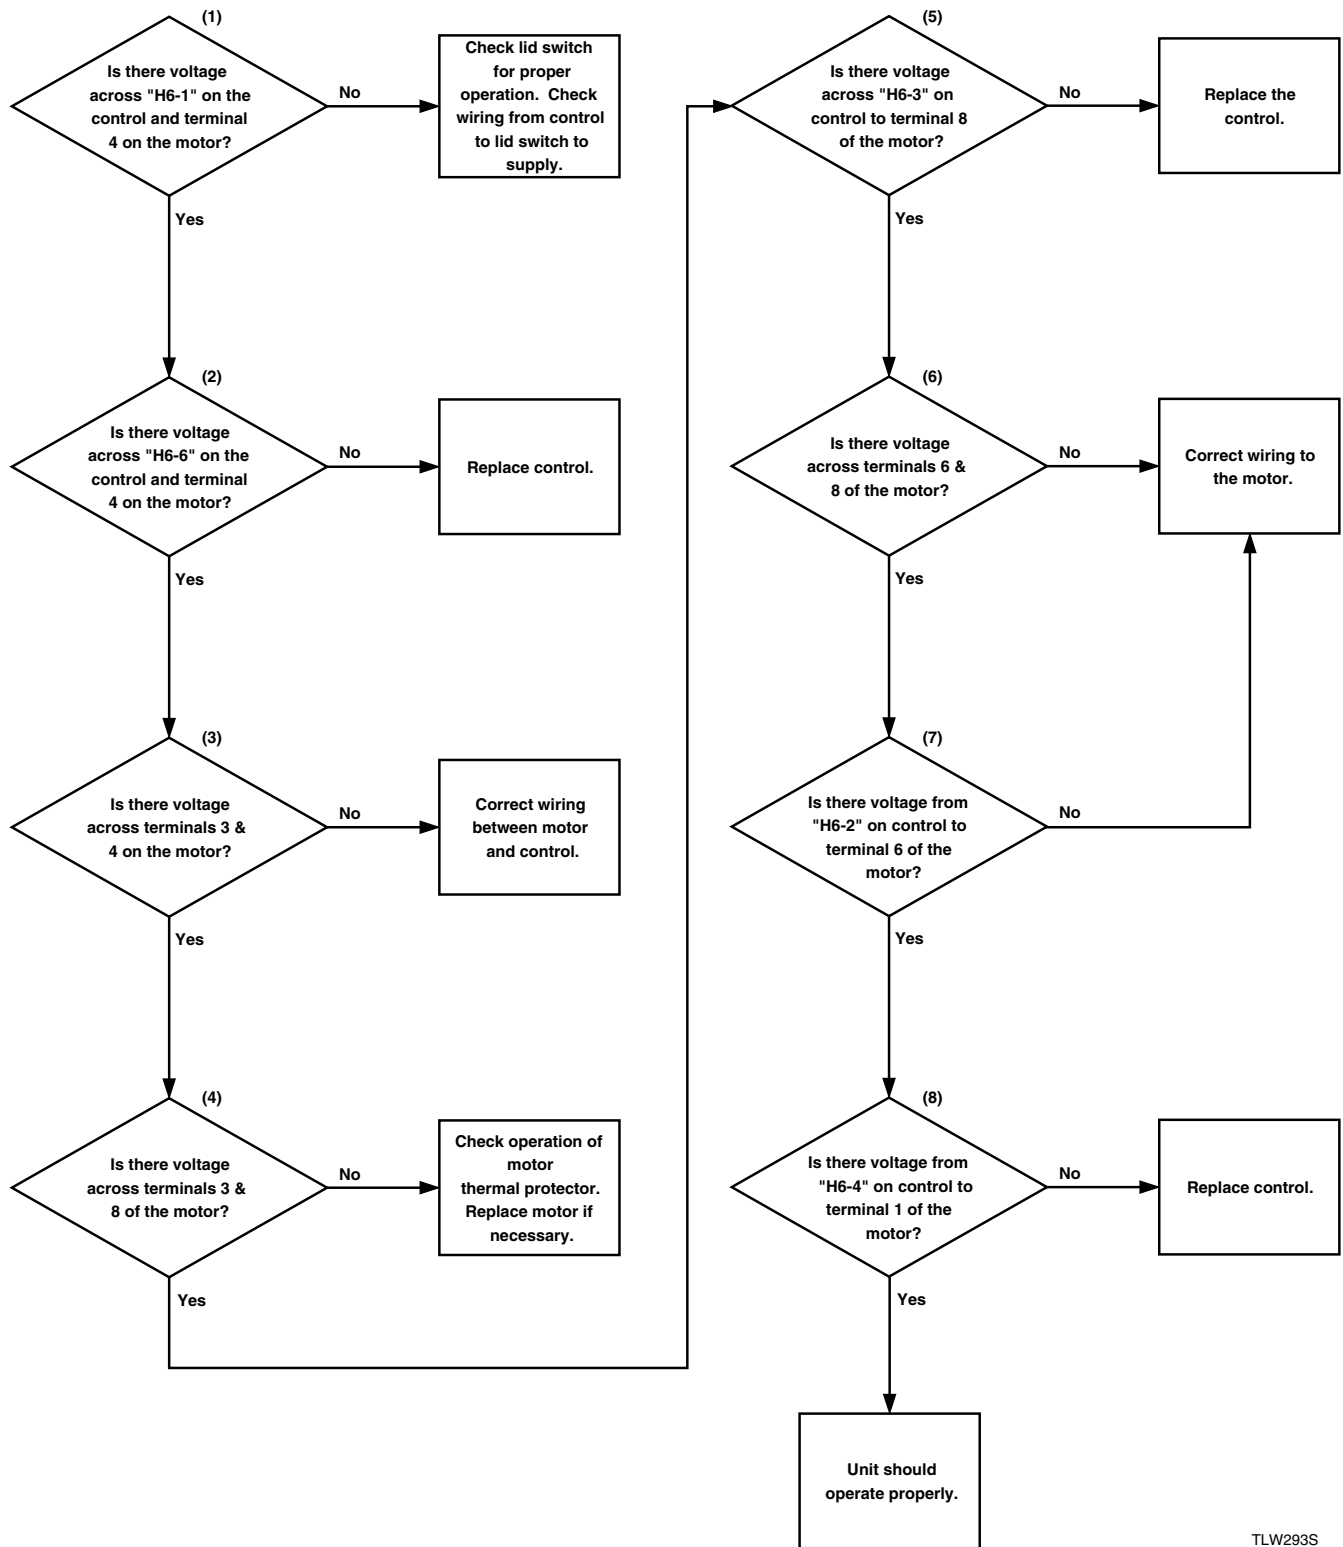


TLW293S



# Washer Will Not Spin – Low Speed

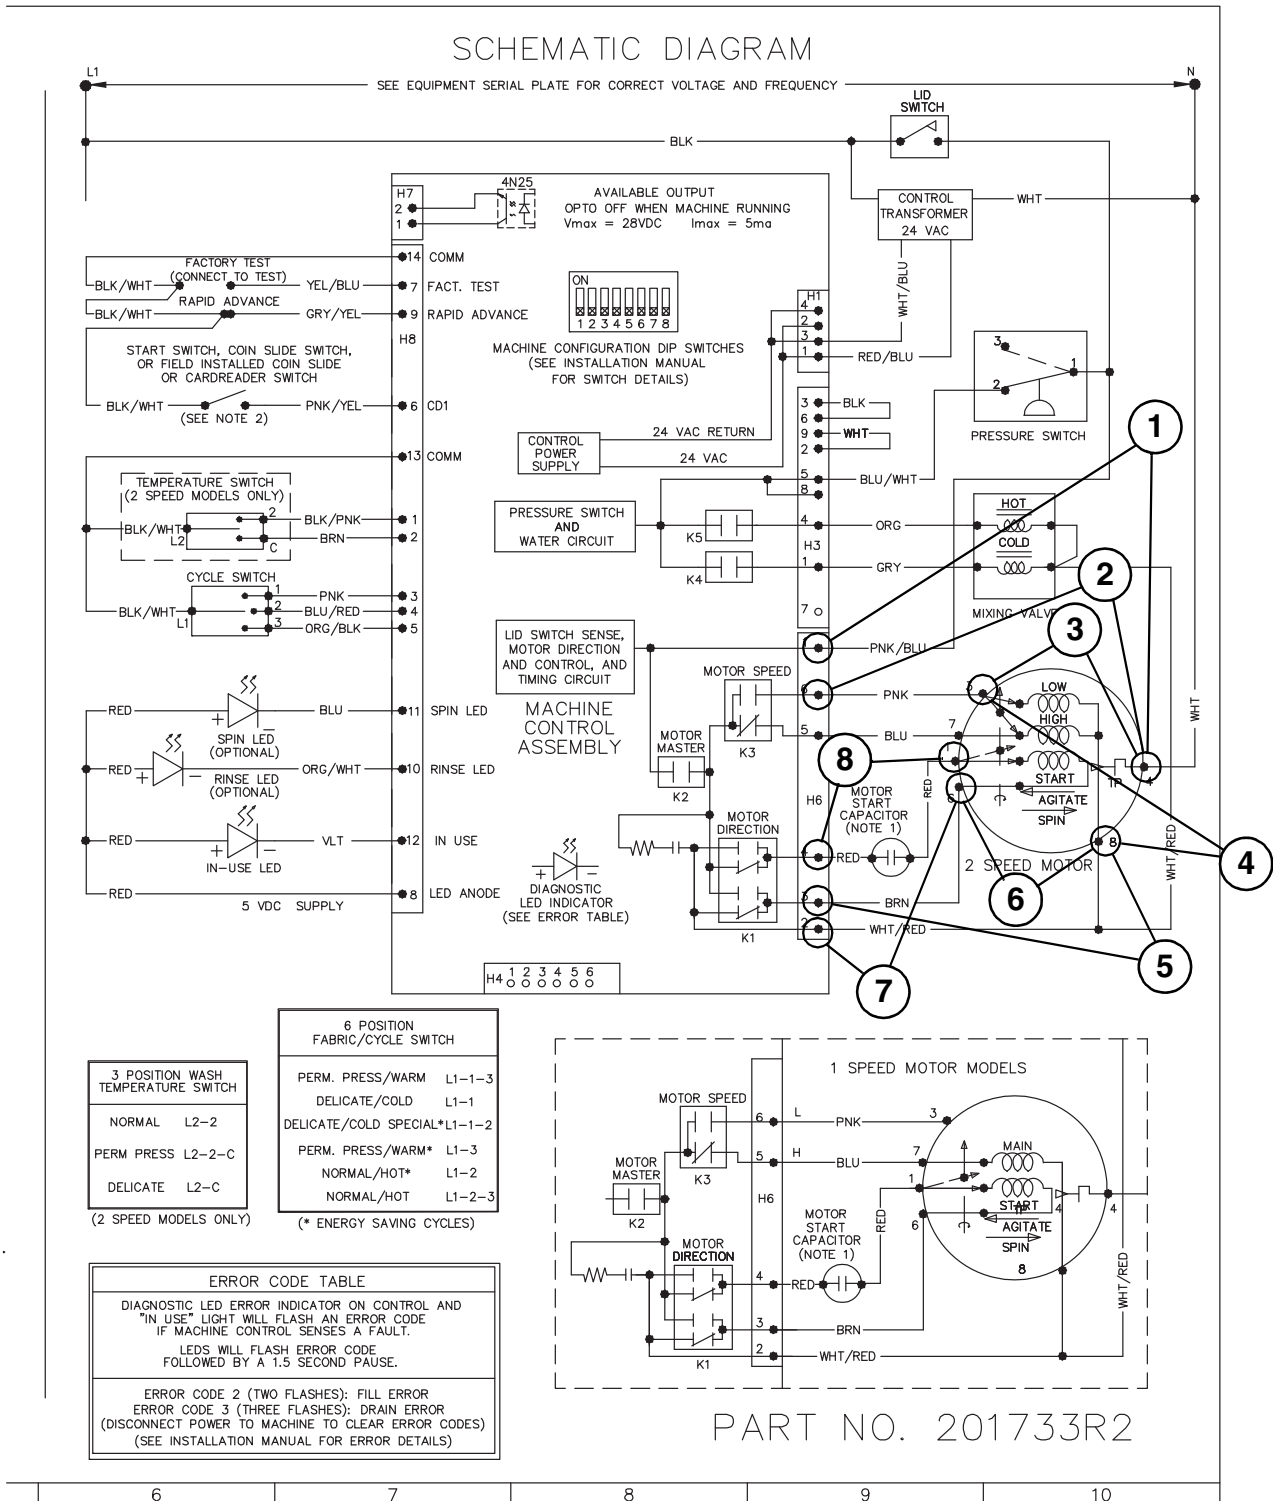


### 30. Washer Will Not Spin – High Speed

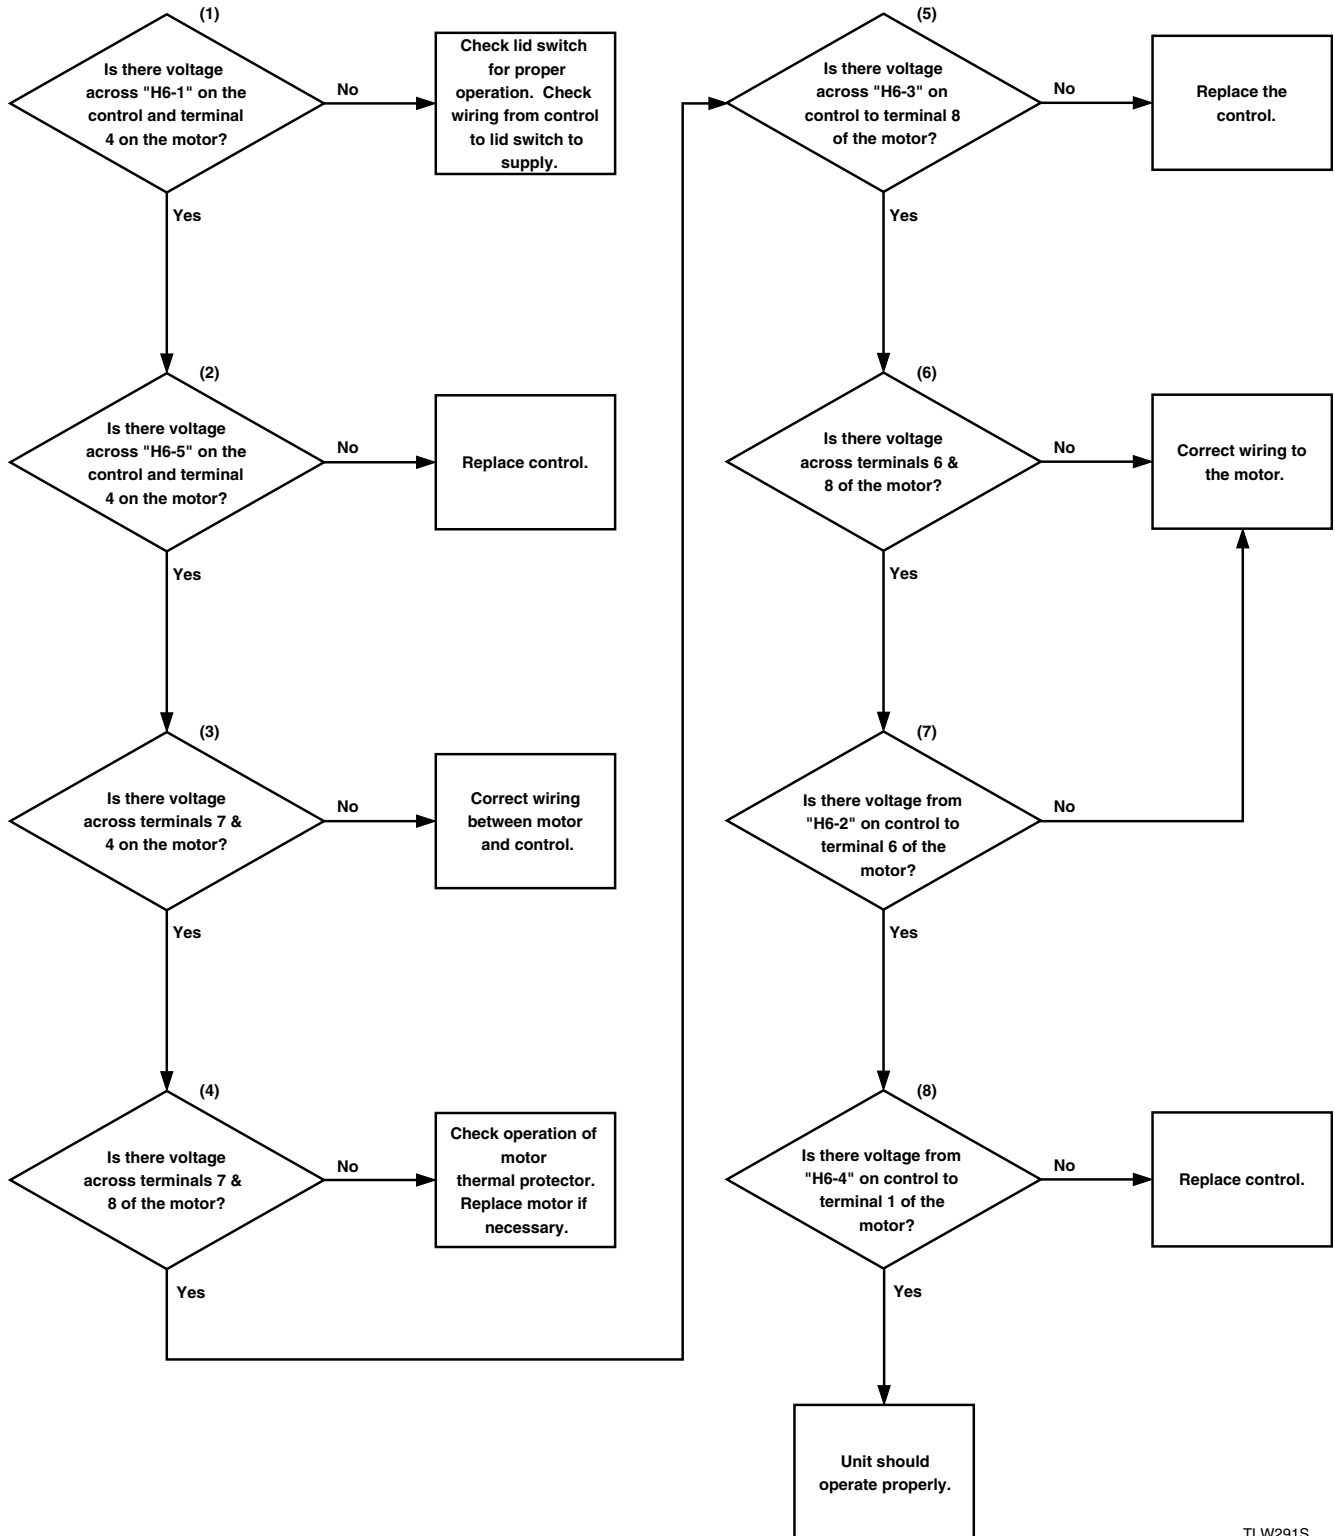

TLW291S

## Washer Will Not Spin – High Speed

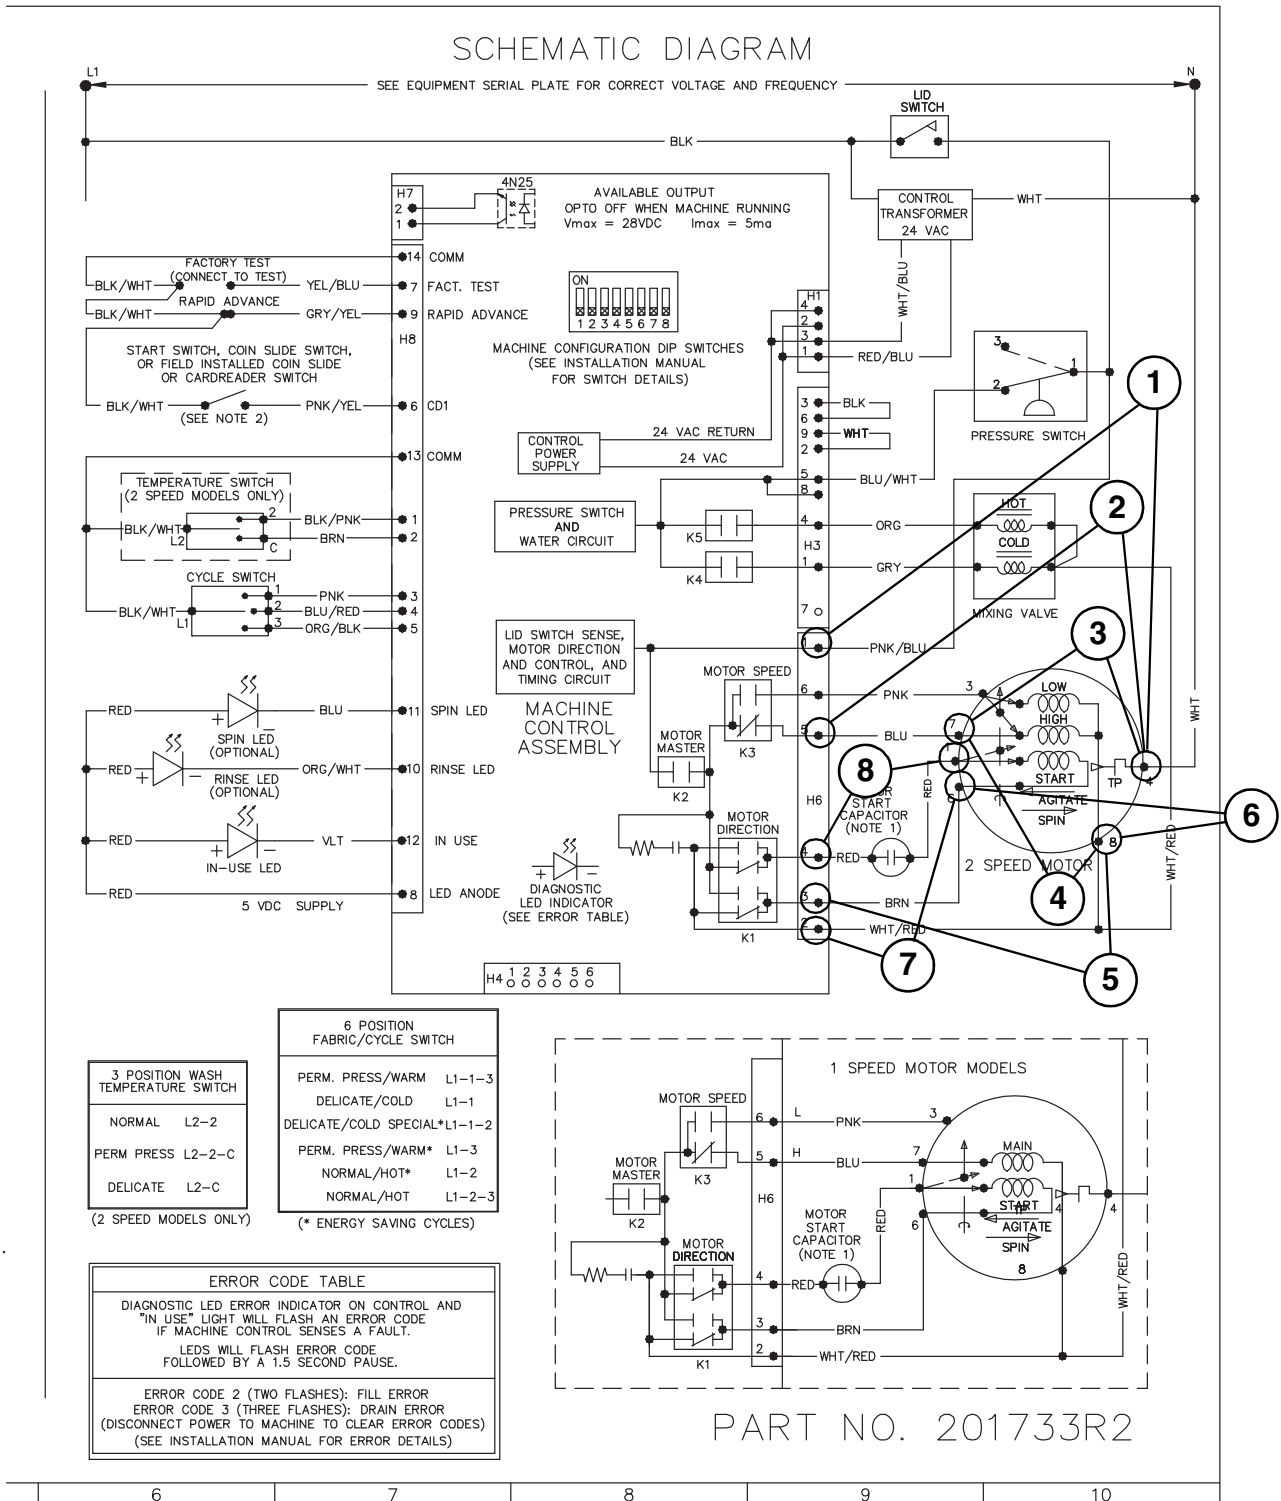

### Notes

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---


---

---

---

# Troubleshooting

## EDC Models

	<b>WARNING</b>
<p>To reduce the risk of electric shock, fire, explosion, serious injury or death:</p> <ul style="list-style-type: none"> <li>• Disconnect electric power to the washer before servicing.</li> <li>• Never start the washer with any guards/panels removed.</li> <li>• Whenever ground wires are removed during servicing, these ground wires must be reconnected to ensure that the washer is properly grounded.</li> </ul>	
W003	


### 31. EDC Error Code Listing

<b>E:00</b>	General Error	
<b>E:01</b>	Proximity Error	Micro-wand IIIe is improperly aimed at infrared communicator (angle or distance): Re-aim Micro-wand IIIe.
<b>E:02</b>	IR Communications Disconnection	Micro-wand IIIe prematurely pulled away from electronic control during infrared communication: Maintain infrared connection between Micro-wand IIIe and electronic control during communication.
<b>E:05</b>	Invalid Value Communication	Invalid code downloaded from Micro-wand IIIe to electronic control.
<b>E:07</b>	Inoperative Control	Replace electronic control.
<b>E:08</b>	Inoperative Control	Replace electronic control.
<b>E:09</b>	Proximity Error	Micro-wand IIIe is improperly aimed at infrared communicator (angle or distance): Re-aim Micro-wand IIIe.
<b>E:0A</b>	Proximity Error	Micro-wand IIIe is improperly aimed at infrared communicator (angle or distance): Re-aim Micro-wand IIIe.
<b>E:0B</b>	IR Communication Disconnection	Micro-wand IIIe prematurely pulled away from electronic control during infrared communication: Maintain infrared connection between Micro-wand IIIe and electronic control during communication.
<b>E:0C</b>	IR Communication Disconnection	Micro-wand IIIe prematurely pulled away from electronic control during infrared communication: Maintain infrared connection between Micro-wand IIIe and electronic control during communication.
<b>E:0d</b>	Pressure Switch Error	<ol style="list-style-type: none"> <li>1. Check fill and drain hoses for improper installation and kinks.</li> <li>2. Check fill electrical circuit: Replace inoperative switches or wires.</li> </ol>
<b>E:0F</b>	IR Communicator Programmed Off	Reprogram infrared communicator on.
<b>Err</b>	Coin Error	<ol style="list-style-type: none"> <li>1. Inoperative coin sensor: Run the Coin Drop Diagnostic test.</li> <li>2. Coin drop obstruction: Check coin drop area and remove any obstructions.</li> <li>3. Customer tampering: Evaluate security procedures.</li> </ol>

**NOTE: Disconnecting power to the unit may clear the error display.**

**NOTE: If replacing an inoperative electronic control due to burnt pin(s) on the 6-pin wire harness connector block, it may be due to damaged terminals in the harness connector. Damaged terminals in the harness connector will appear burnt or show signs of heat discoloration on the connector block. Replace the control wire harness with the control to avoid repeated damage.**


### 32. Cannot Perform Infrared Communication

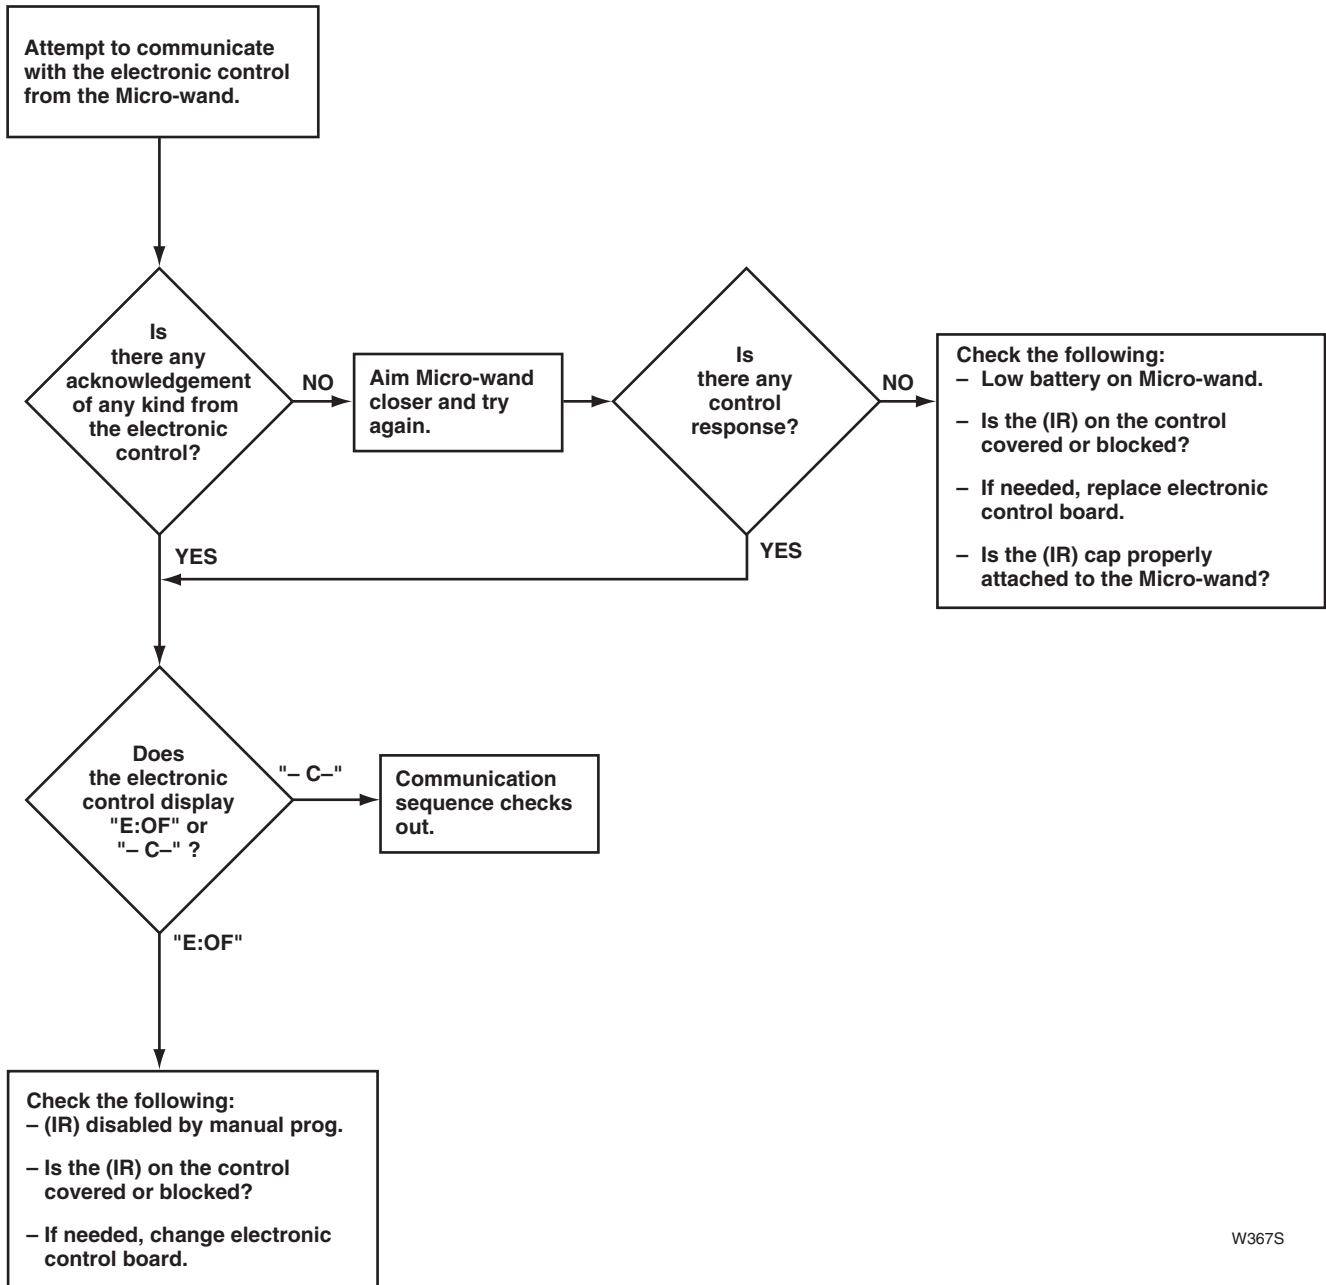

W367S


### 33. Coins Ignored When Entered

**NOTE:** For instructions on performing tests, refer to programming manual.

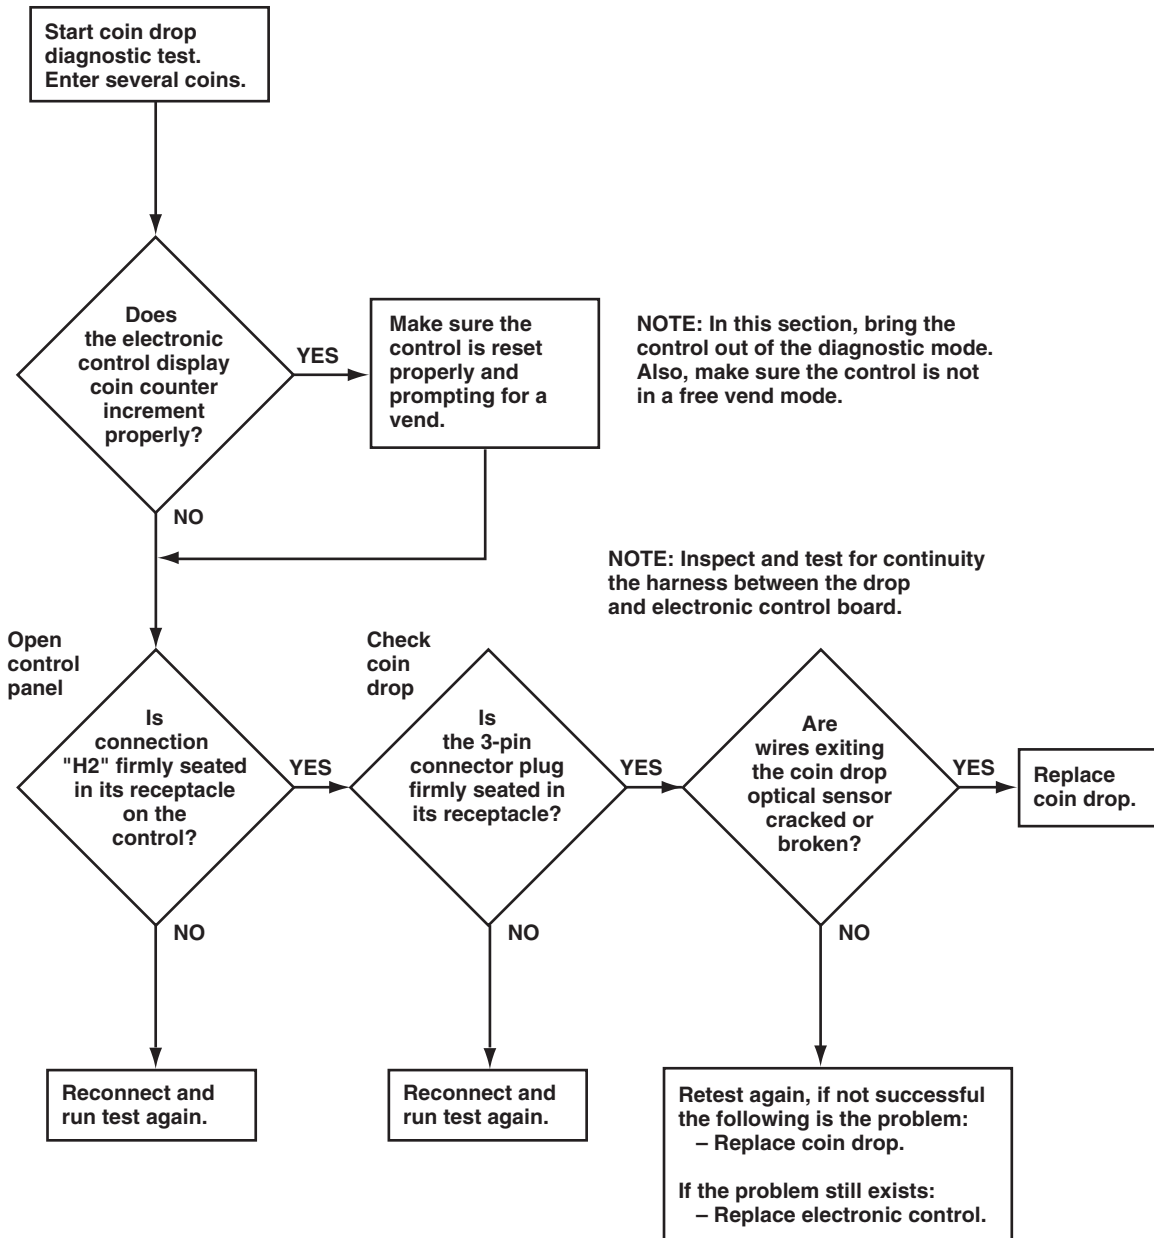

W368S

### 34. Electronic Control Has No Visible Display

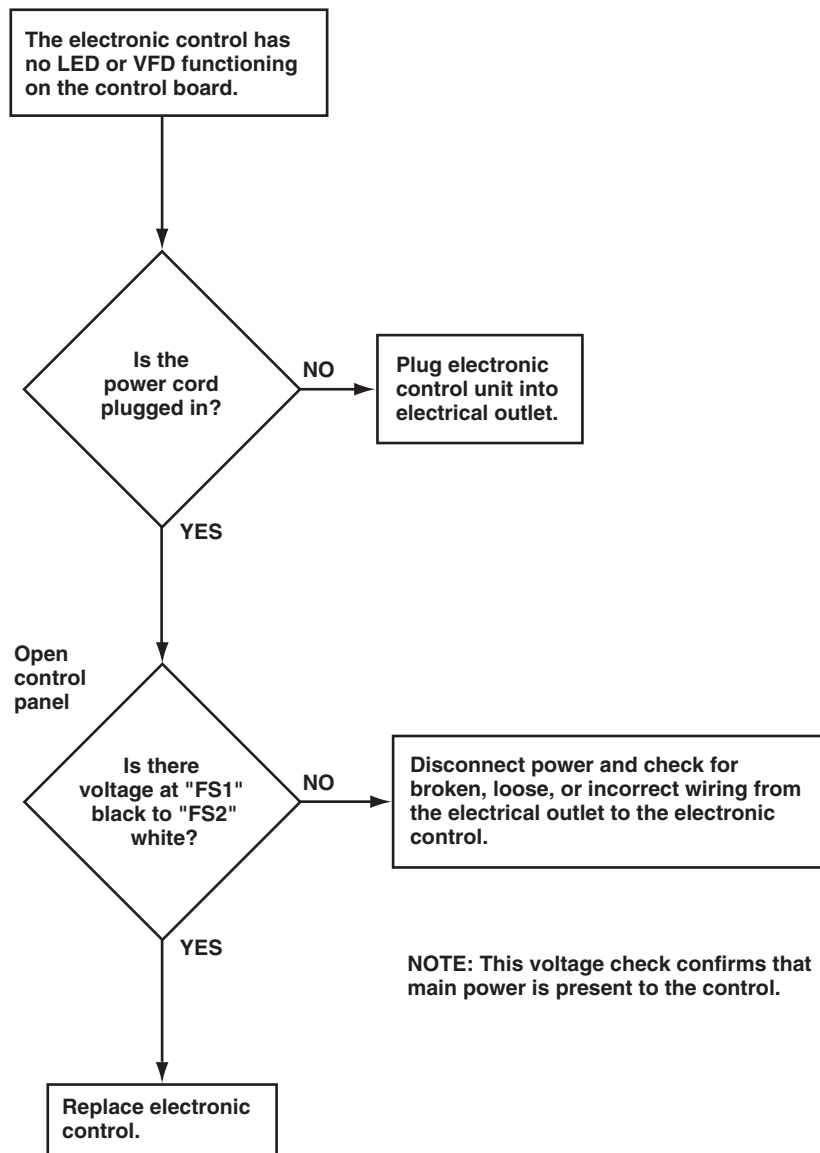


W369S






### 35. No Fill Analysis

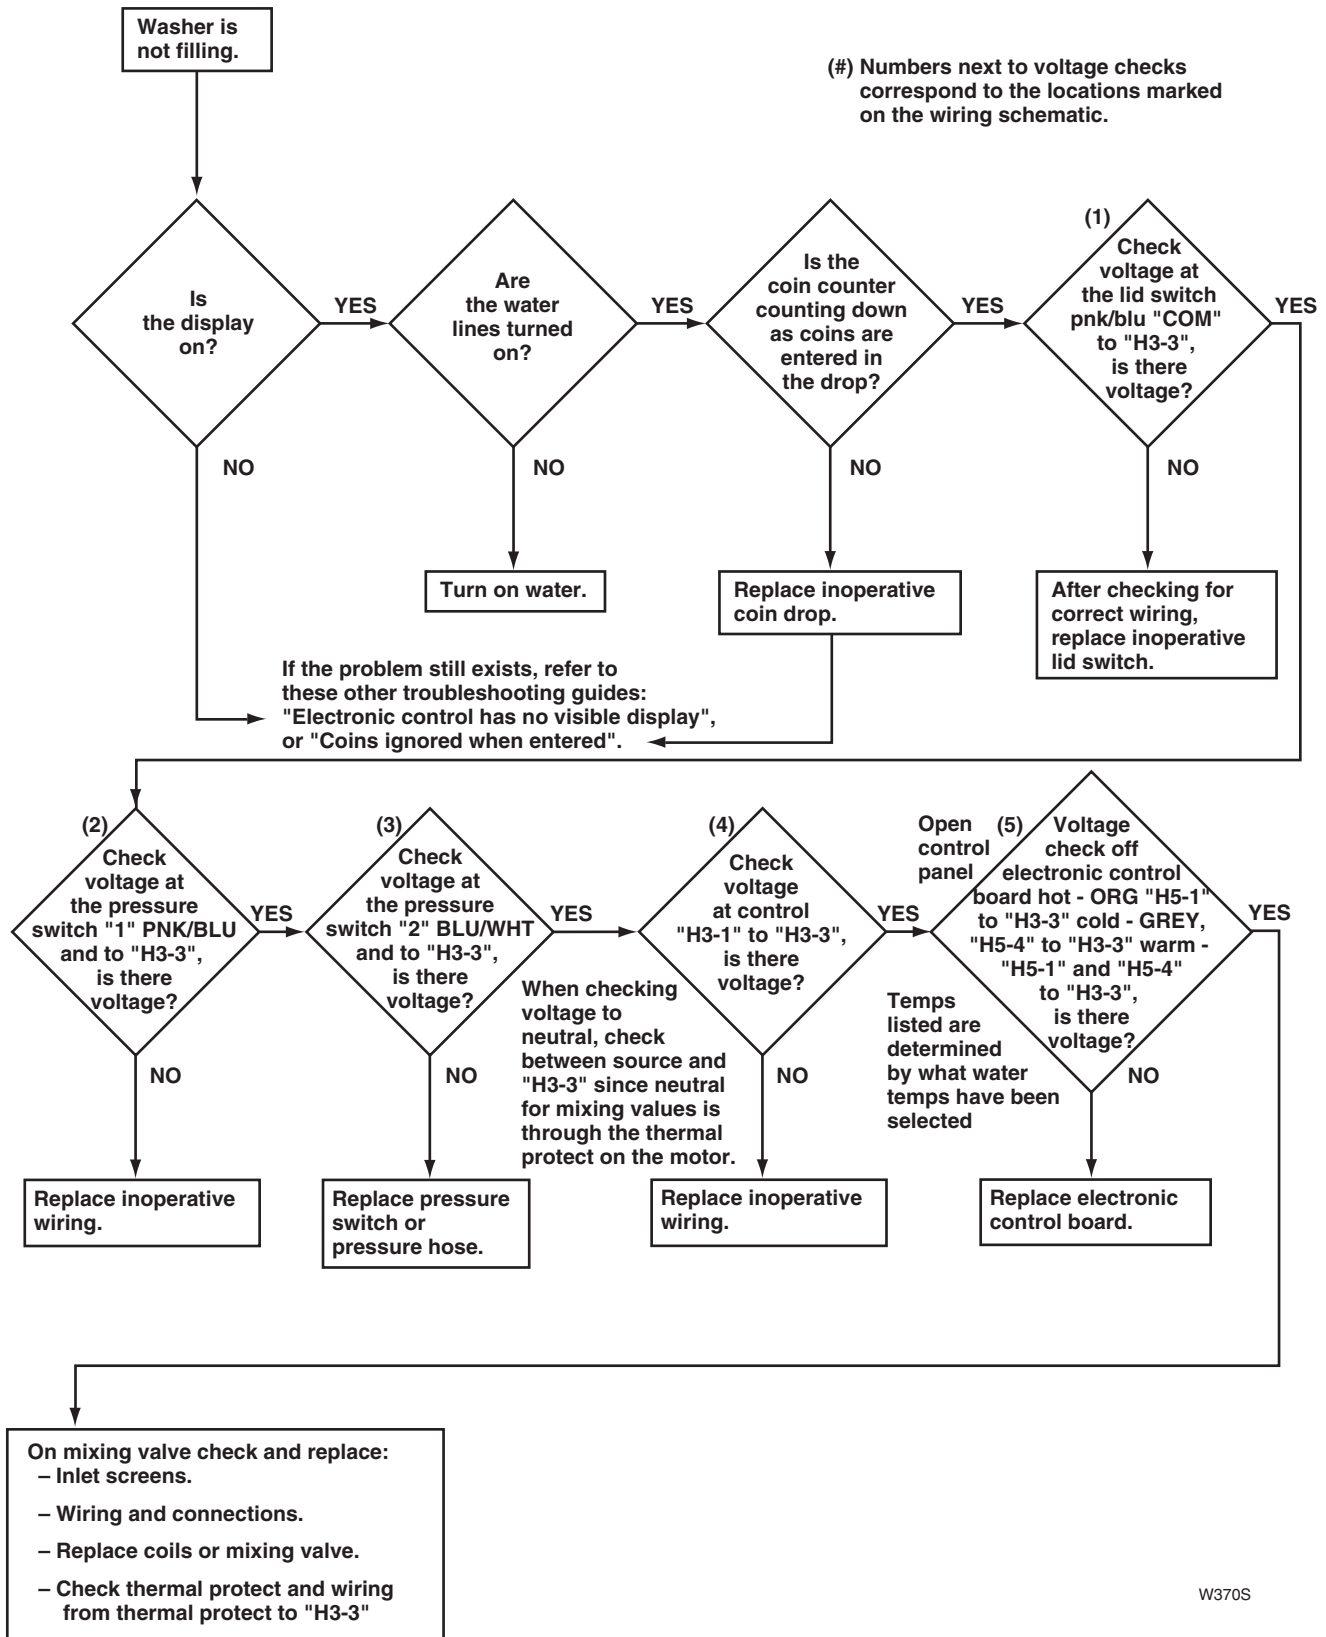


### No Fill Analysis

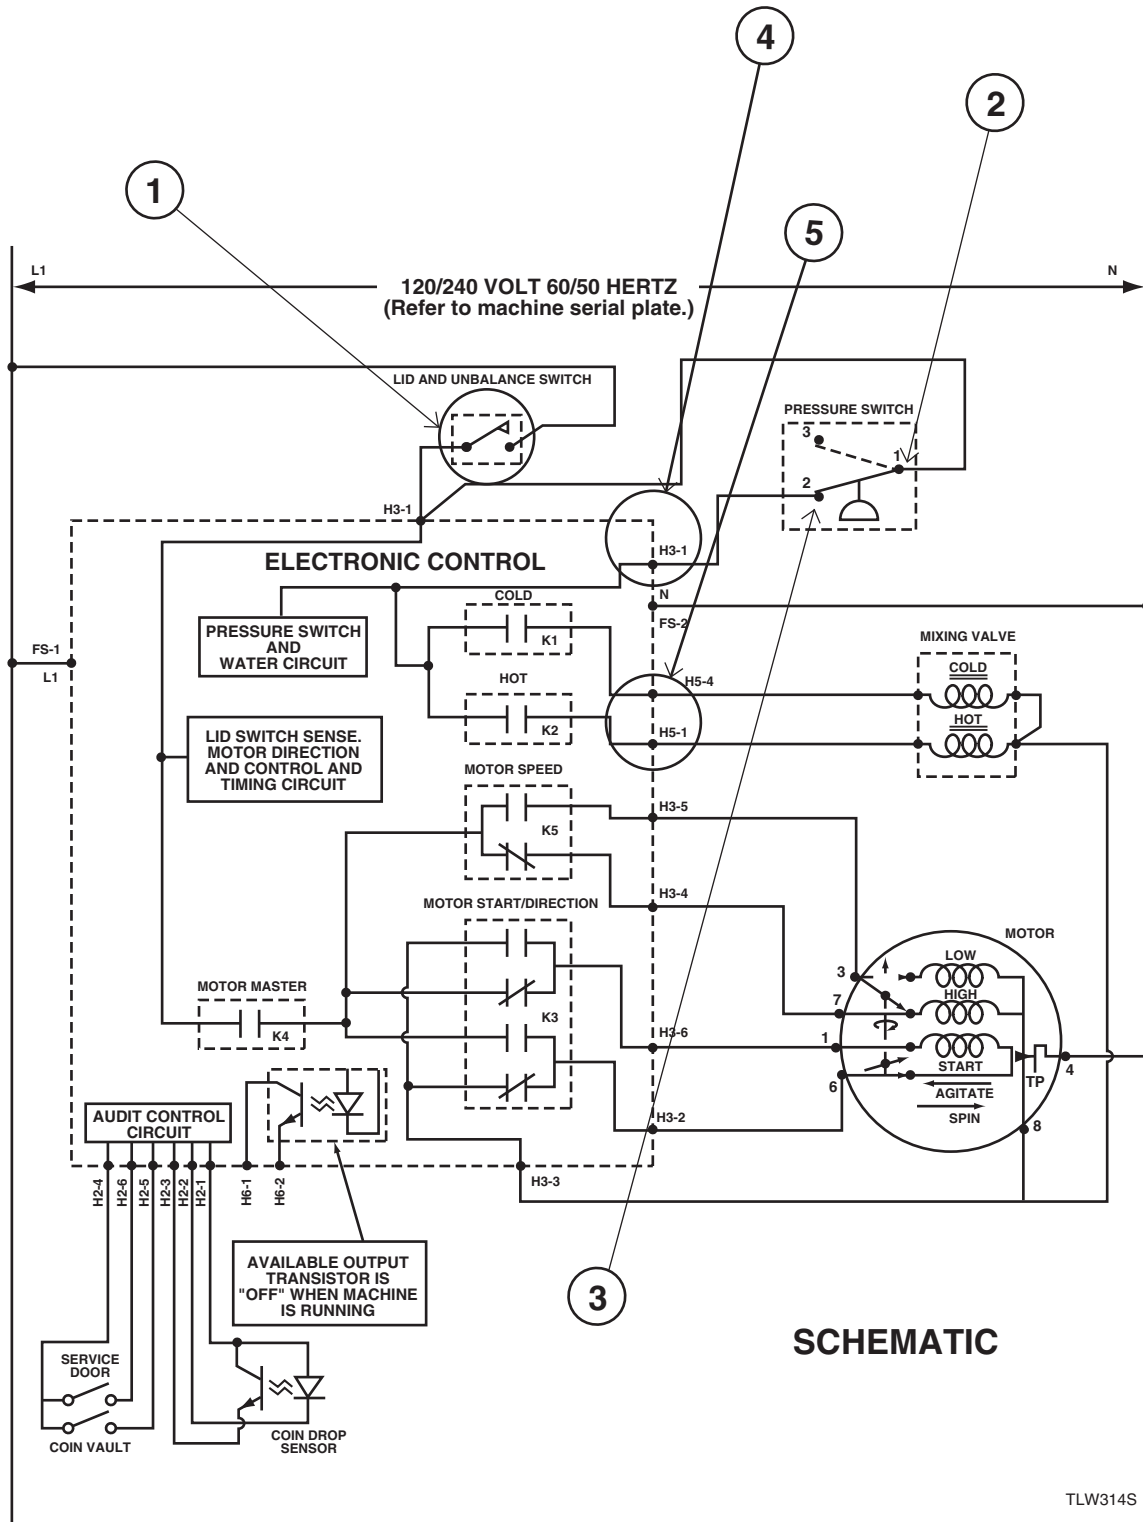


TLW314S

### 36. No Motor Run — Agitate Analysis

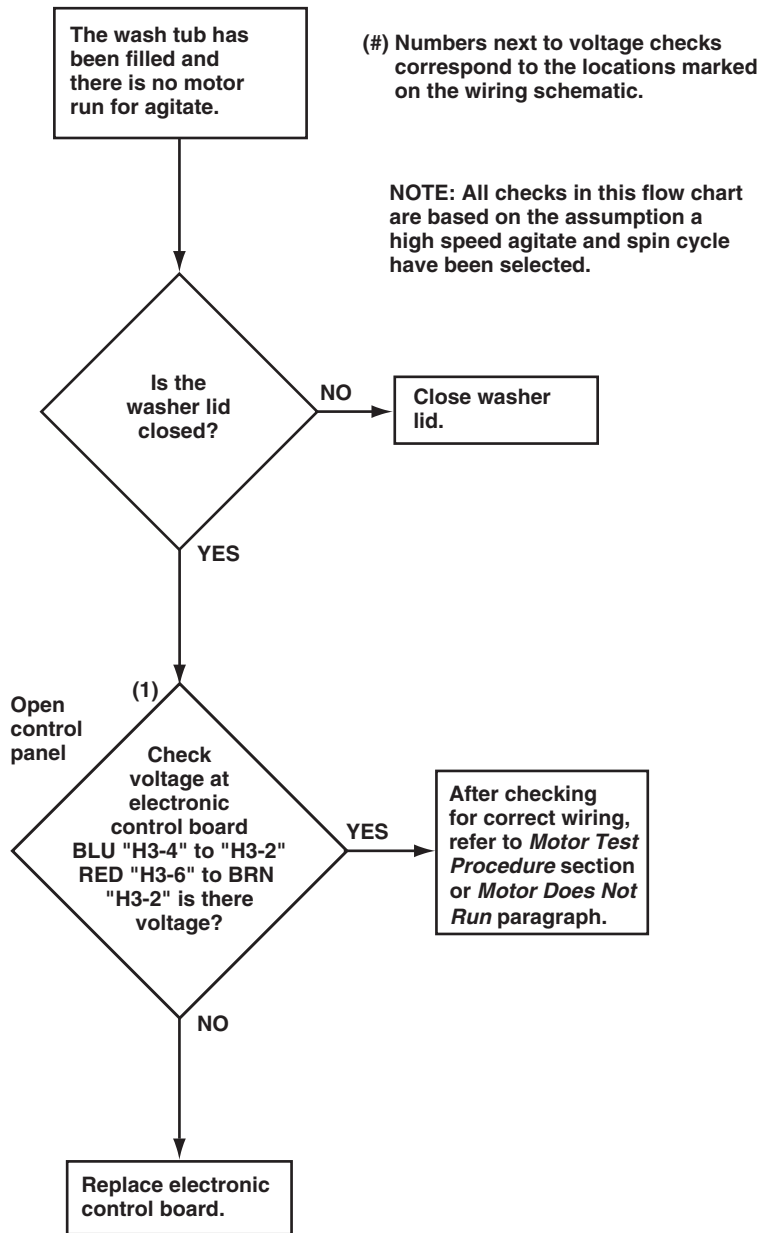


TLW374S

## No Motor Run — Agitate Analysis

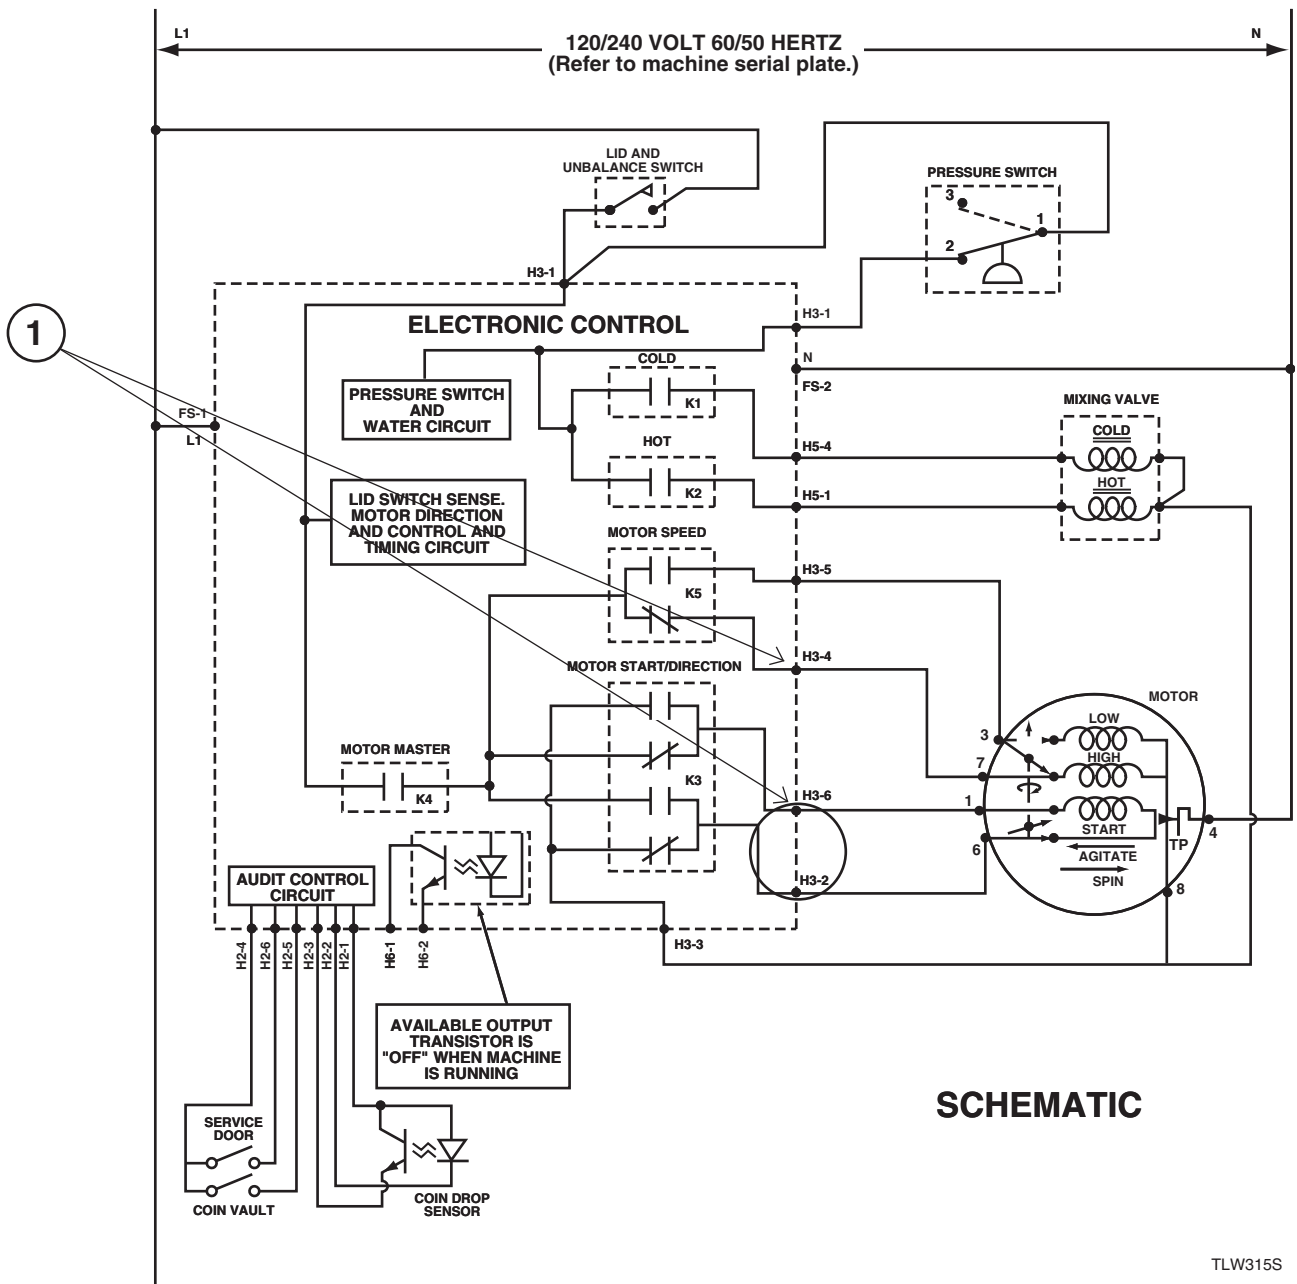


TLW315S

### 37. No Motor Run — Spin Analysis

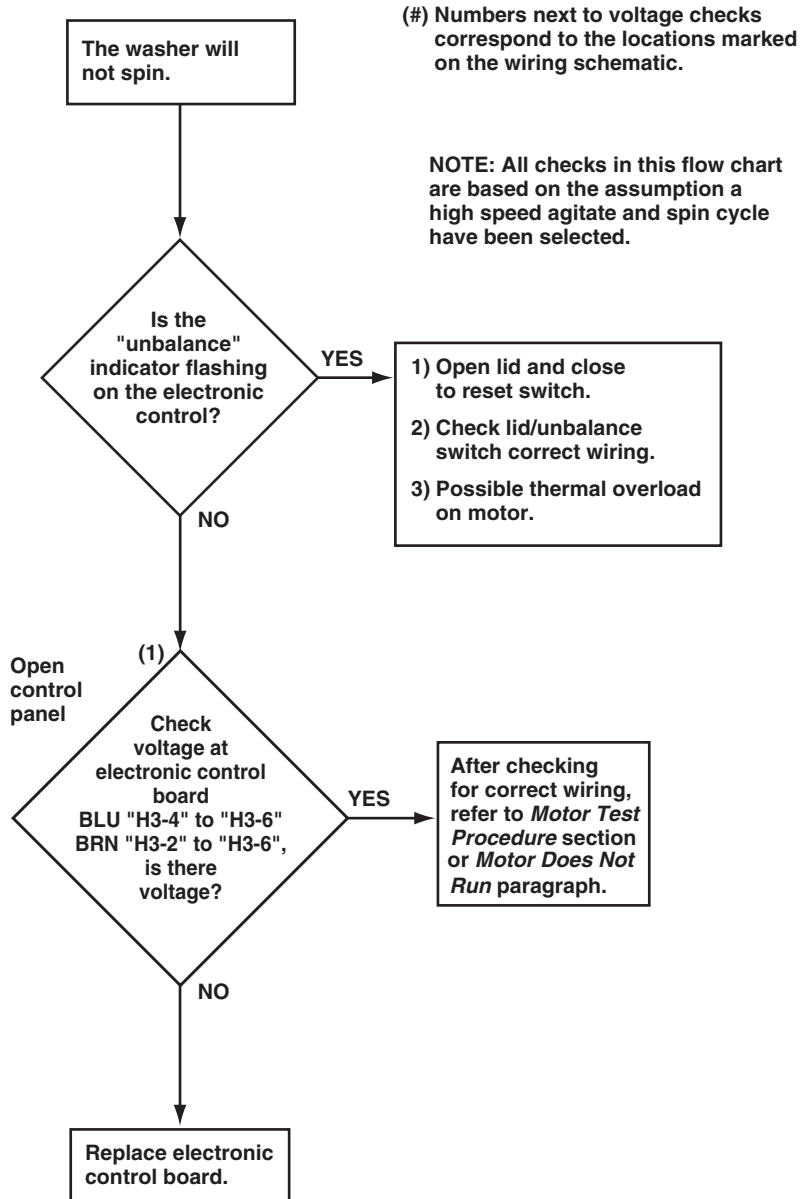


TLW375S

## No Motor Run — Spin Analysis

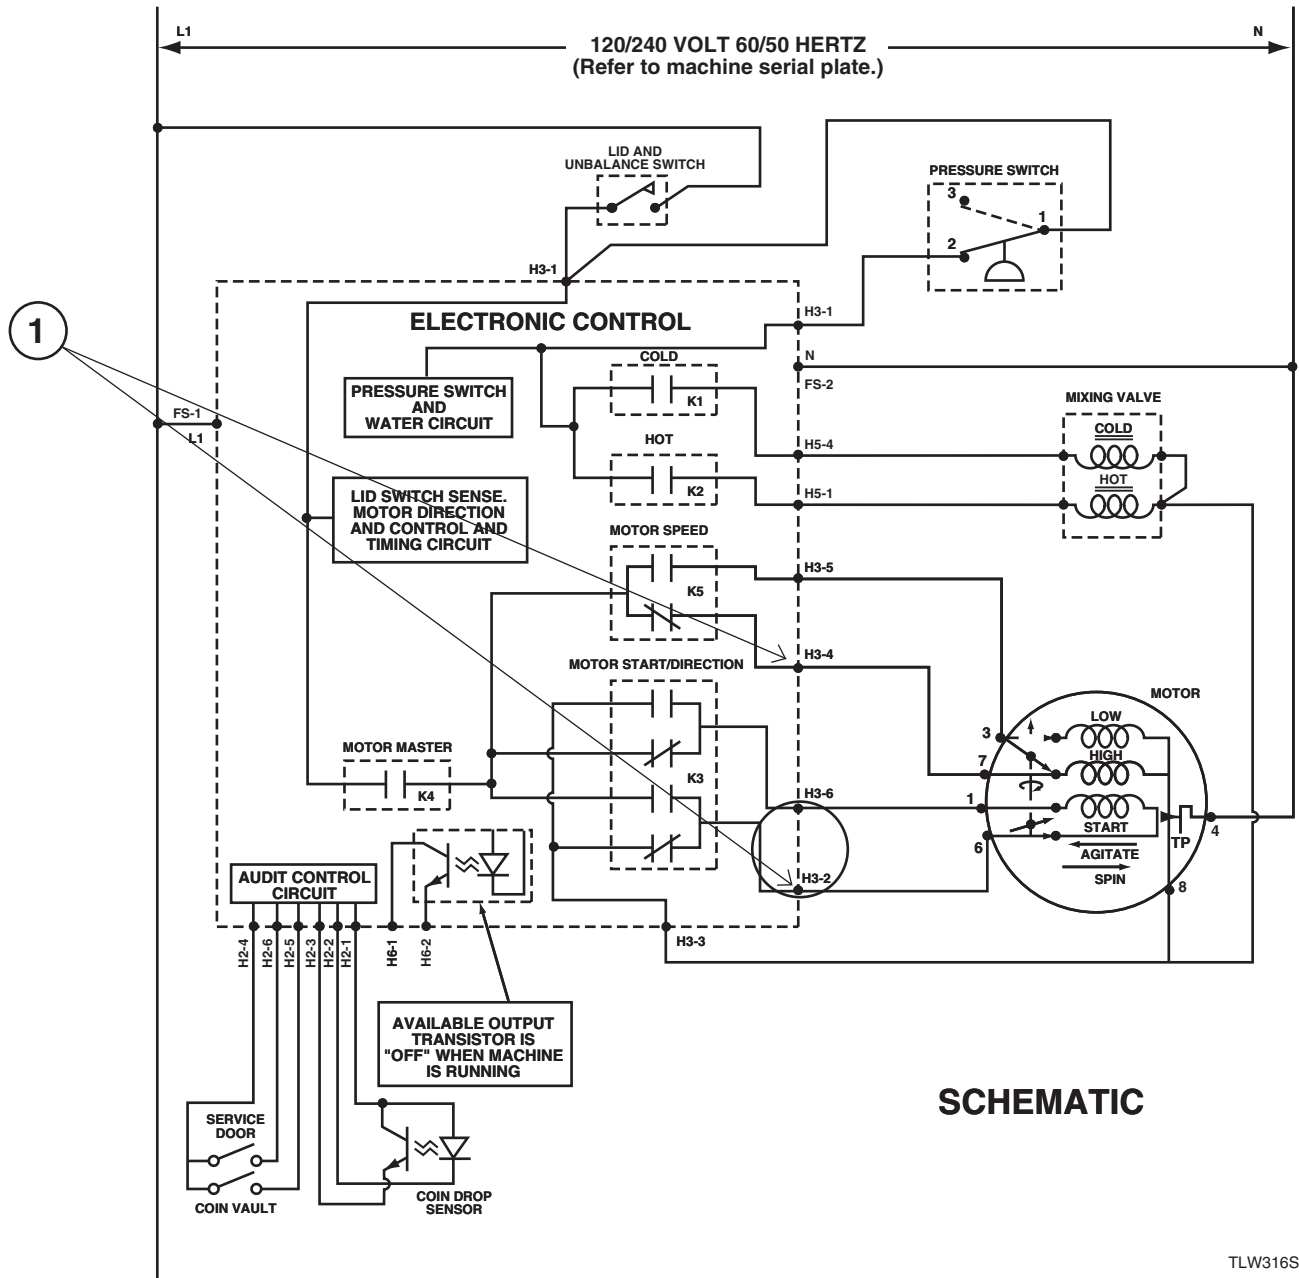


### 38. Overflow Analysis

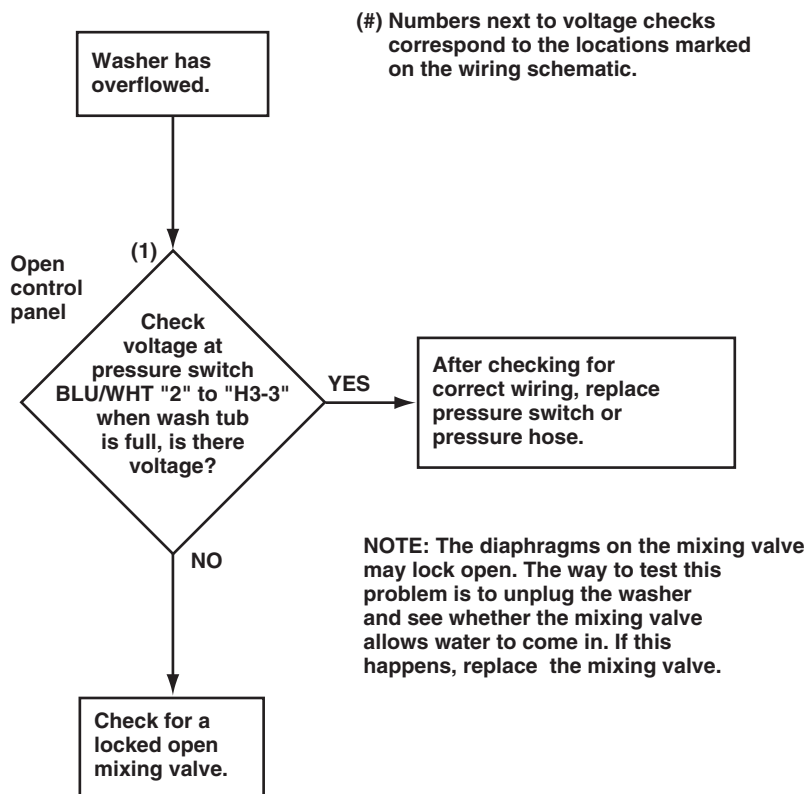

W376S



# Overflow Analysis

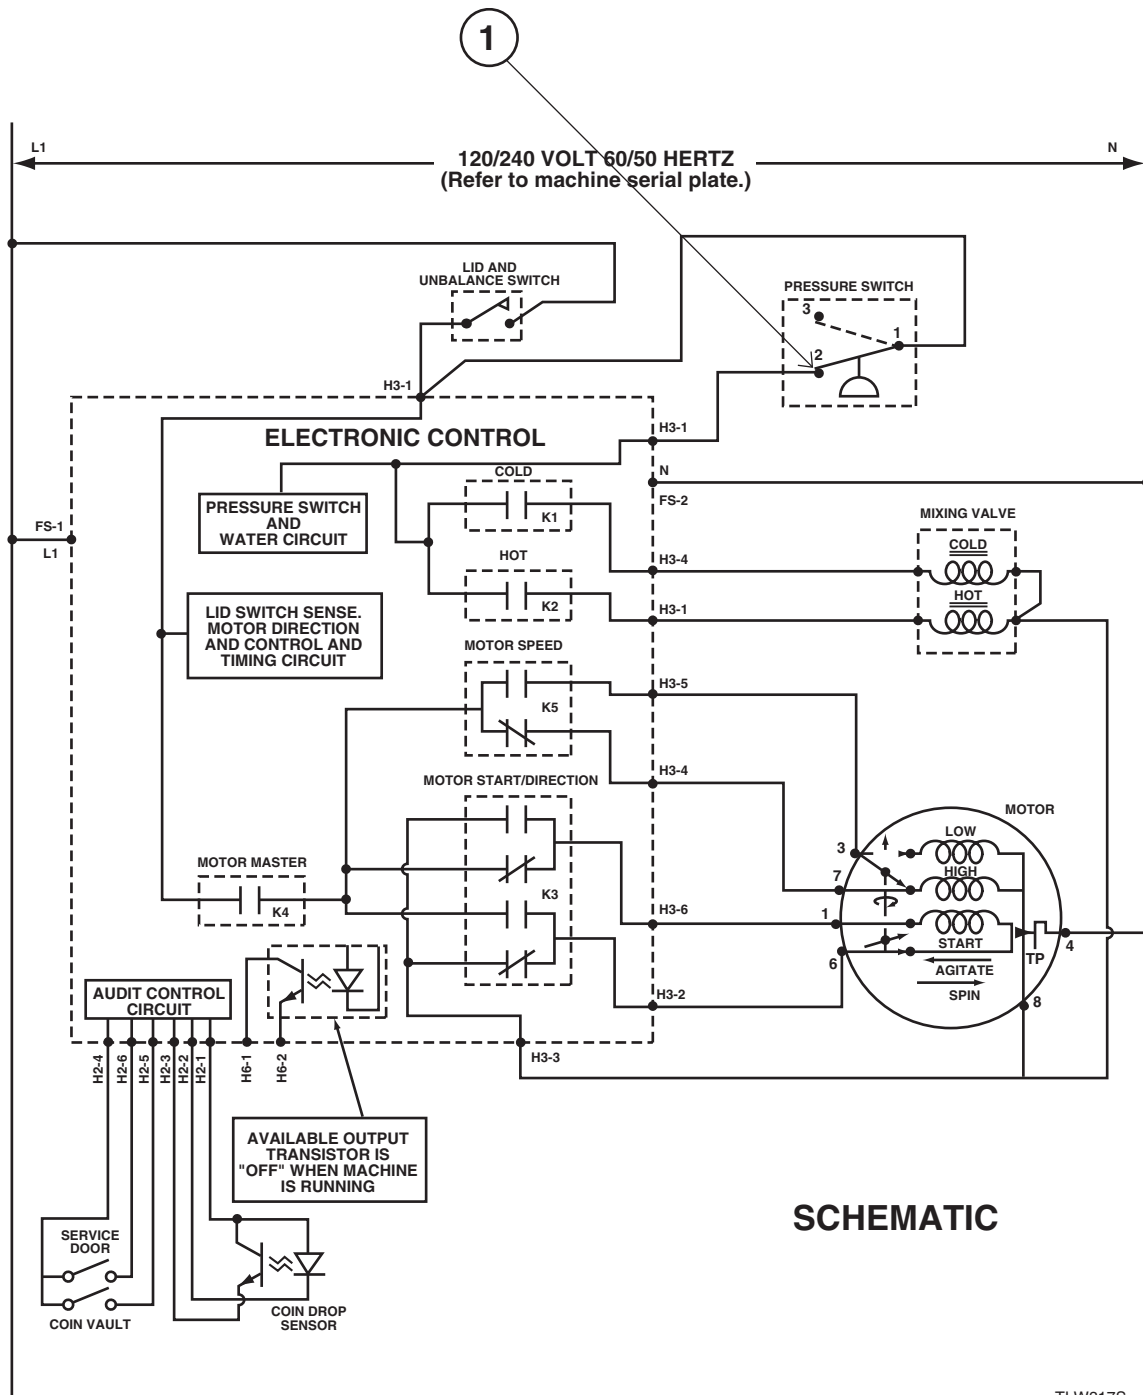


TLW317S

### 39. Audit Switch Function Analysis

**NOTE:** For instructions on performing tests, refer to programming manual.

**NOTE:** Usually review two consecutive audit reports before sending service personnel to investigate. Remember, the audit system may be detecting tampering of the EC unit.

In audit report analysis, the EC computer operator will have to determine, from the audit reports, what the servicer should examine on the EC units. If the servicer cannot find a particular problem, consult the appropriate audit reports for further analysis.

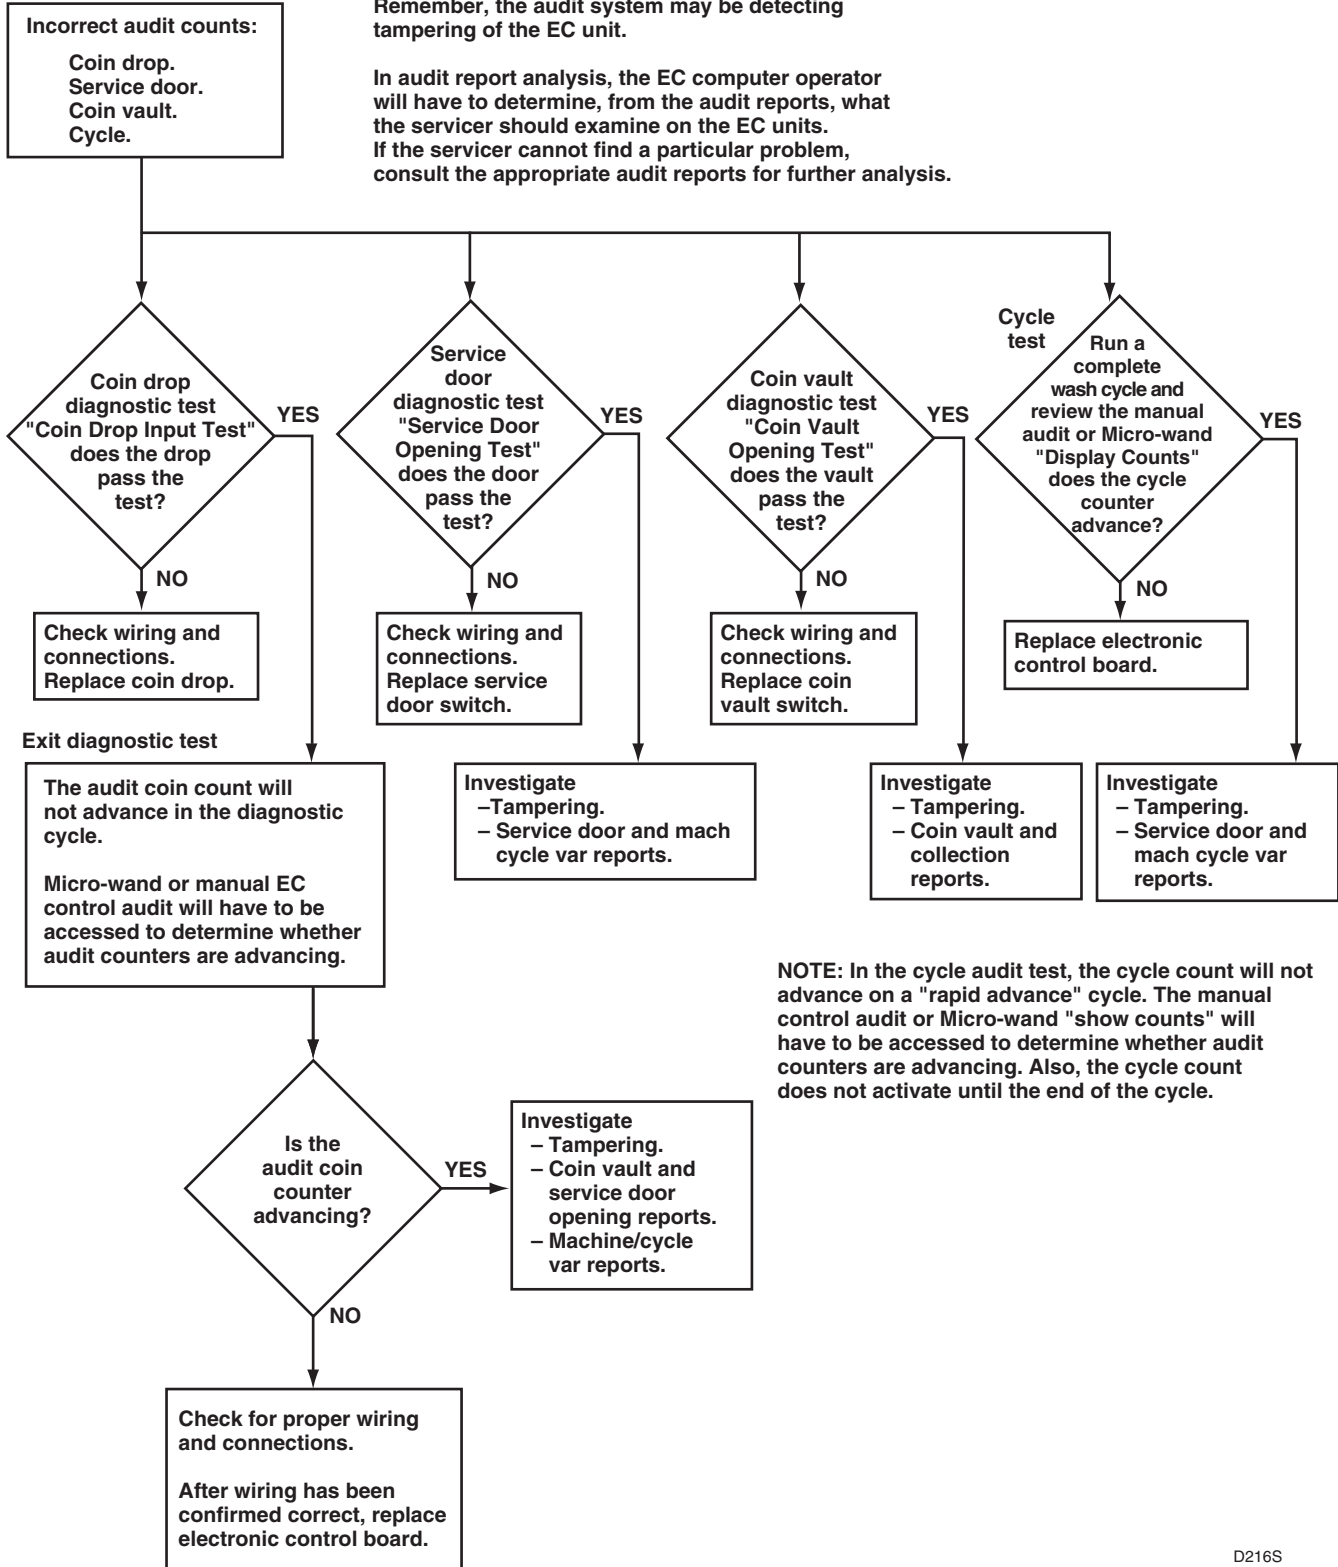

**NOTE:** In the cycle audit test, the cycle count will not advance on a "rapid advance" cycle. The manual control audit or Micro-wand "show counts" will have to be accessed to determine whether audit counters are advancing. Also, the cycle count does not activate until the end of the cycle.

D216S

# Troubleshooting

## MDC Models



### WARNING

To reduce the risk of electric shock, fire, explosion, serious injury or death:

- Disconnect electric power to the washer before servicing.
- Never start the washer with any guards/panels removed.
- Whenever ground wires are removed during servicing, these ground wires must be reconnected to ensure that the washer is properly grounded.


W003

## 40. MDC Error Code Listing

<b>E:dr</b>	Maximum drain time exceeded or water sensed at the end of a spin step.
<b>E:FL</b>	Maximum fill time exceeded.
<b>Card Reader Machines:</b> (In addition to the above errors)	
<b>EC:19</b>	Indicates no card reader communication. The control and the card reader cannot communicate. Check card reader, control and harness.


**NOTE:** For all other card reader errors, consult the card reader manufacturer.

## 41. No Visible Display on Control

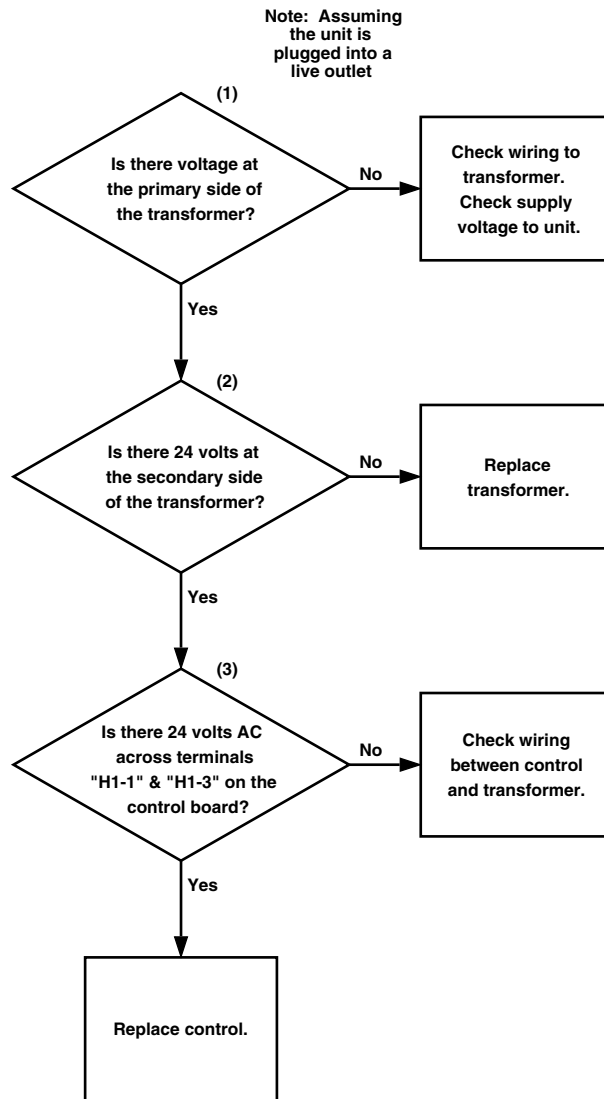


TLW279S

# No Visible Display on Control

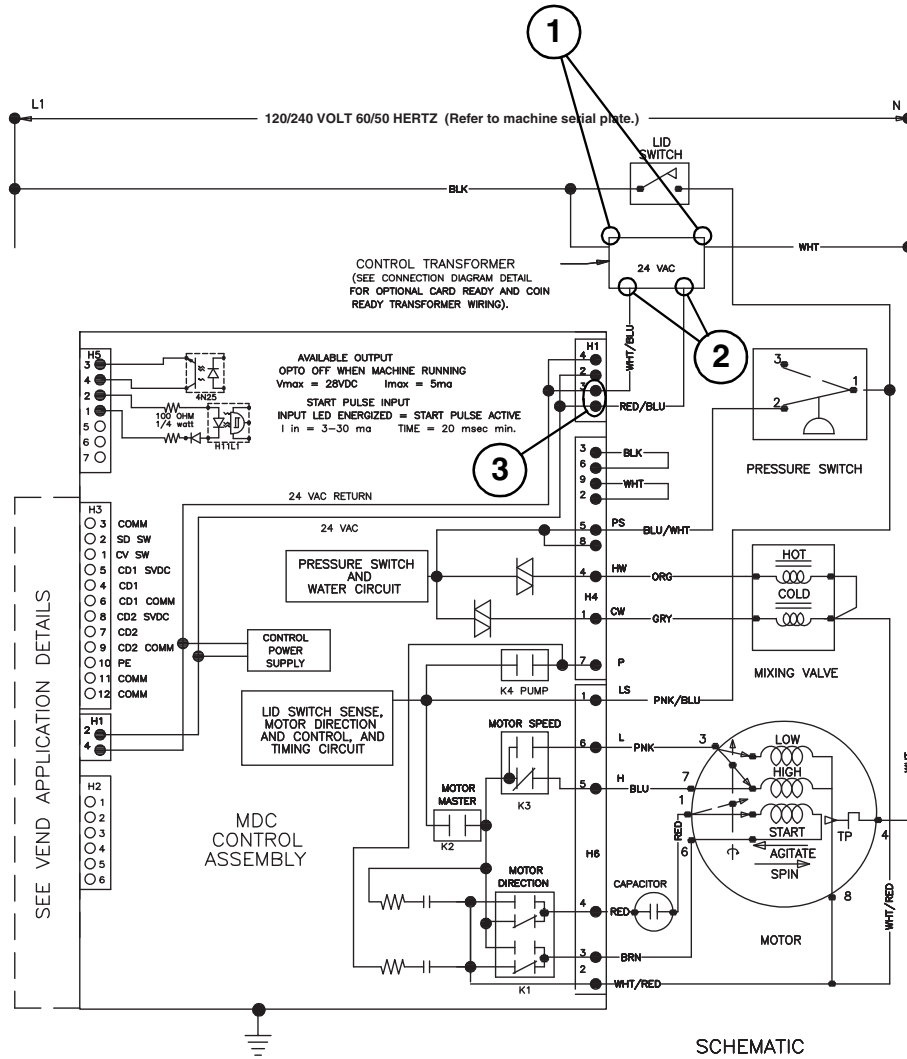


SCHEMATIC

## VEND APPLICATIONS DETAILS


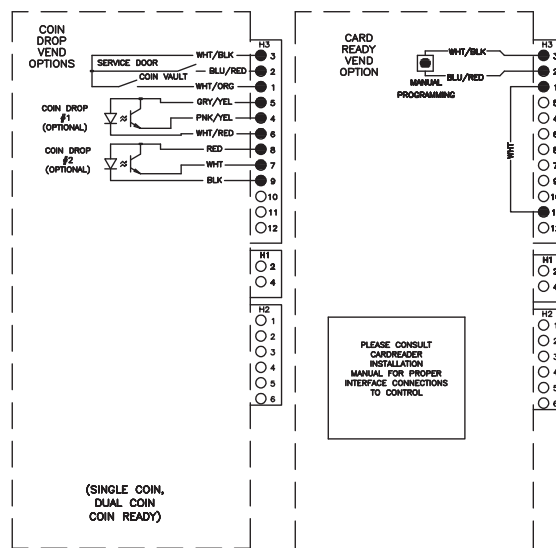


## 42. Coins Ignored When Entered

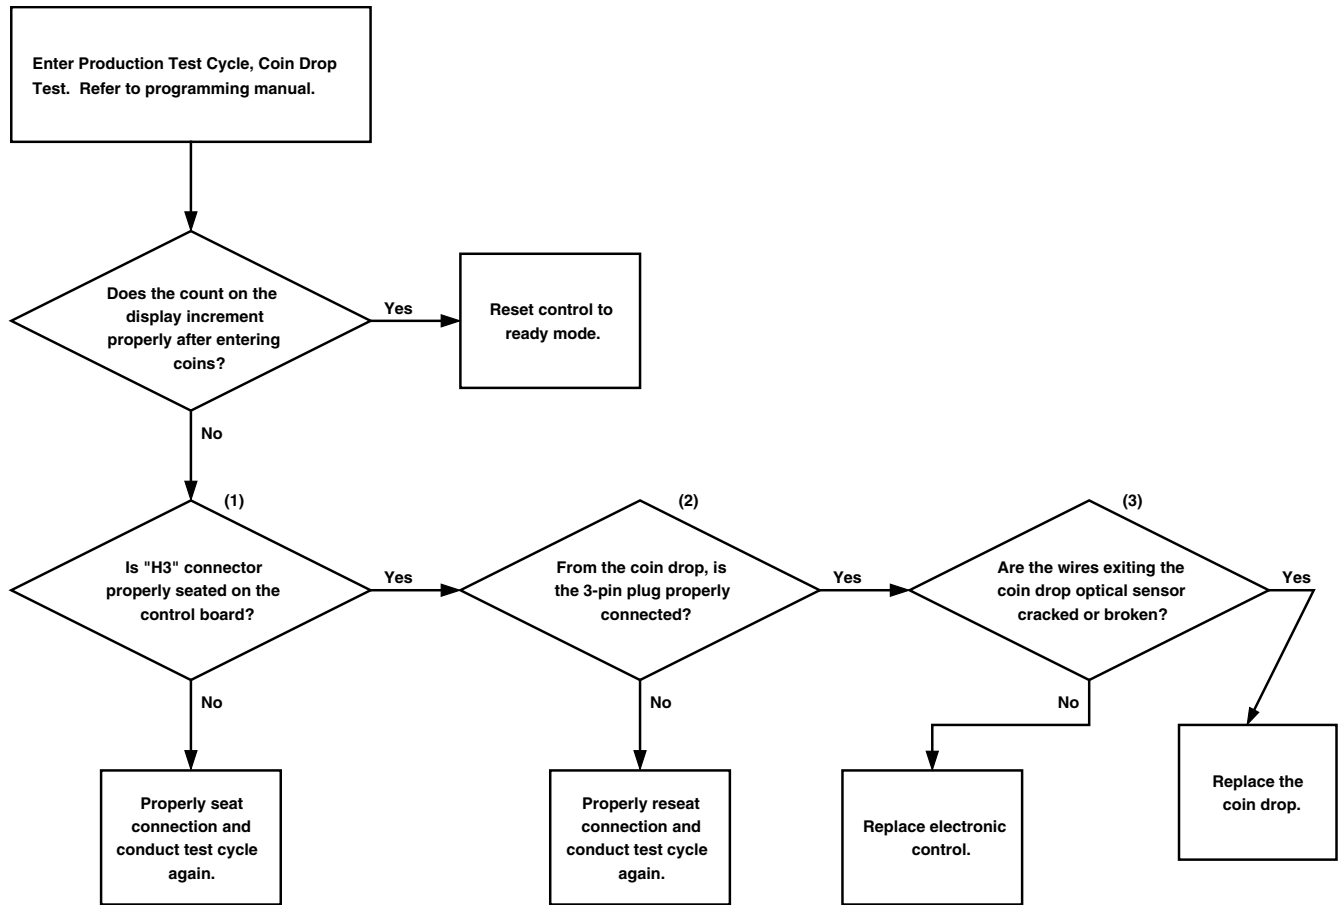


TLW300S

# Coins Ignored When Entered

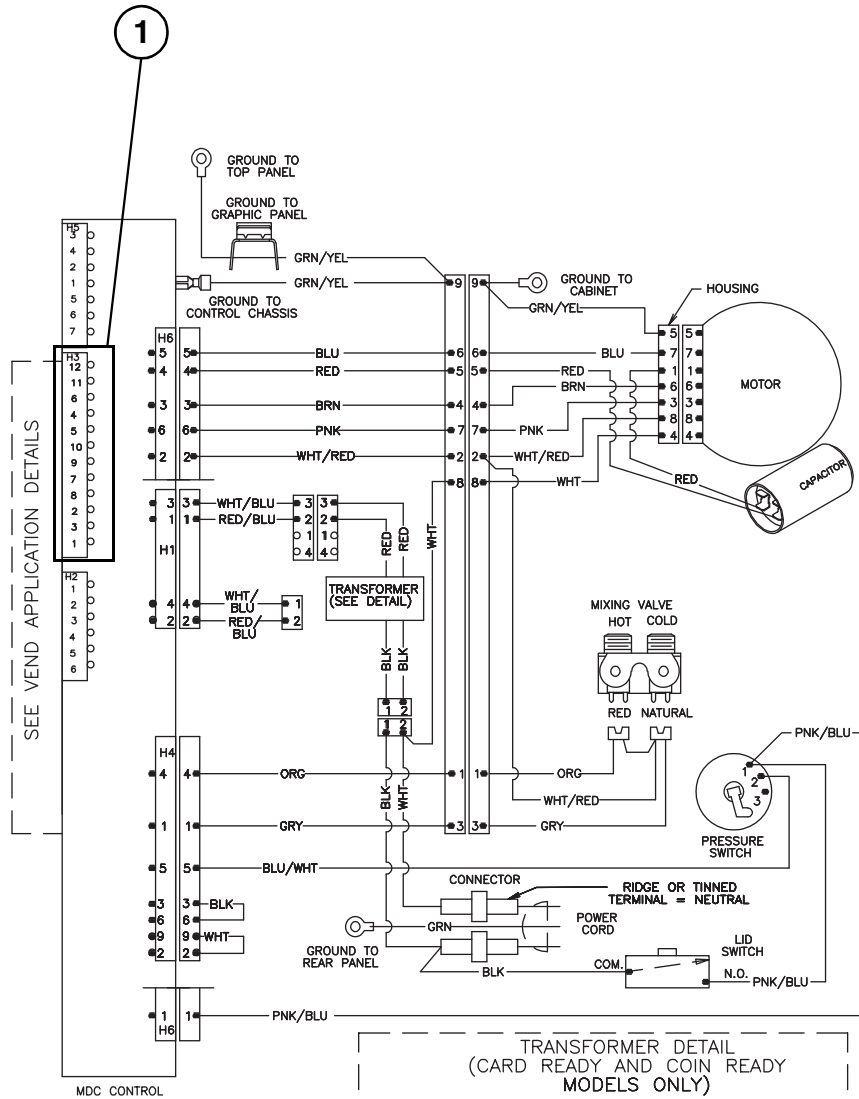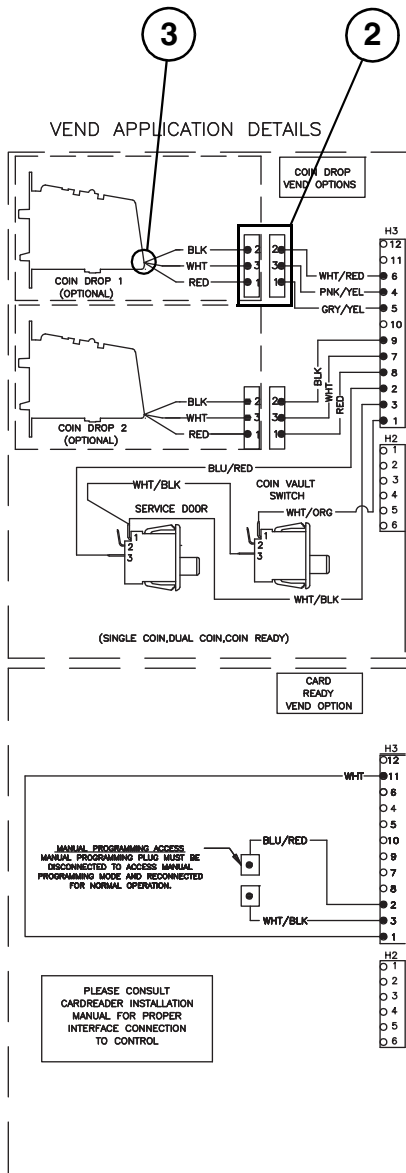

CONNECTION DIAGRAM

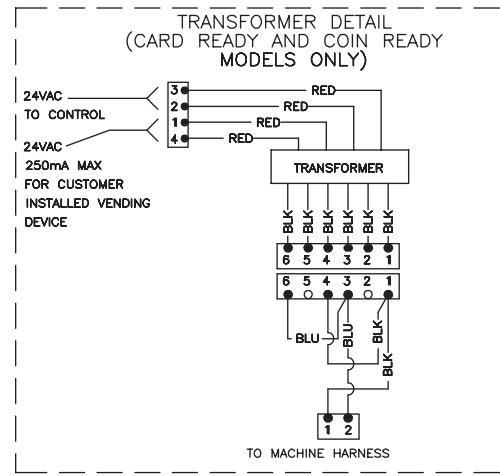


**WARNING**  
FAILURE TO INSTALL, MAINTAIN, AND/OR OPERATE THIS MACHINE ACCORDING TO MANUFACTURER'S INSTRUCTIONS MAY RESULT IN CONDITIONS WHICH CAN PRODUCE BODILY INJURY AND/OR PROPERTY DAMAGE.

THIS MACHINE MANUFACTURED UNDER ONE OR MORE OF THE FOLLOWING PATENTS:  
UNITED STATES NO: 3,253,874;  
3,838,755; 3,845,642  
CANADIAN NO: 1,008,265;  
994,685  
OTHER PATENTS PENDING

**NOTE**  
POWER SUPPLY WIRING MUST HAVE CORRECT POLARITY AND GROUNDING FOR THE UNIT TO OPERATE CORRECTLY.

### 43. Washer Will Not Fill (Pressure Switch Diagnostic)

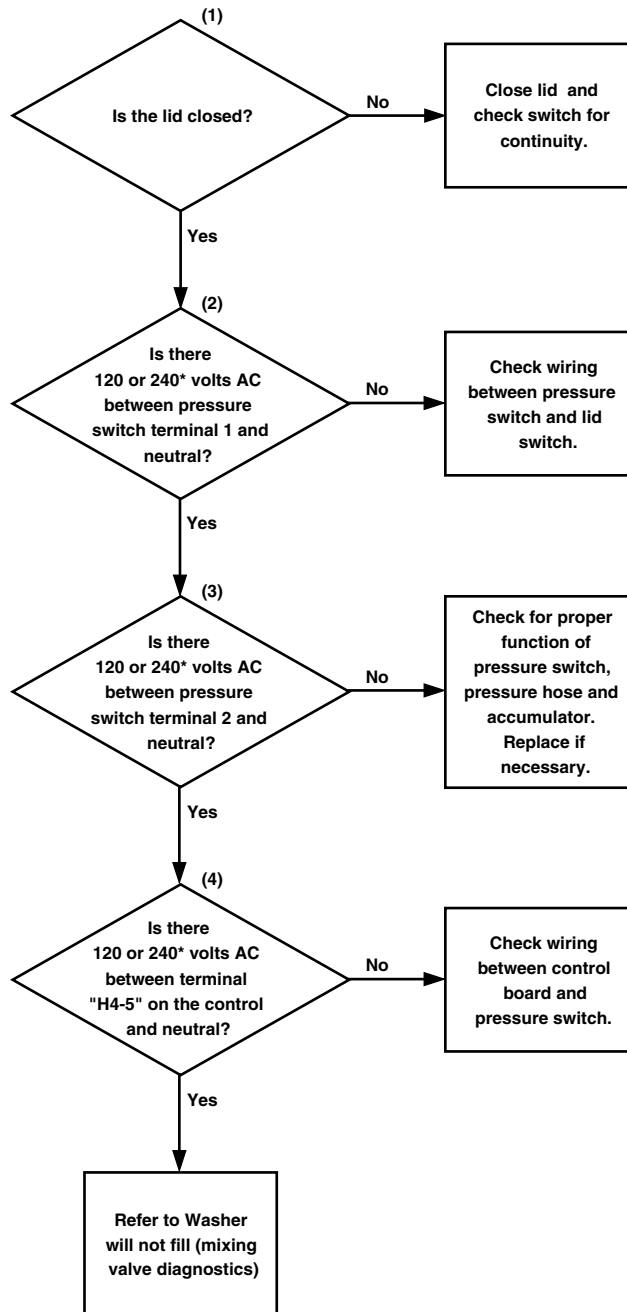


\*Refer to machine serial plate for correct voltage.


TLW303S




## Washer Will Not Fill (Pressure Switch Diagnostic)

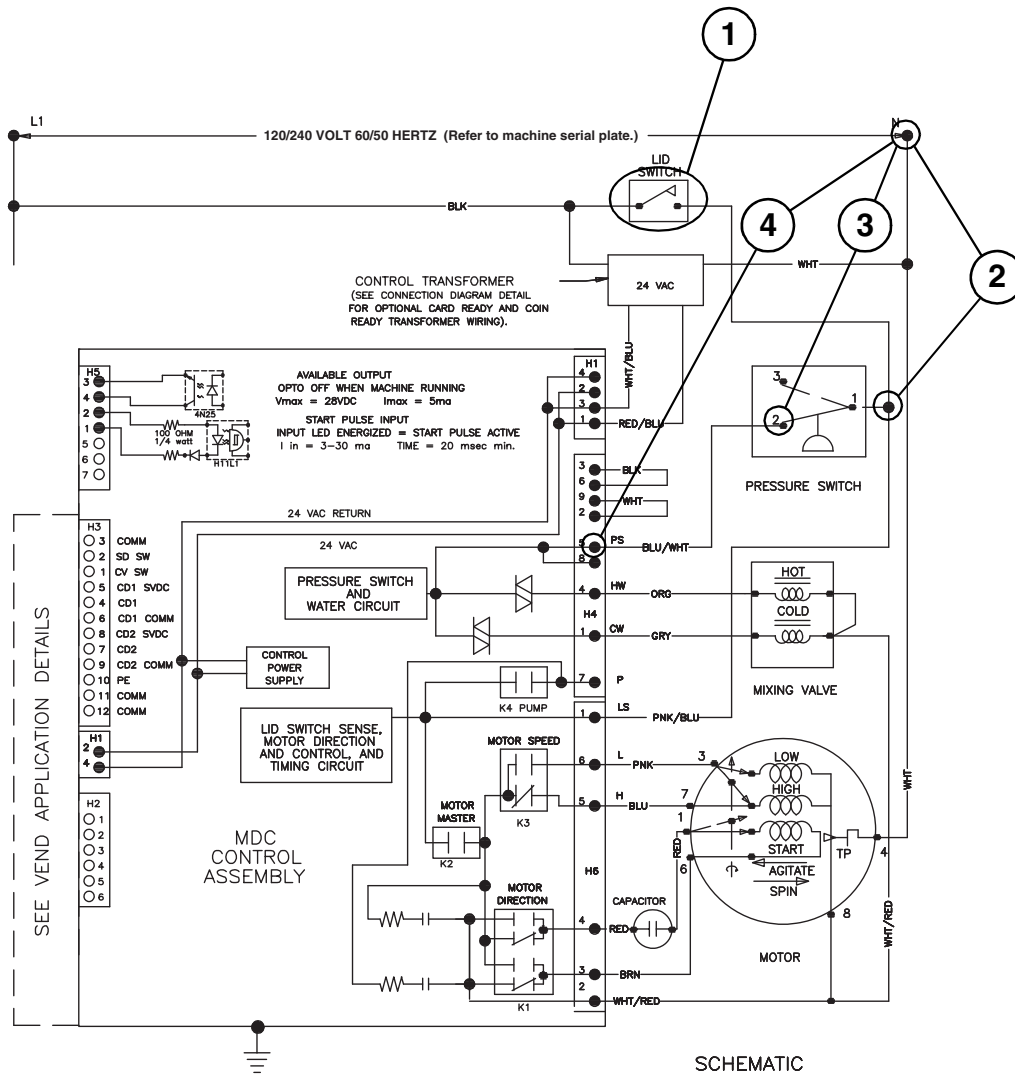

### VEND APPLICATIONS DETAILS

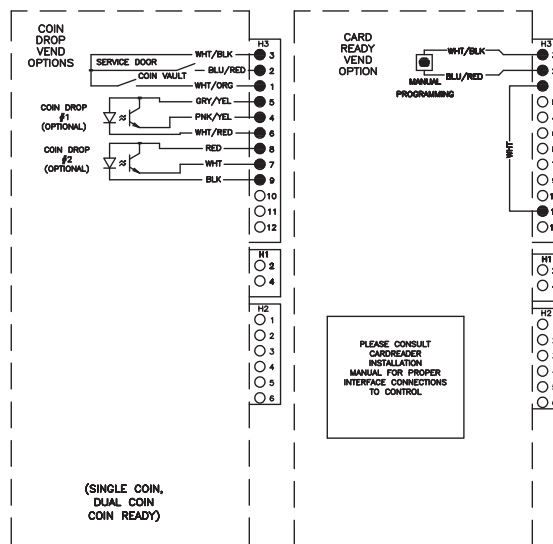


### 44. Washer Will Not Fill (Mixing Valve Diagnostic)

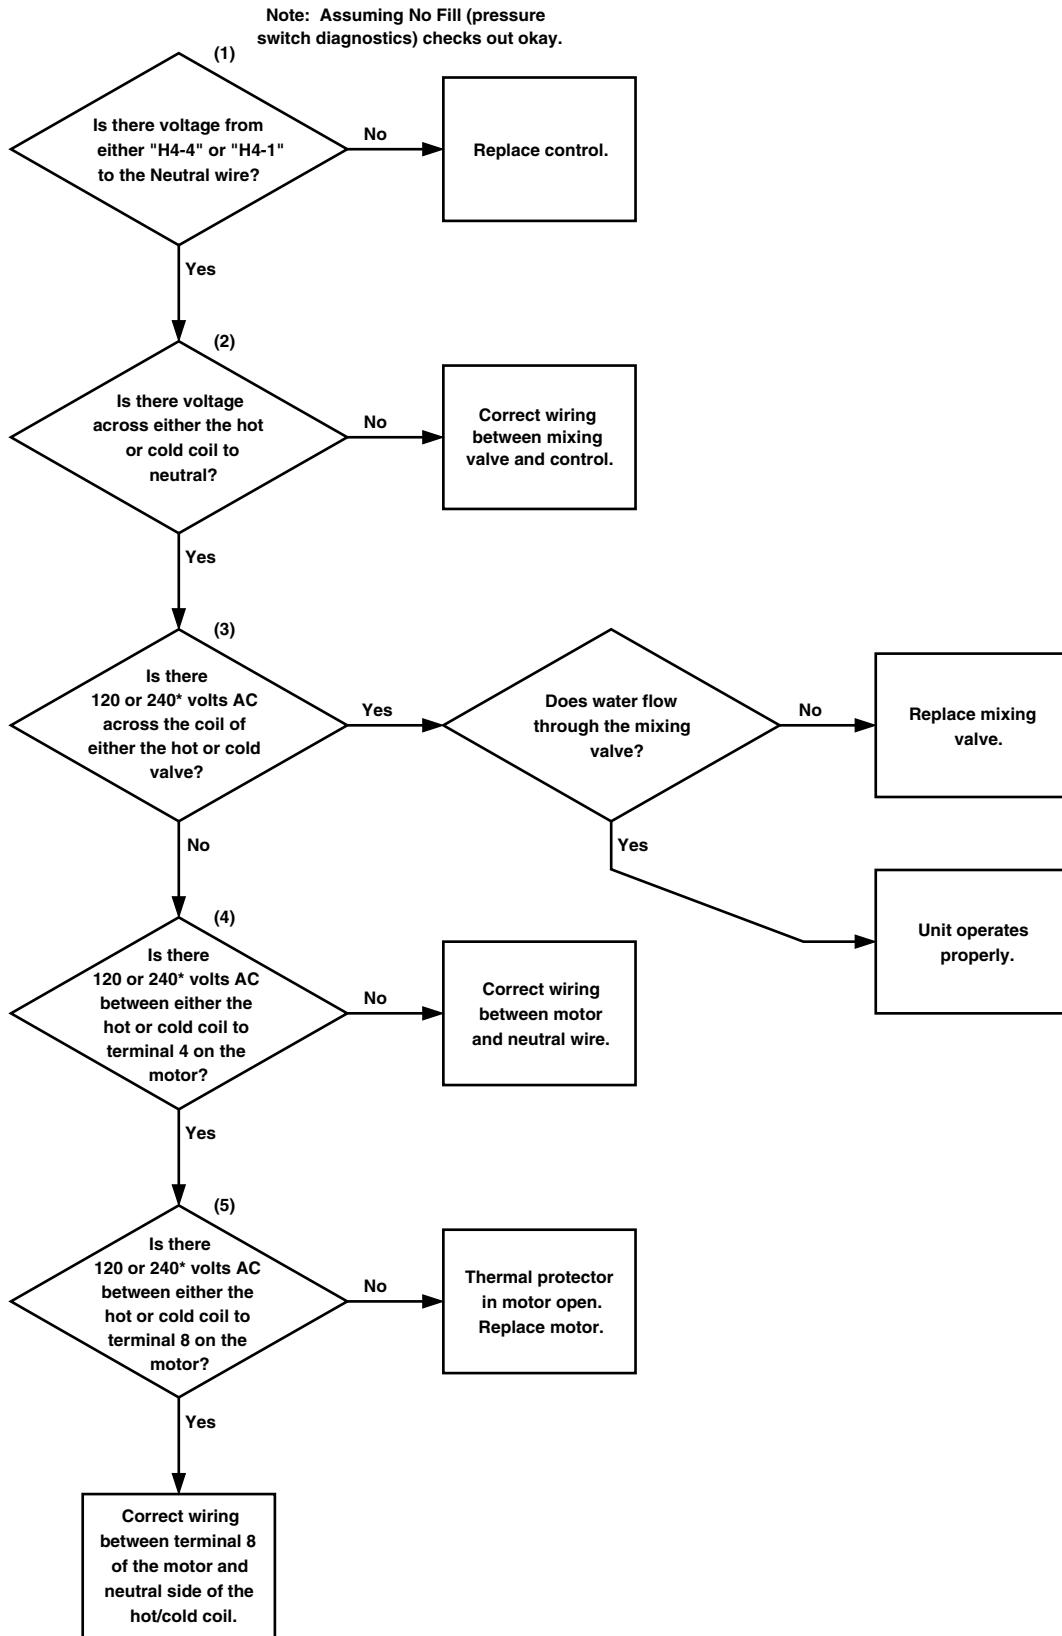


\*Refer to machine serial plate for correct voltage.


## Washer Will Not Fill (Mixing Valve Diagnostic)

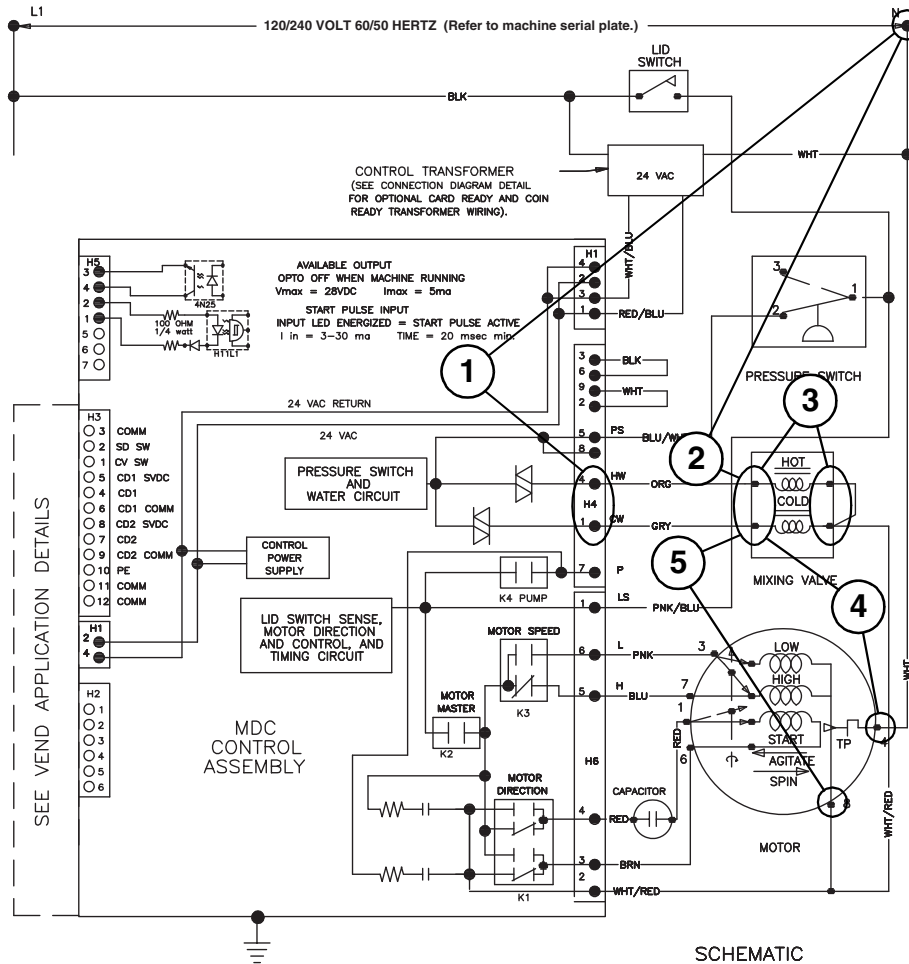

### VEND APPLICATIONS DETAILS

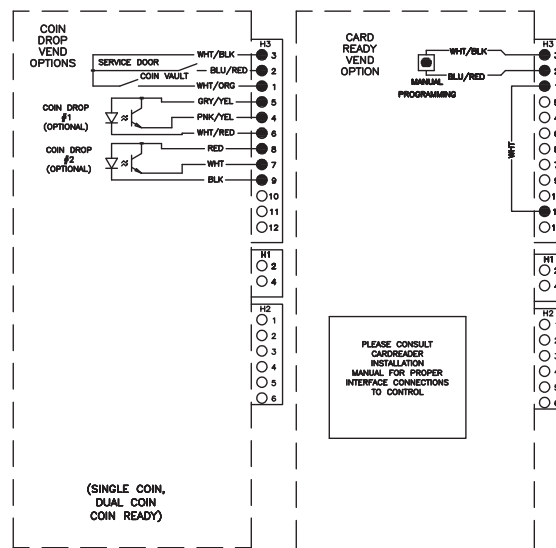


### 45. Washer Over Fills (Pressure Switch Open)

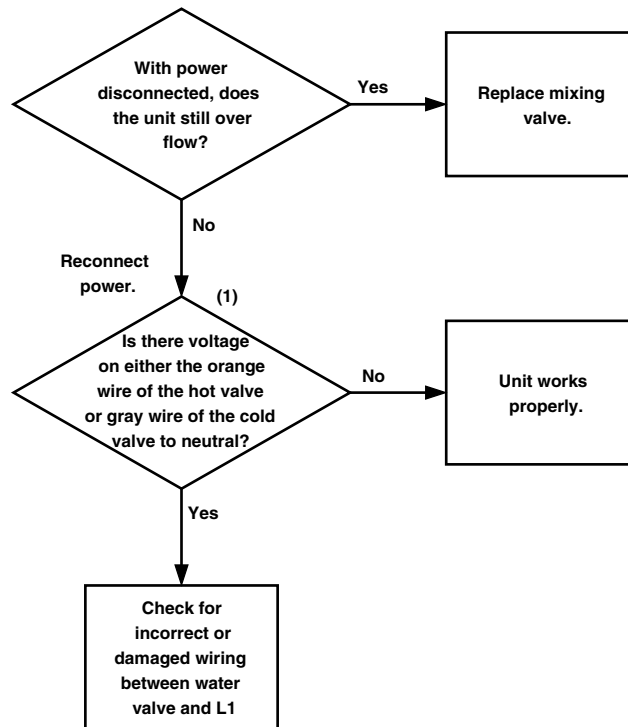


TLW287S


# Washer Over Fills (Pressure Switch Open)

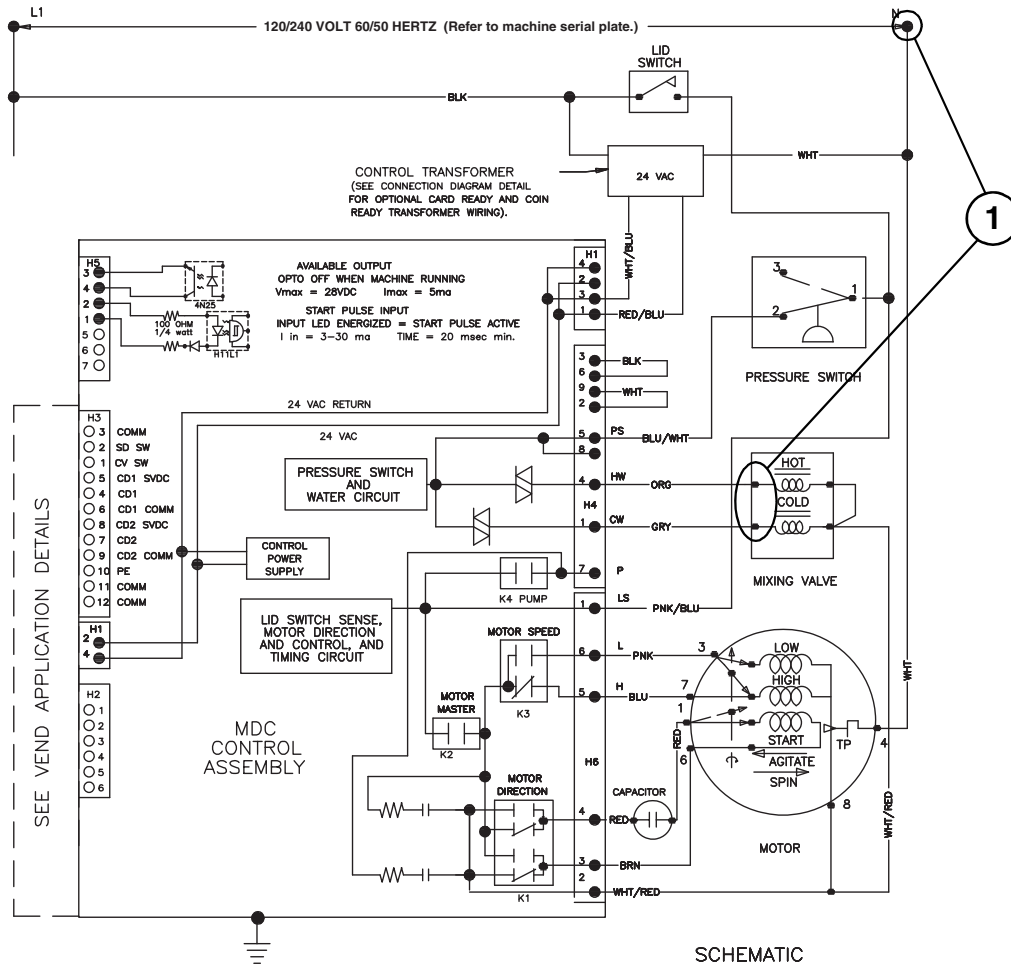

## VEND APPLICATIONS DETAILS

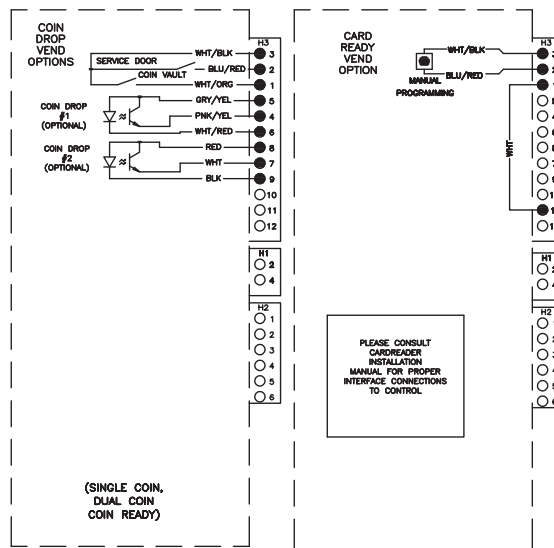


### 46. No Agitation – Low and High Speed

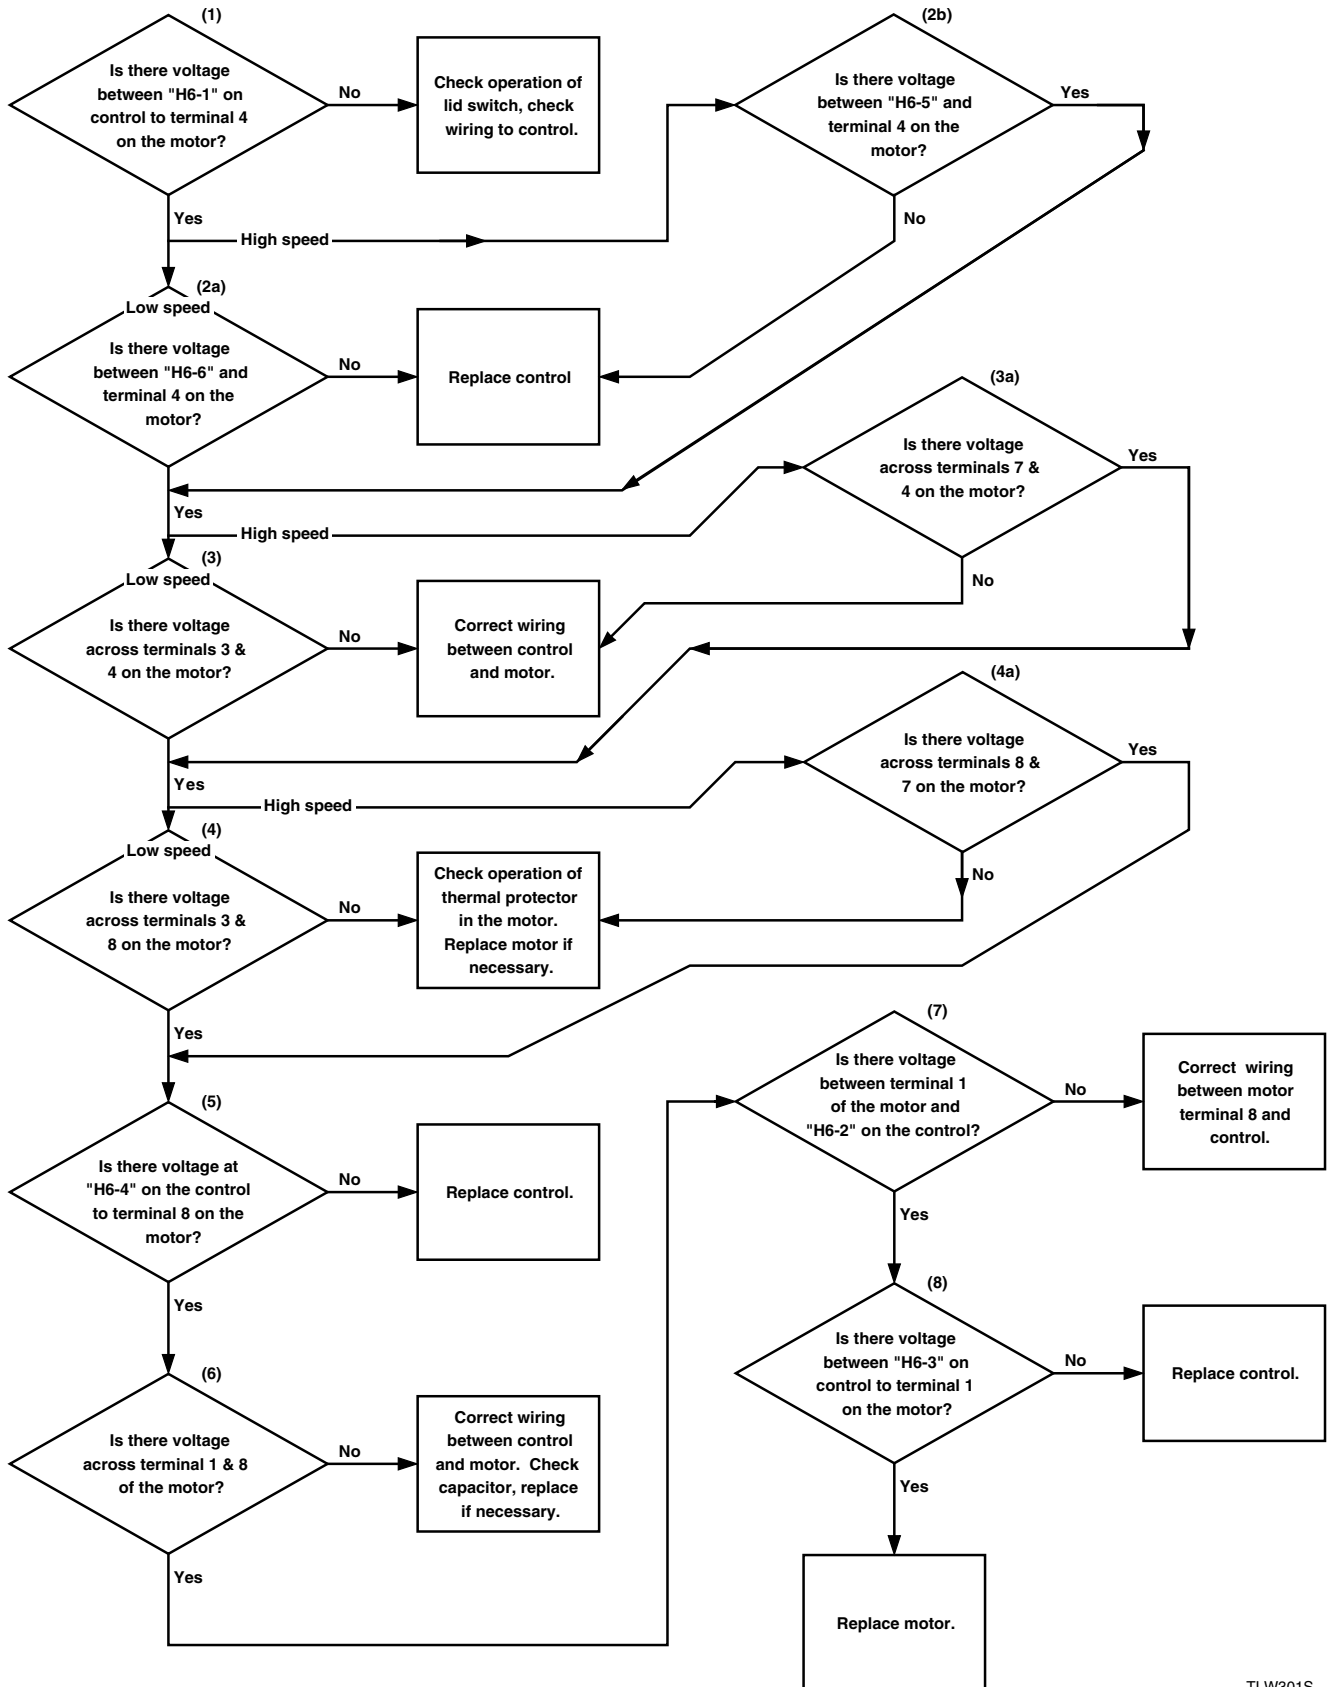


TLW301S

### No Agitation – Low and High Speed

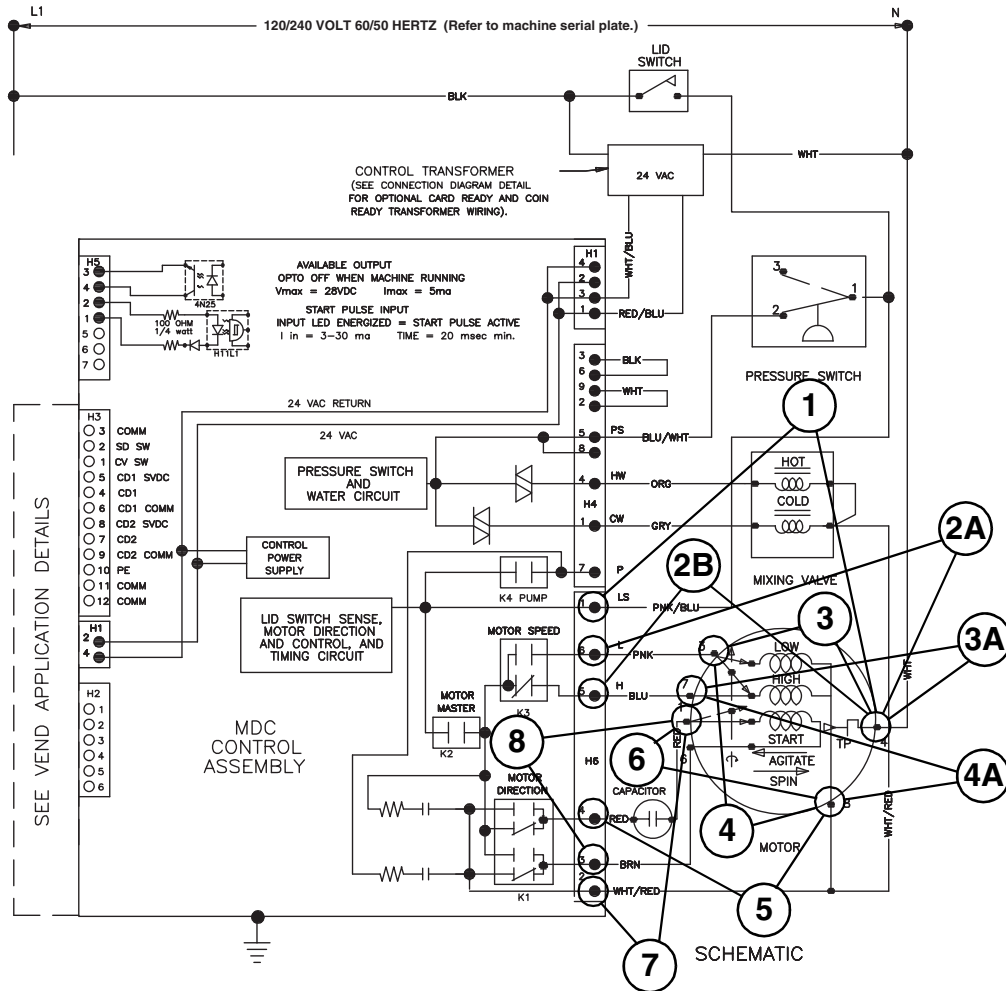


SEE VEND APPLICATION DETAILS

#### VEND APPLICATIONS DETAILS

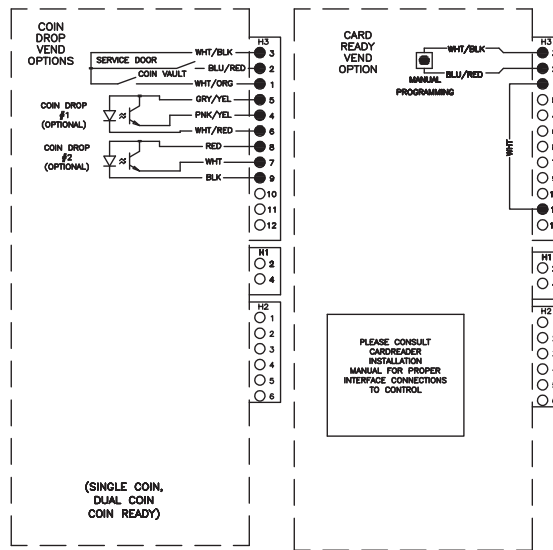

PLEASE CONSULT CARDREADER INSTALLATION MANUAL FOR PROPER INTERFACE CONNECTIONS TO CONTROL.


### 47. Washer Will Not Spin – High Speed

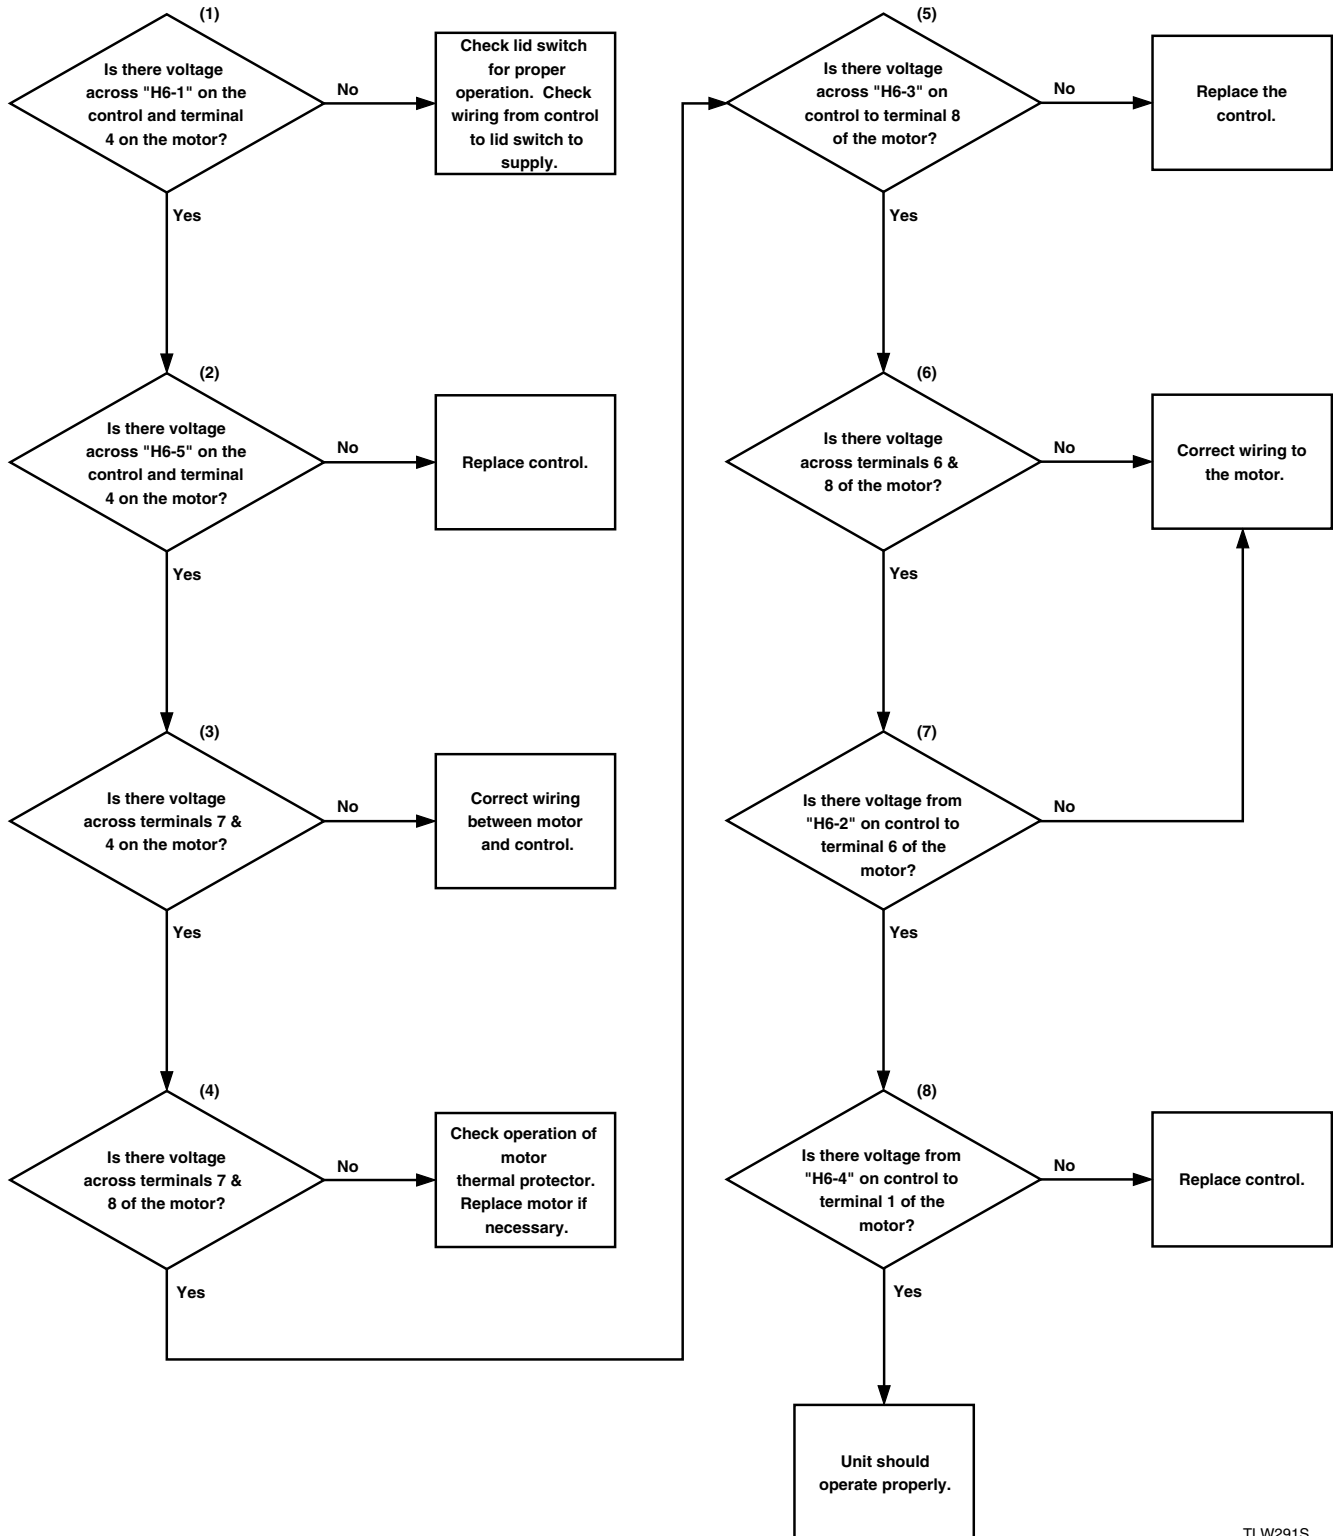


TLW291S




# Washer Will Not Spin – High Speed

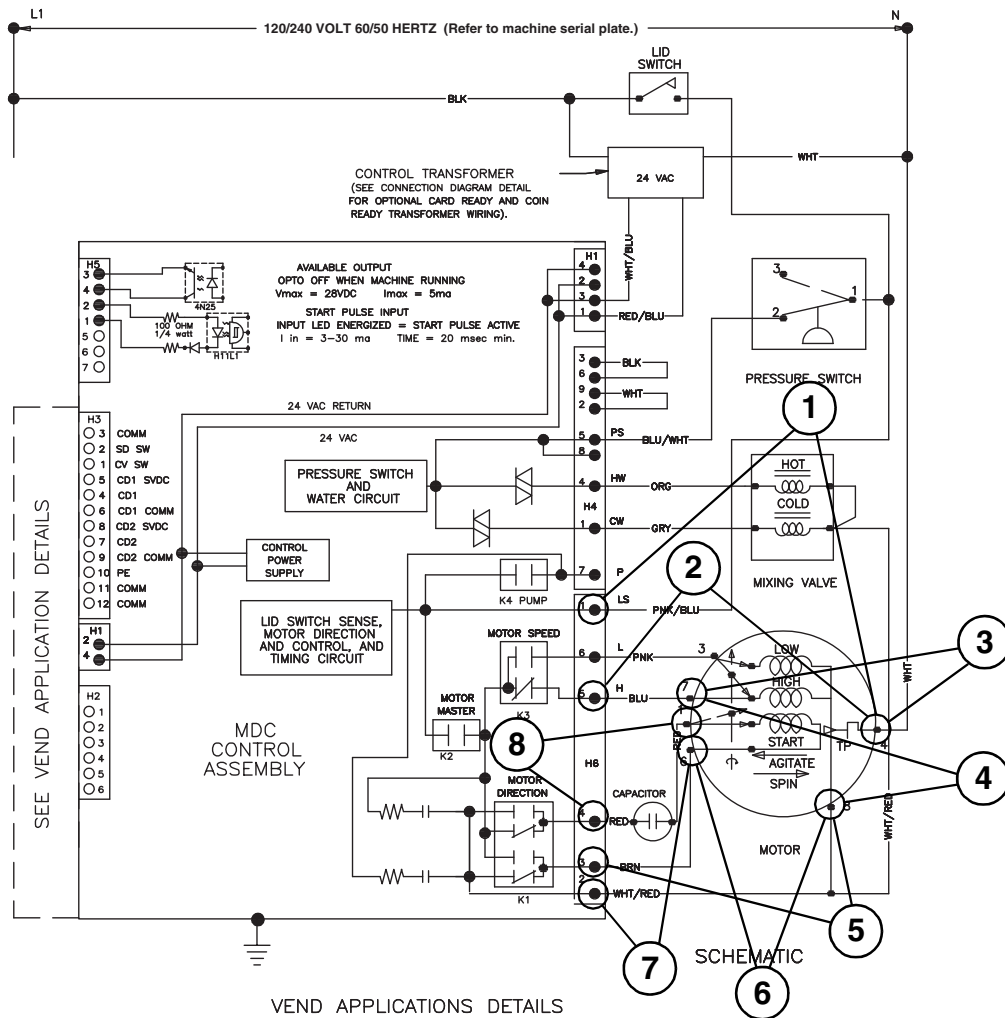

## VEND APPLICATIONS DETAILS

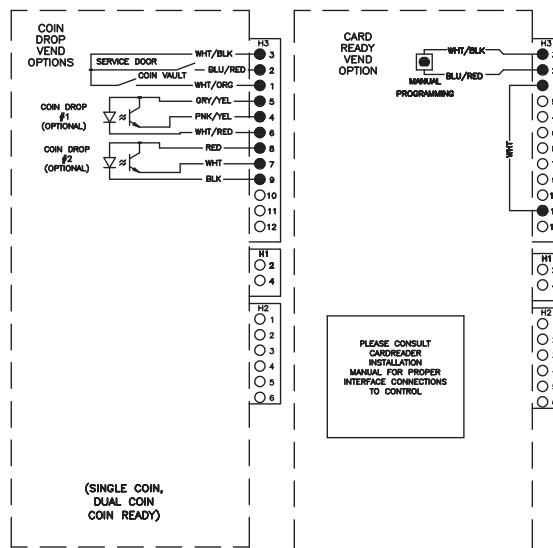


### 48. Washer Will Not Spin – Low Speed

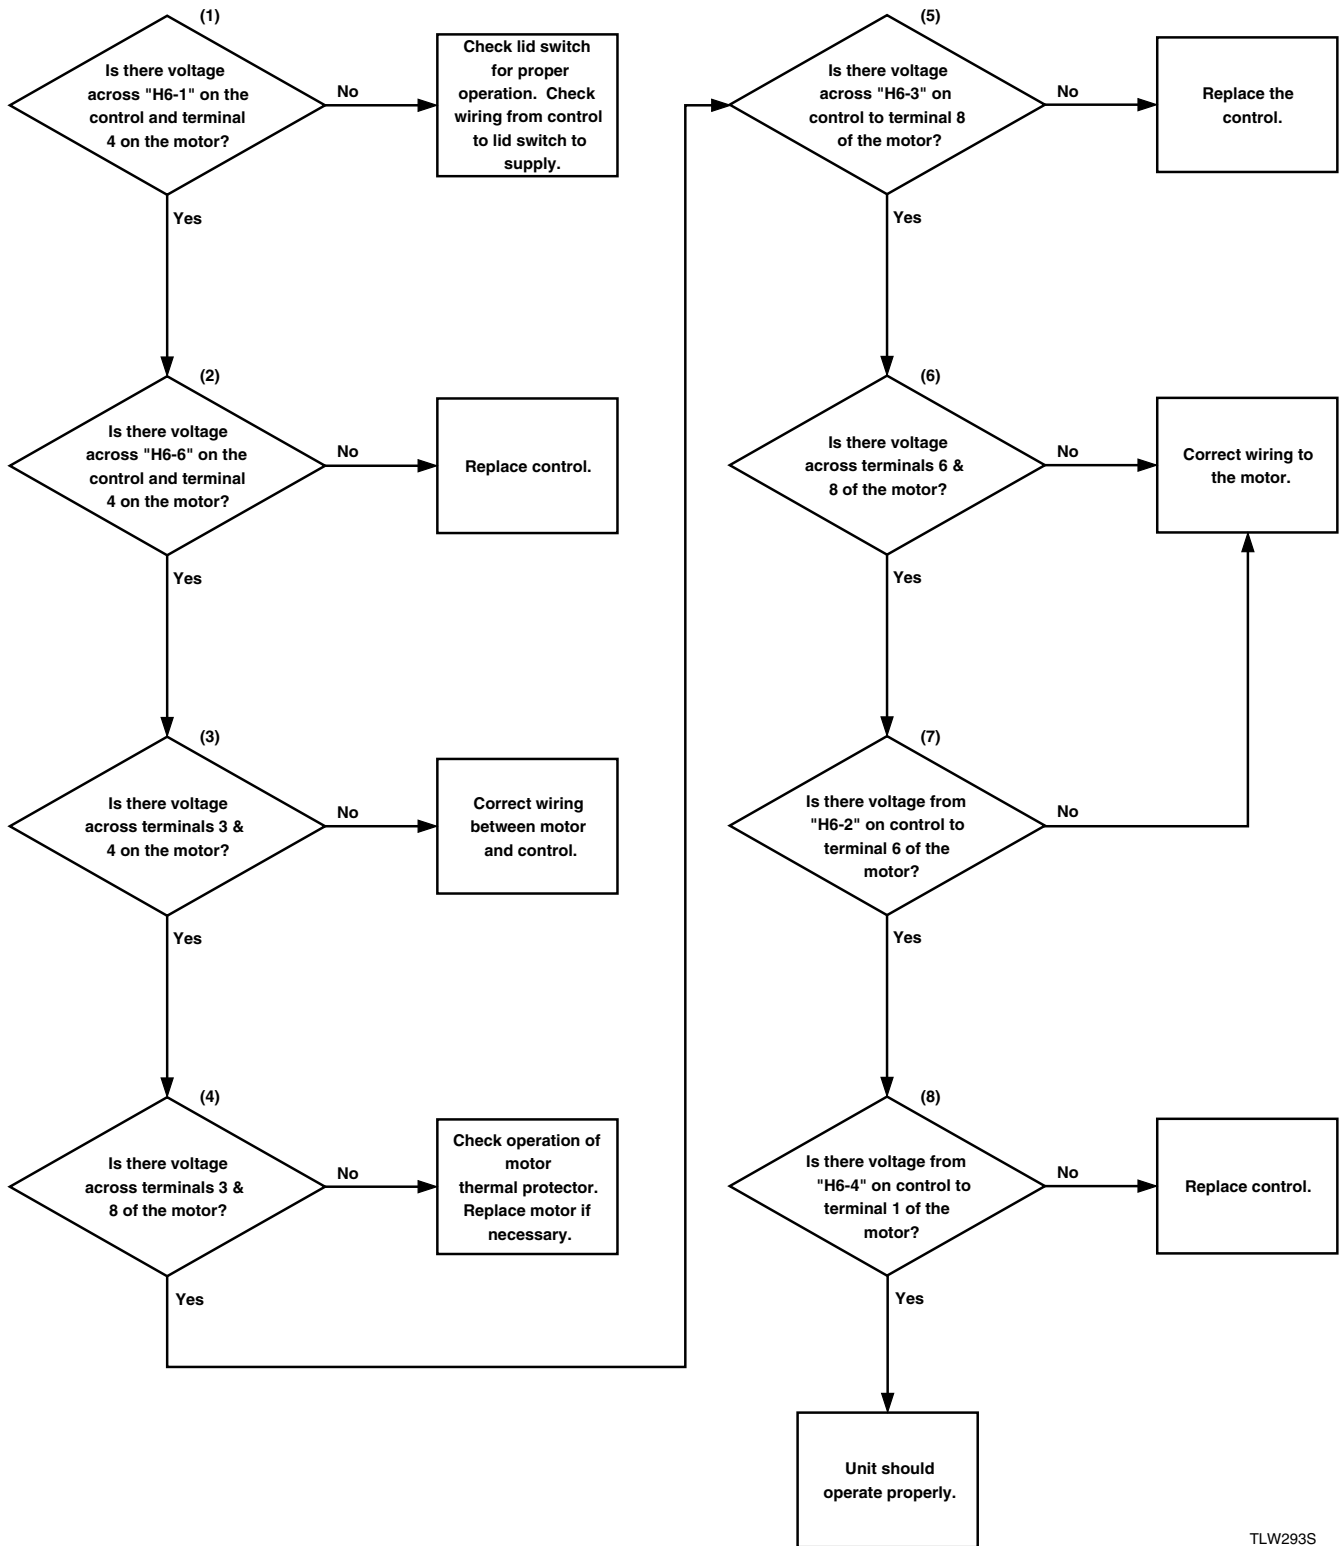


TLW293S

# Washer Will Not Spin – Low Speed

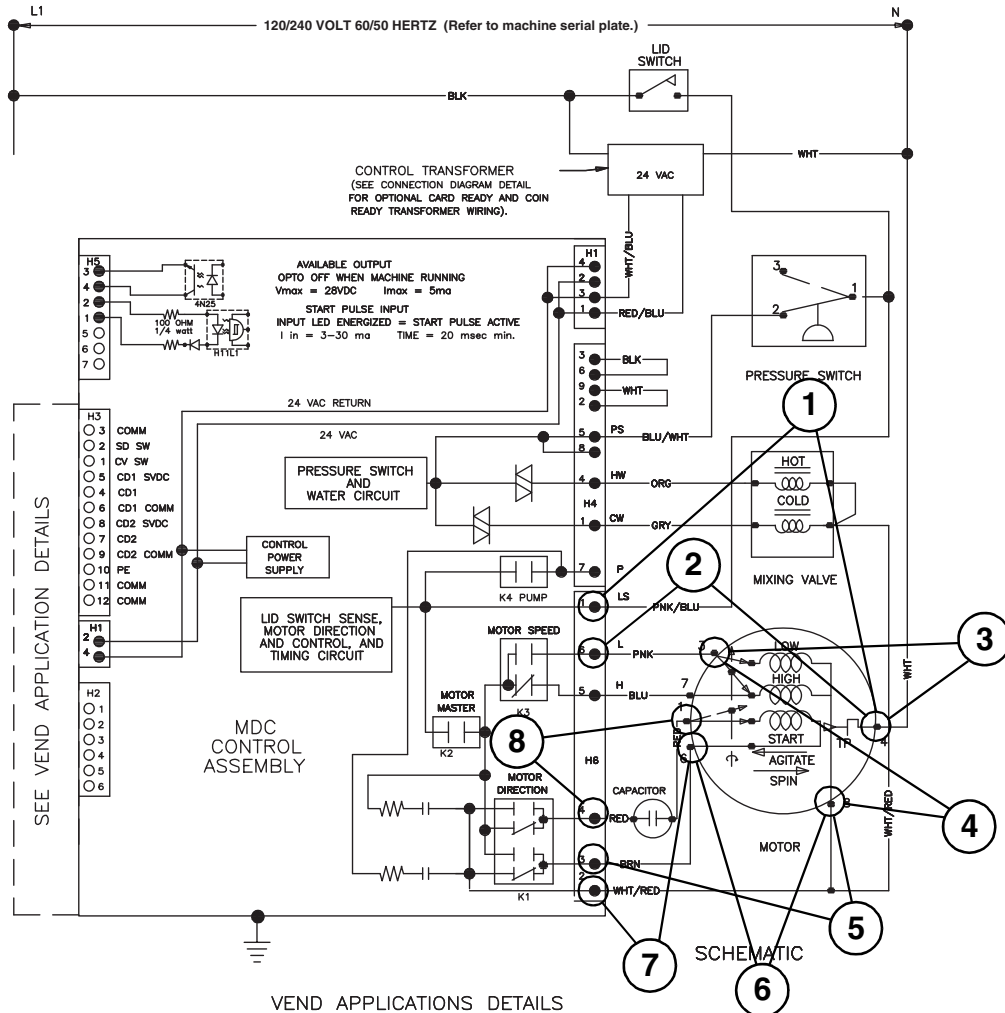

## VENDOR APPLICATIONS DETAILS

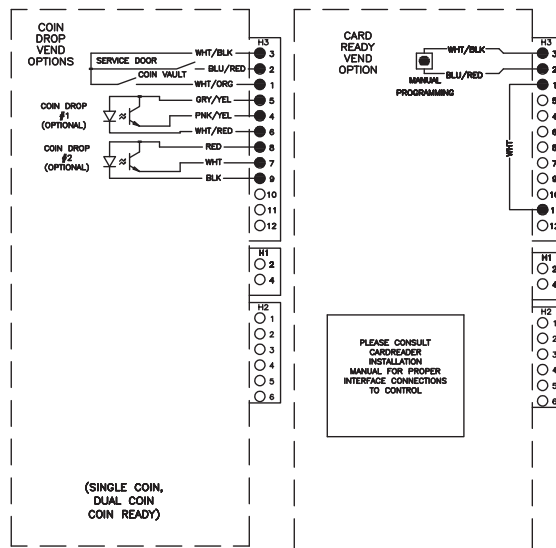



# Troubleshooting

## NetMaster Models



### WARNING

To reduce the risk of electric shock, fire, explosion, serious injury or death:

- Disconnect electric power to the washer before servicing.
- Never start the washer with any guards/panels removed.
- Whenever ground wires are removed during servicing, these ground wires must be reconnected to ensure that the washer is properly grounded.

W003

## 49. NetMaster Error Code Listing

Errors beginning with “EI” refer to NetMaster Infrared communication errors. Errors beginning with “EC” refer to NetMaster card reader errors. All other errors refer to electronic control errors.

Display	Description	Cause/Corrective Action
<b>EI:00</b>	General Communications Error	Communication problem. Re-aim Micro-wand and try again.
<b>EI:01</b>	Bad Transmission	Communication problem. Re-aim Micro-wand and try again.
<b>EI:02</b>	Device Timeout	Communication problem. Re-aim Micro-wand and try again.
<b>EI:03</b>	Invalid Command Code	Wrong machine type. Before downloading, ensure data is for current machine type.
<b>EI:04</b>	Expecting Upload Request	Communication problem. Re-aim Micro-wand and try again.
<b>EI:05</b>	Invalid or Out-of-Range Data	Wrong machine type. Before downloading, ensure data is for current machine type.
<b>EI:06</b>	Invalid Data Code	Wrong machine type. Before downloading, ensure data is for current machine type.
<b>EI:07</b>	Error Writing to RTC	Control failure. Control may need to be replaced.
<b>EI:08</b>	Error Writing to EEPROM	Control failure. Control may need to be replaced.
<b>EI:09</b>	CRC-16 Error	Communication problem. Re-aim Micro-wand and try again.
<b>EI:0A</b>	Invalid Machine Type	Wrong machine type. Before downloading, ensure data is for current machine type.
<b>EI:0F</b>	Invalid Wakeup or IR Disabled	Communication problem or IR is disabled. Manually enable IR on control/Re-aim Micro-wand and try again.
<b>EC:00</b>	General Communication Error	Communication problem. Try card again.
<b>EC:02</b>	Timeout Error	Communication problem. Try card again.

## Troubleshooting (NetMaster Models)

<b>Display</b>	<b>Description</b>	<b>Cause/Corrective Action</b>
<b>EC:03</b>	Invalid Command Code	Wrong machine type. Before downloading, ensure data is for current machine type.
<b>EC:05</b>	Invalid or Out-of-Range Data	Wrong machine type. Before downloading, ensure data is for current machine type.
<b>EC:06</b>	Invalid Data Code	Wrong machine type. Before downloading, ensure data is for current machine type.
<b>EC:09</b>	Corrupted Data Error	Communication error. Try card again.
<b>EC:0A</b>	Invalid Machine Type	Wrong machine type. Before downloading, ensure data is for current machine type.
<b>EC:19</b>	No Card Reader Communication	Communication problem. Power down, power up and try again. If error persists, control or reader is bad.
<b>EC:20</b>	Unreadable Card	Bad card/ dirty contact. Clean chip on card or card reader contacts. Try card again. If error persists, card may be bad.
<b>EC:21</b>	Security ID Mismatch	Wrong card. Use card with correct security code.
<b>EC:22</b>	Site Code Mismatch	Wrong card. Use card with correct site code.
<b>EC:23</b>	Card Maximum Value Exceeded	Value on card over max. Use a card which does not exceed maximum value.
<b>EC:24</b>	Insufficient Memory on Card	Card memory is full. Download card contents to PC and clear card for re-use.
<b>EC:25</b>	Card Reader Malfunction	Bad Card Reader. Card Reader may need to be replaced.
<b>EC:26</b>	Card Write Error	Try card again. If error persists, card may be bad.
<b>EC:27</b>	Diagnostic Test Card Write Failure	Bad Card Reader. Card Reader may need to be replaced.
<b>EC:28</b>	Diagnostic Test Card Read Failure	Bad Card Reader. Card Reader may need to be replaced.
<b>EC:29</b>	Diagnostic Test Memory Test Failure	Bad Card Reader. Card Reader may need to be replaced.
<b>EC:2A</b>	Diagnostic Test Card Interface Failure	Bad Card Reader. Card Reader may need to be replaced.
<b>EC:2b</b>	Diagnostic Test Flash Checksum Failure	Bad Card Reader. Card Reader may need to be replaced.
<b>EC:2C</b>	Bad Biberon or Non-biberon Device	Bad Card Reader. Card Reader may need to be replaced.
<b>EC:2d</b>	Firmware Update Failed, S/W (Software) Intact	Firmware load failed. Card Reader may need to be replaced.


<b>Display</b>	<b>Description</b>	<b>Cause/Corrective Action</b>
<b>EC:2E</b>	Firmware Update Failed, S/W Not Intact	Bad firmware in reader. Card Reader may need to be replaced.
<b>EC:2F</b>	Firmware Updated, S/W Not Intact	Bad firmware in reader. Card Reader may need to be replaced.
<b>EC:30</b>	Timeout Error	Card Reader may need to be replaced.
<b>EC:31</b>	Hotlisted Card Inserted Into Reader	Card hotlisted. Control will destroy card.
<b>EC:50</b>	Loyalty Purse Read Error	Try card again. If error persists, card may be bad.
<b>EC:56</b>	Loyalty Purse Write Error	Try card again. If error persists, card may be bad.
<b>Right most DP (decimal point) Lit</b>	Network Communication Error	Communication problem. Wait for 1.5 minutes for error to clear. If it doesn't, power-down and power-up the machine. If error persists, control or Network Board may need to be replaced.
<b>Err</b>	Coin Error	Invalid coin pulse.
<b>Alrm</b>	Break-in Alarm Error	Service door or coin vault switches.
<b>OFF</b>	Break-in Alarm Shutdown Error	Service door or coin vault switches.
<b>E:FL</b>	Fill Error	Pressure switch fails to open in 30 minutes in any fill agitate cycle.
<b>E:dr</b>	Drain Error	Maximum drain time exceeded or water sensed at end of spin step.
<b>E:00</b>	General Error	Re-aim Micro-wand and try again.
<b>E:01</b>	Proximity Error	Micro-wand is improperly aimed at infrared communicator (angle or distance). Re-aim Micro-wand and try again.
<b>E:02</b>	IR Communication Disconnection	Micro-wand removed before communication complete. Re-aim micro-wand and try again.
<b>E:05</b>	Invalid Value Communication	Invalid code downloaded from Micro-wand to Electronic Control. Before downloading, ensure data is for current machine type.
<b>E:07</b>	Inoperative Control	Replace control.
<b>E:08</b>	Inoperative Control	Replace control.
<b>E:09</b>	Proximity Error	Micro-wand is improperly aimed at infrared communicator (angle or distance). Re-aim Micro-wand and try again.
<b>EI:0A</b>	Proximity Error	Micro-wand is improperly aimed at infrared communicator (angle or distance). Re-aim Micro-wand and try again.

## Troubleshooting (NetMaster Models)

<b>Display</b>	<b>Description</b>	<b>Cause/Corrective Action</b>
<b>E:0B</b>	IR Communication Disconnection	Micro-wand removed before communication complete. Re-aim Micro-wand and try again.
<b>E:0C</b>	IR Communication Disconnection	Micro-wand removed before communication complete. Re-aim Micro-wand and try again.
<b>E:0d</b>	Pressure Switch Error	Check fill and drain hoses for improper installation and kinks. Check fill electrical circuit. Replace inoperative switches or wires.
<b>E:0F</b>	IR Communicator Programmed Off	Reprogram infrared communicator on. Manually enable IR on control/Re-aim micro-wand and try again.
<b>Err</b>	Coin Error	Inoperative coin sensor. Check coin drop area and remove obstructions. Possible tampering. Evaluate security procedures.




## 50. Microwand Does Not Communicate With Control

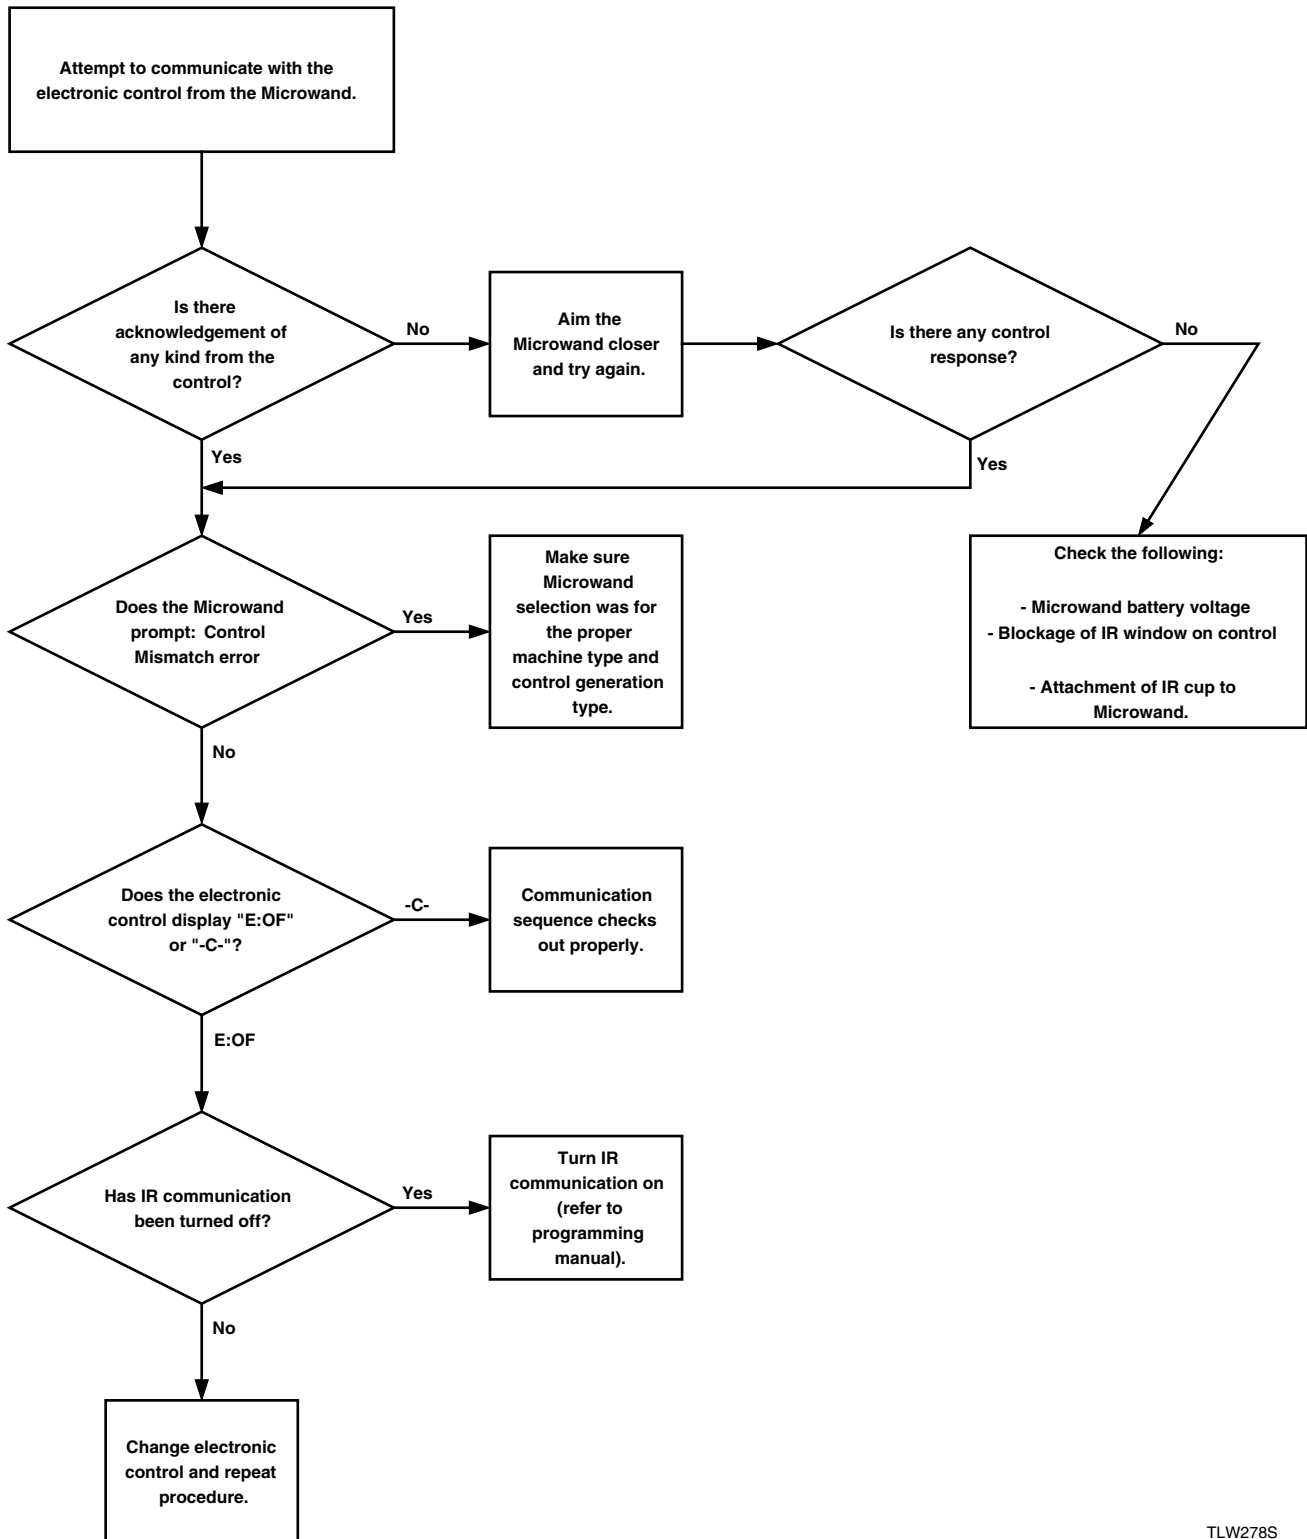


TLW278S

## 51. No Visible Display on Control

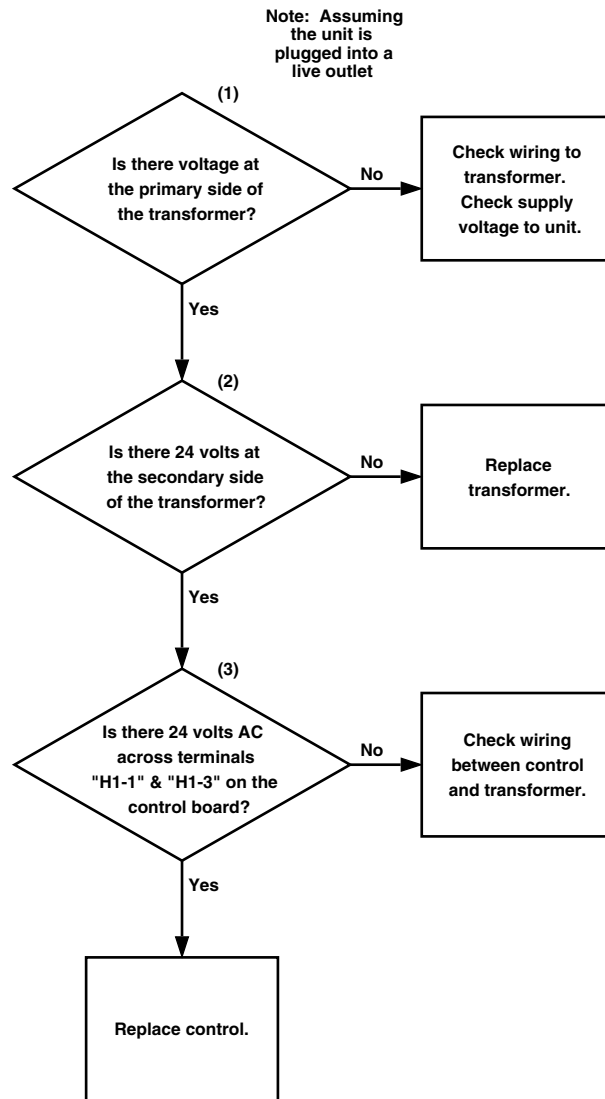


TLW279S

# No Visible Display on Control

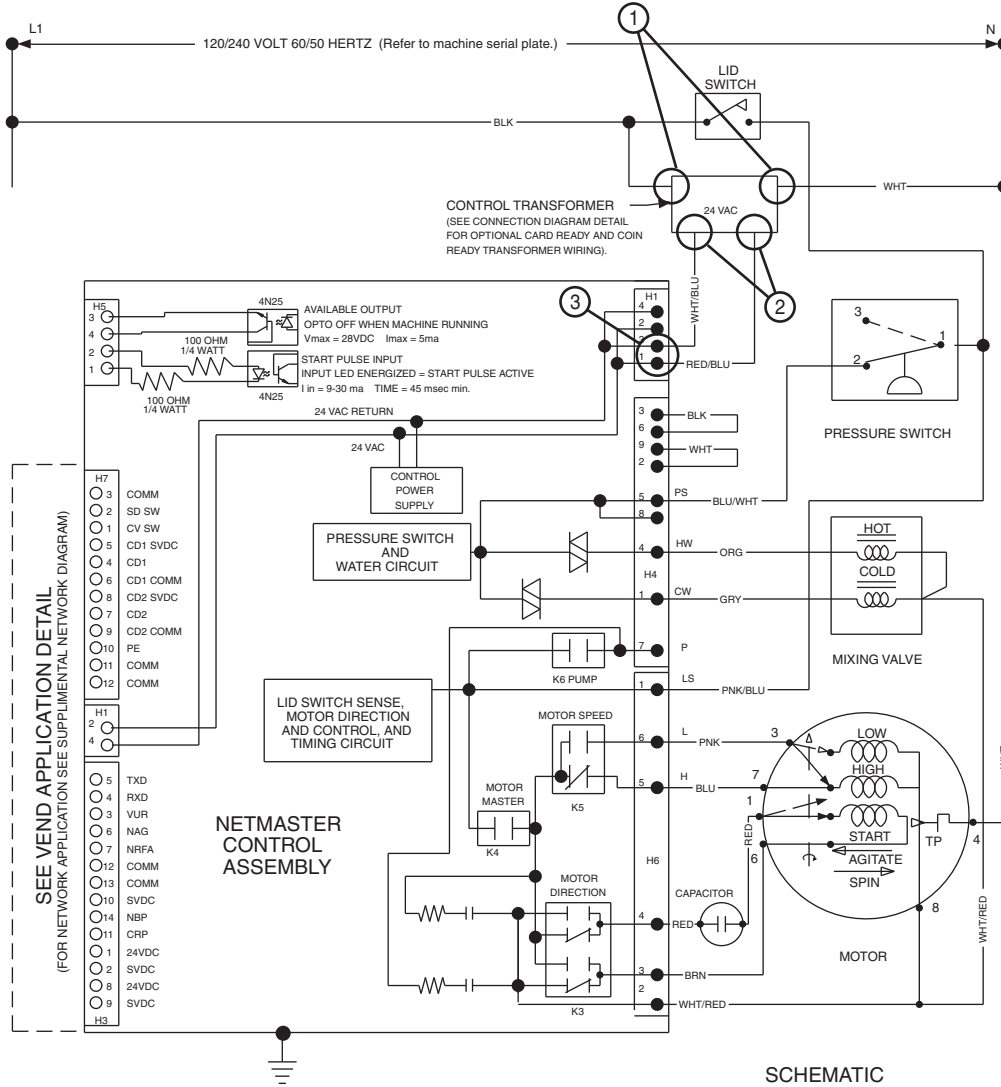


SEE VEND APPLICATION DETAIL  
(FOR NETWORK APPLICATION SEE SUPPLEMENTAL NETWORK DIAGRAM)

## VEND APPLICATIONS DETAILS

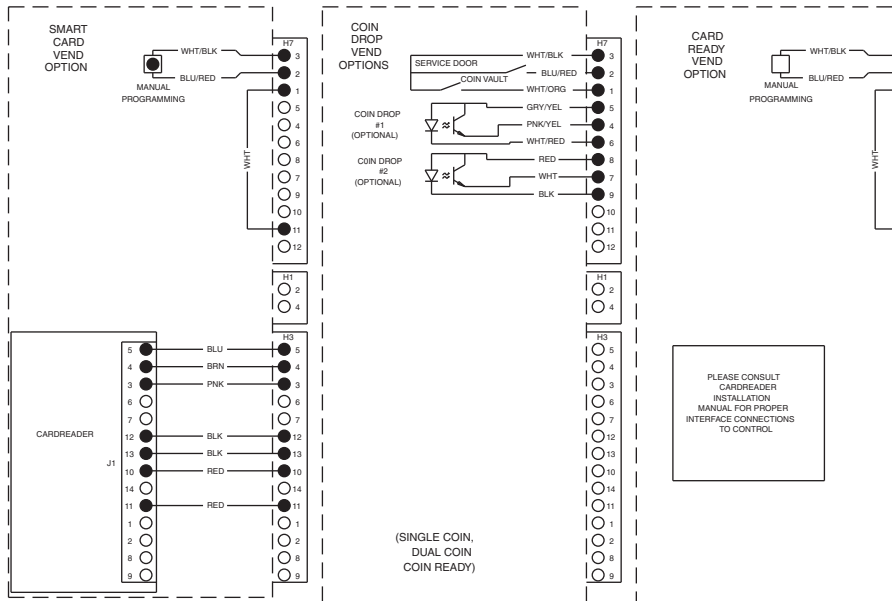

TLW318S



## 52. Coins Ignored When Entered

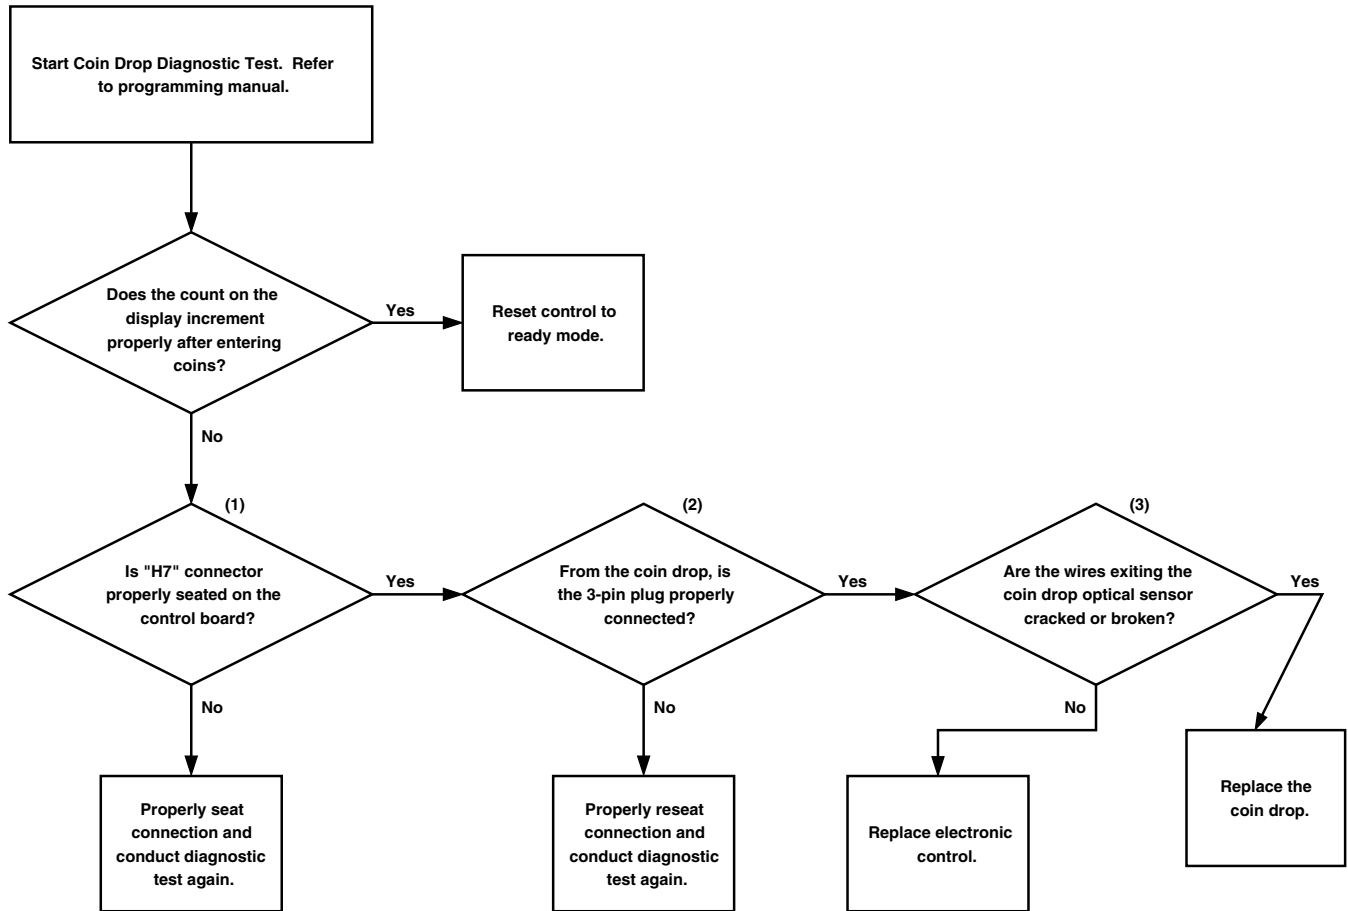


TLW281S

Coins Ignored When Entered

VEND APPLICATION DETAILS

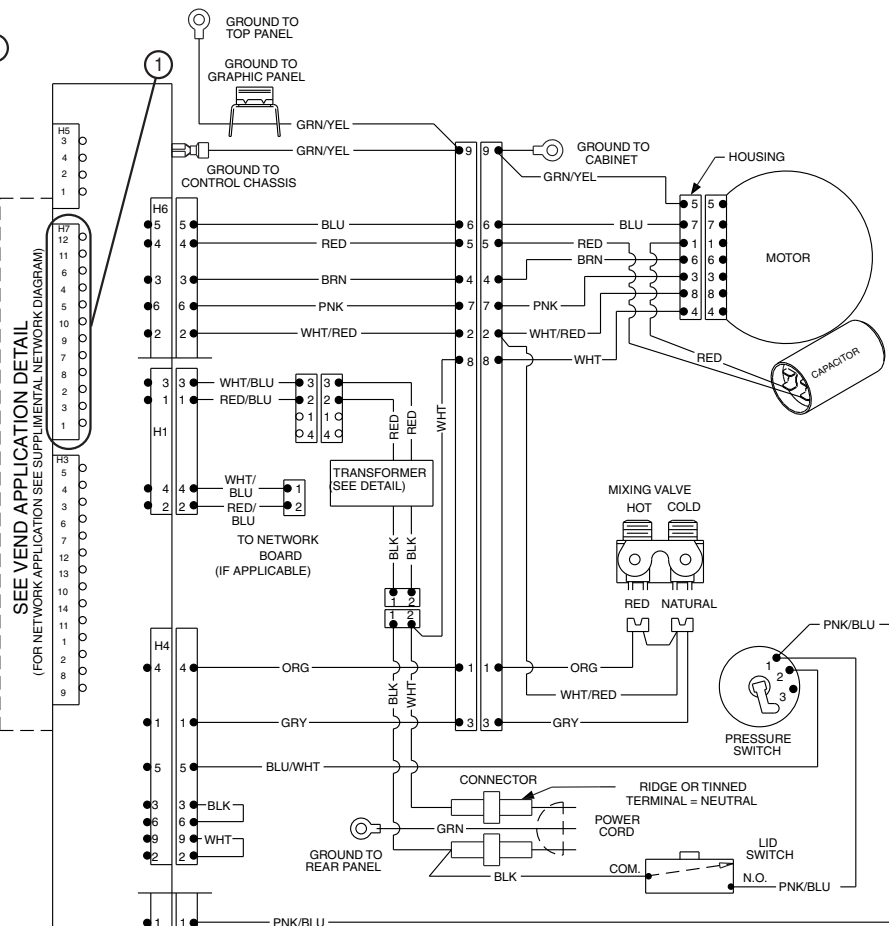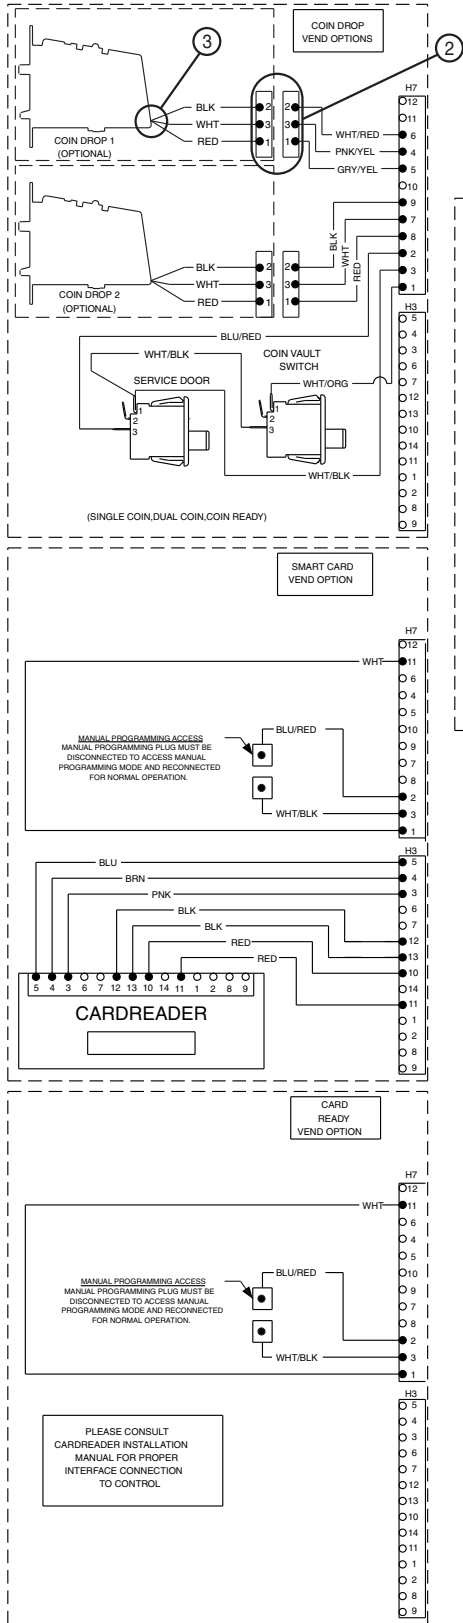

TRANSFORMER DETAIL (CARD READY AND COIN READY MODELS ONLY)

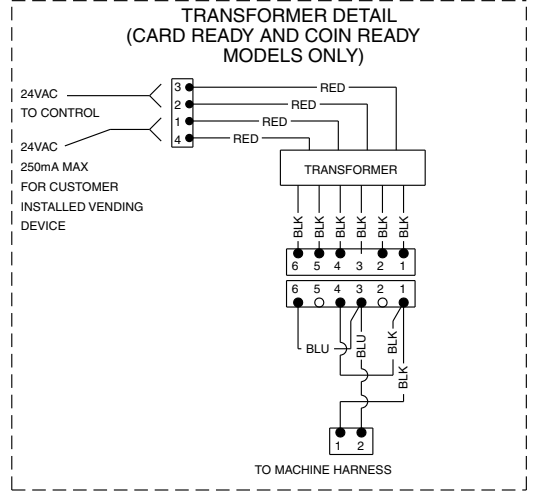

CONNECTION DIAGRAM


**WARNING**  
FAILURE TO INSTALL, MAINTAIN, AND/OR OPERATE THIS MACHINE ACCORDING TO MANUFACTURER'S INSTRUCTIONS MAY RESULT IN CONDITIONS WHICH CAN PRODUCE BODILY INJURY AND/OR PROPERTY DAMAGE.

THIS MACHINE MANUFACTURED UNDER ONE OR MORE OF THE FOLLOWING PATENTS:  
UNITED STATES NO: 3,253,874;  
3,838,755; 3,845,642  
CANADIAN NO: 1,008,265;  
994,685  
OTHER PATENTS PENDING

**NOTE**  
POWER SUPPLY WIRING MUST HAVE CORRECT POLARITY AND GROUNDING FOR THE UNIT TO OPERATE CORRECTLY.

TLW282S


### 53. Washer Will Not Fill (Pressure Switch Diagnostic)

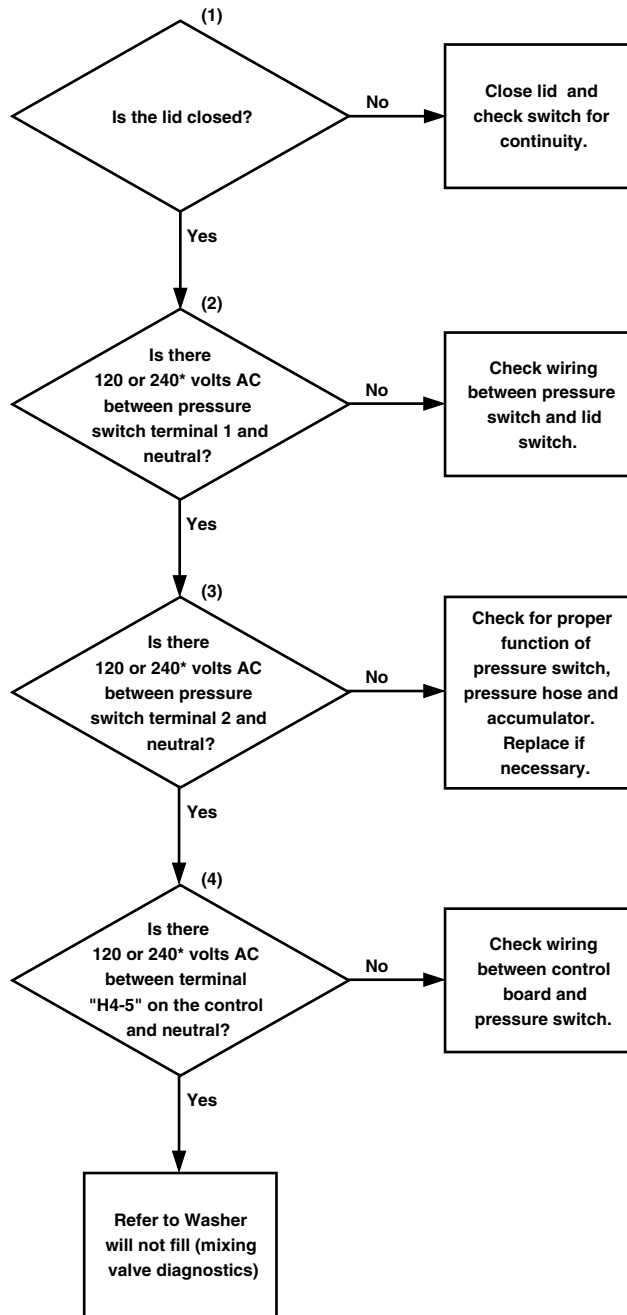


\*Refer to machine serial plate for correct voltage.

TLW303S


### Washer Will Not Fill (Pressure Switch Diagnostic)

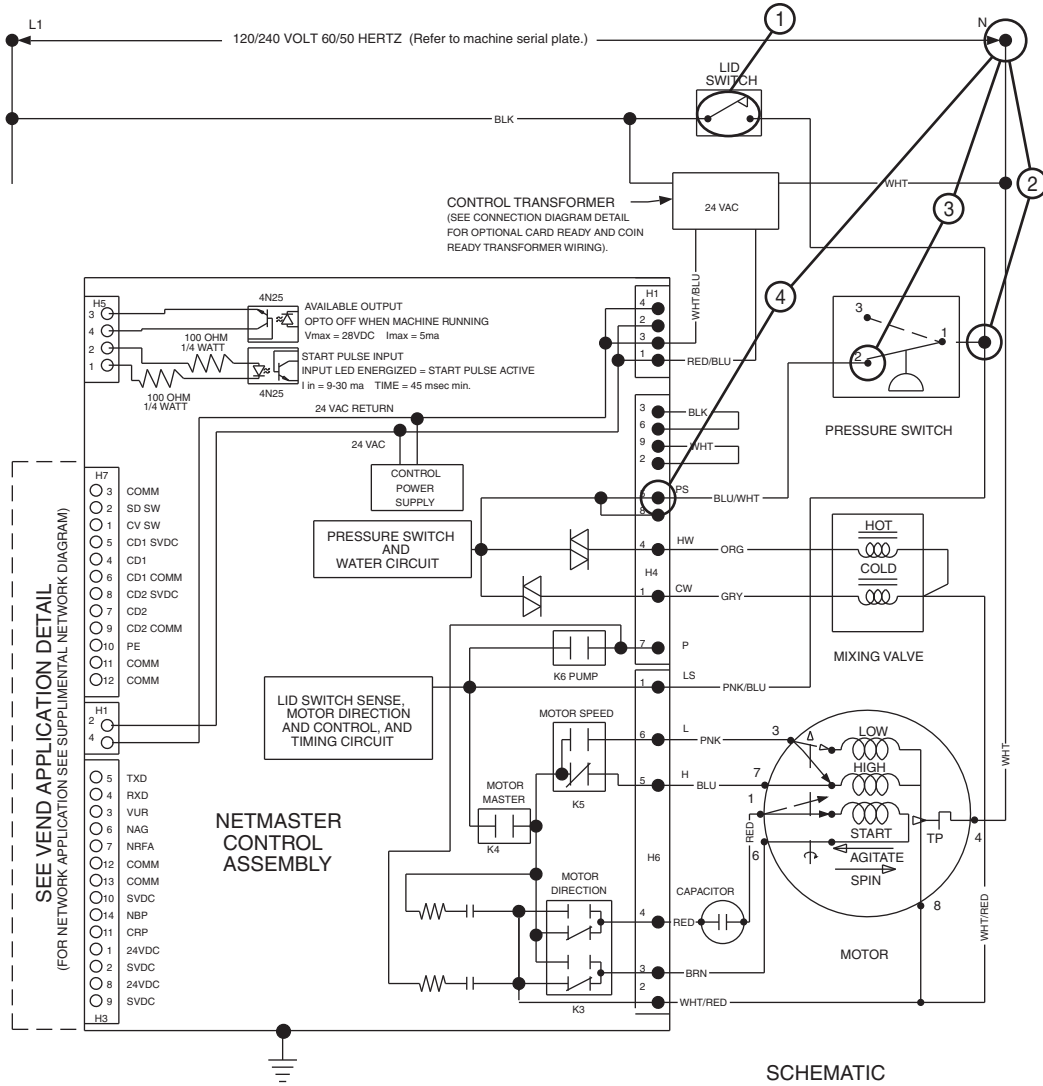

### VEND APPLICATIONS DETAILS

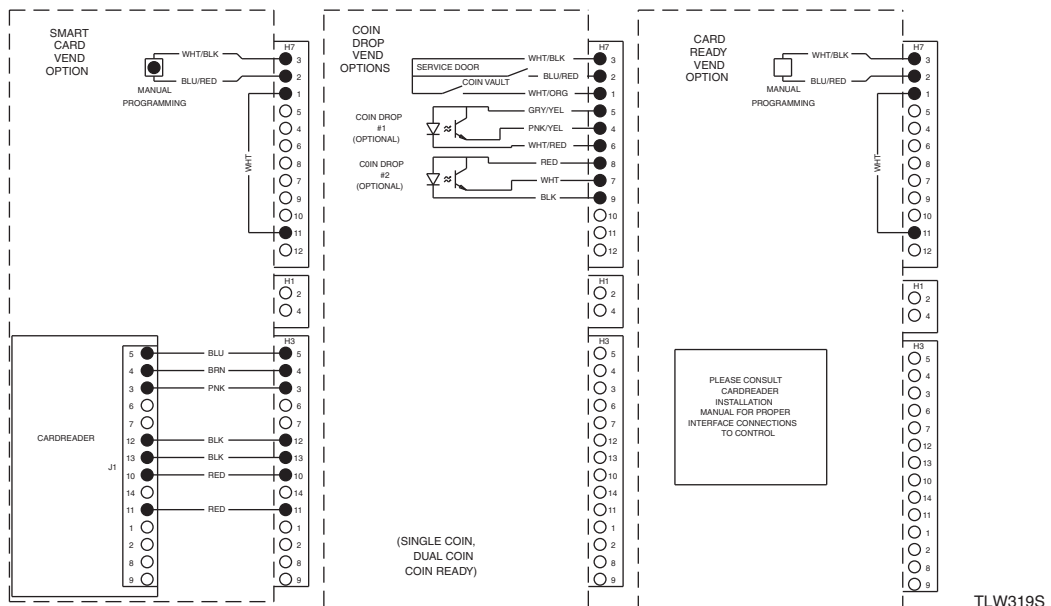


## 54. Washer Will Not Fill (Mixing Valve Diagnostic)

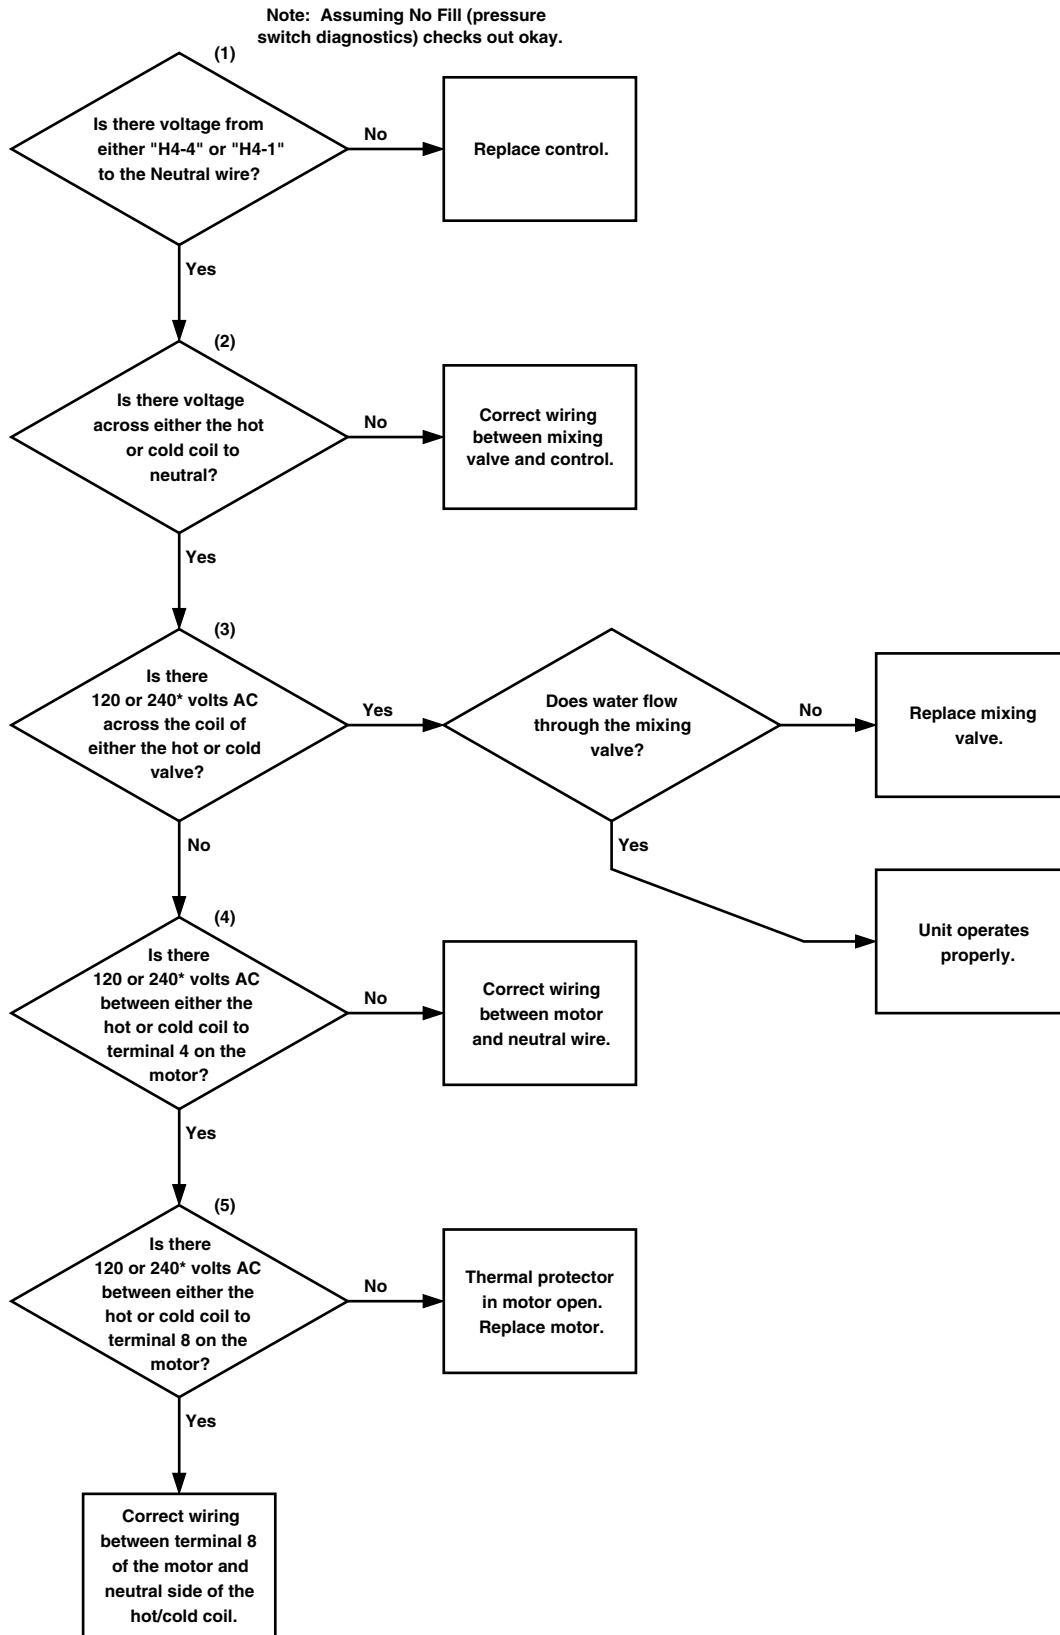


\*Refer to machine serial plate for correct voltage.




### Washer Will Not Fill (Mixing Valve Diagnostic)

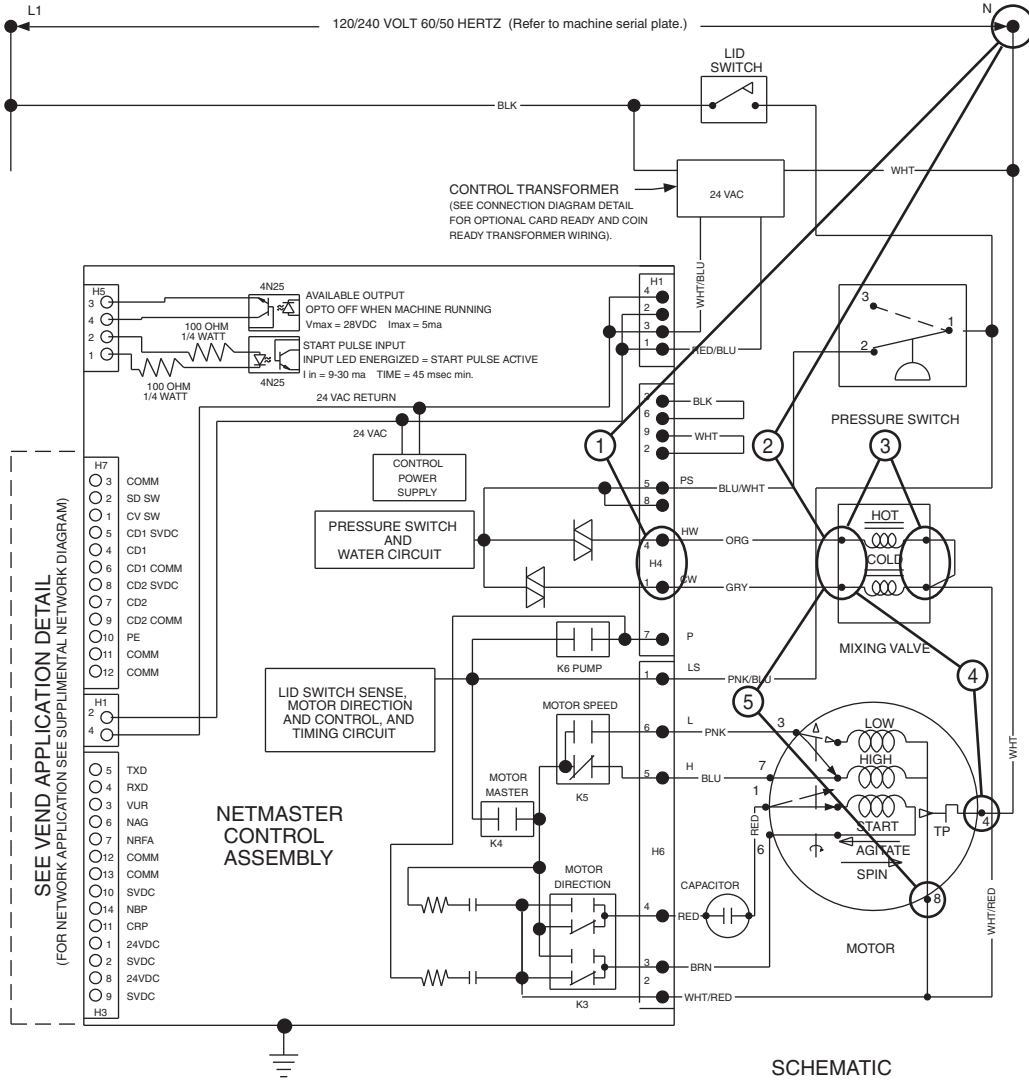

#### VEND APPLICATIONS DETAILS

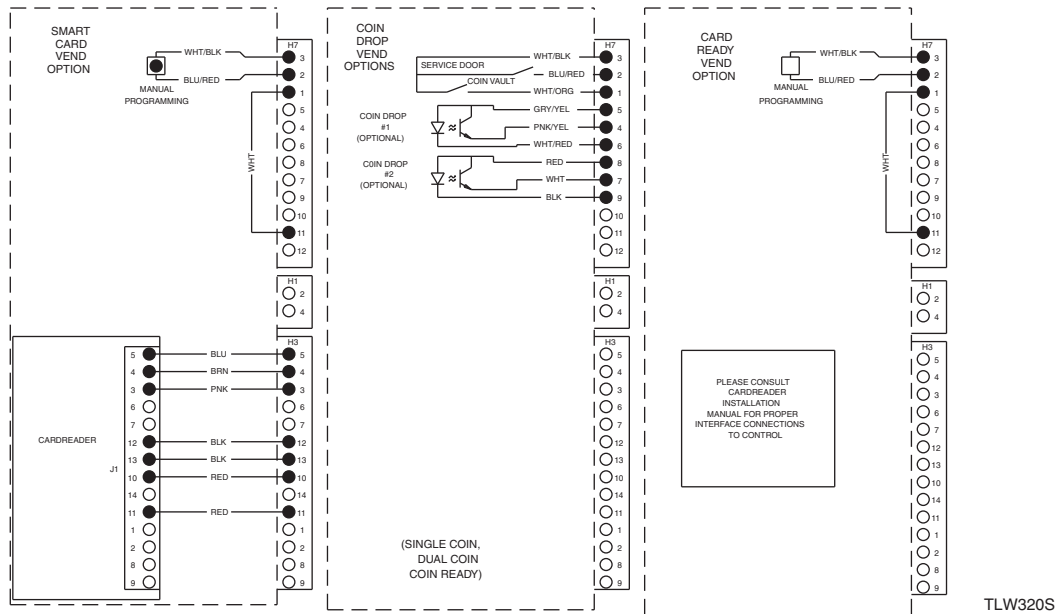


## 55. Washer Over Fills

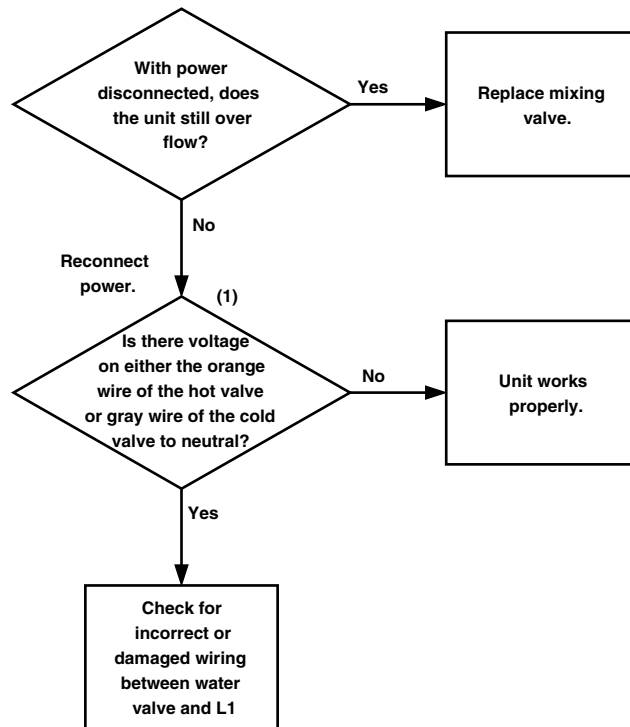


TLW287S

Washer Over Fills

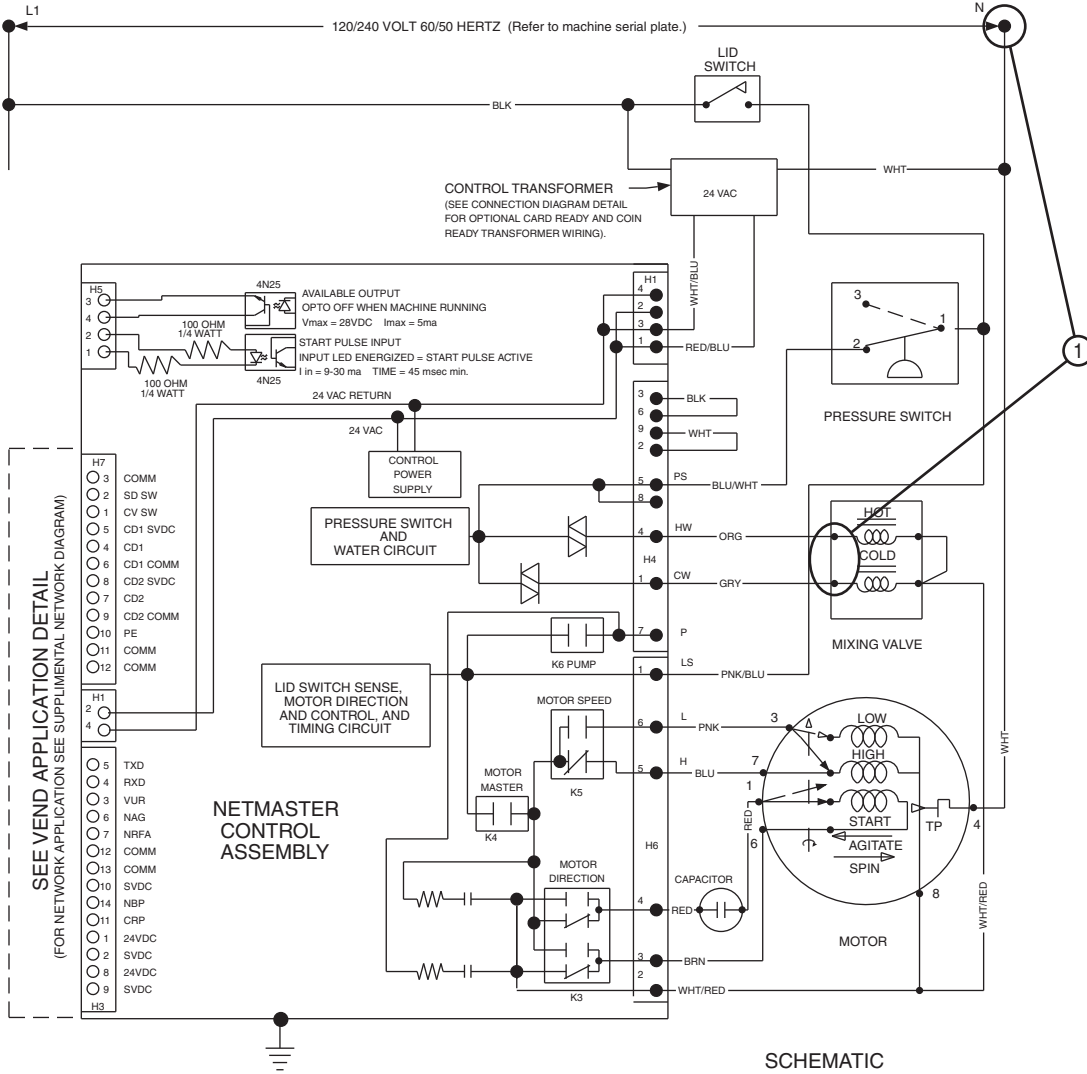


VEND APPLICATIONS DETAILS

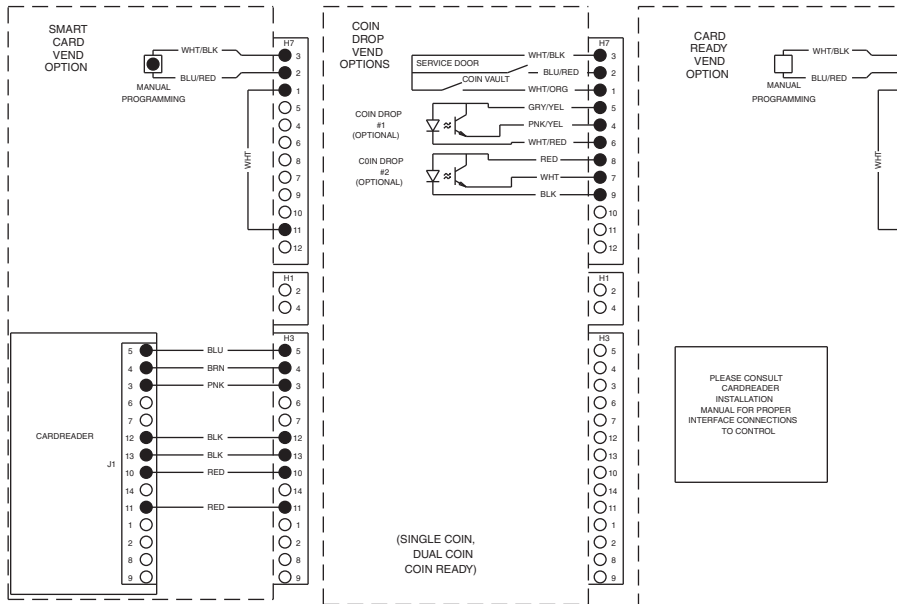


TLW321S


### 56. No Agitation – Low and High Speed

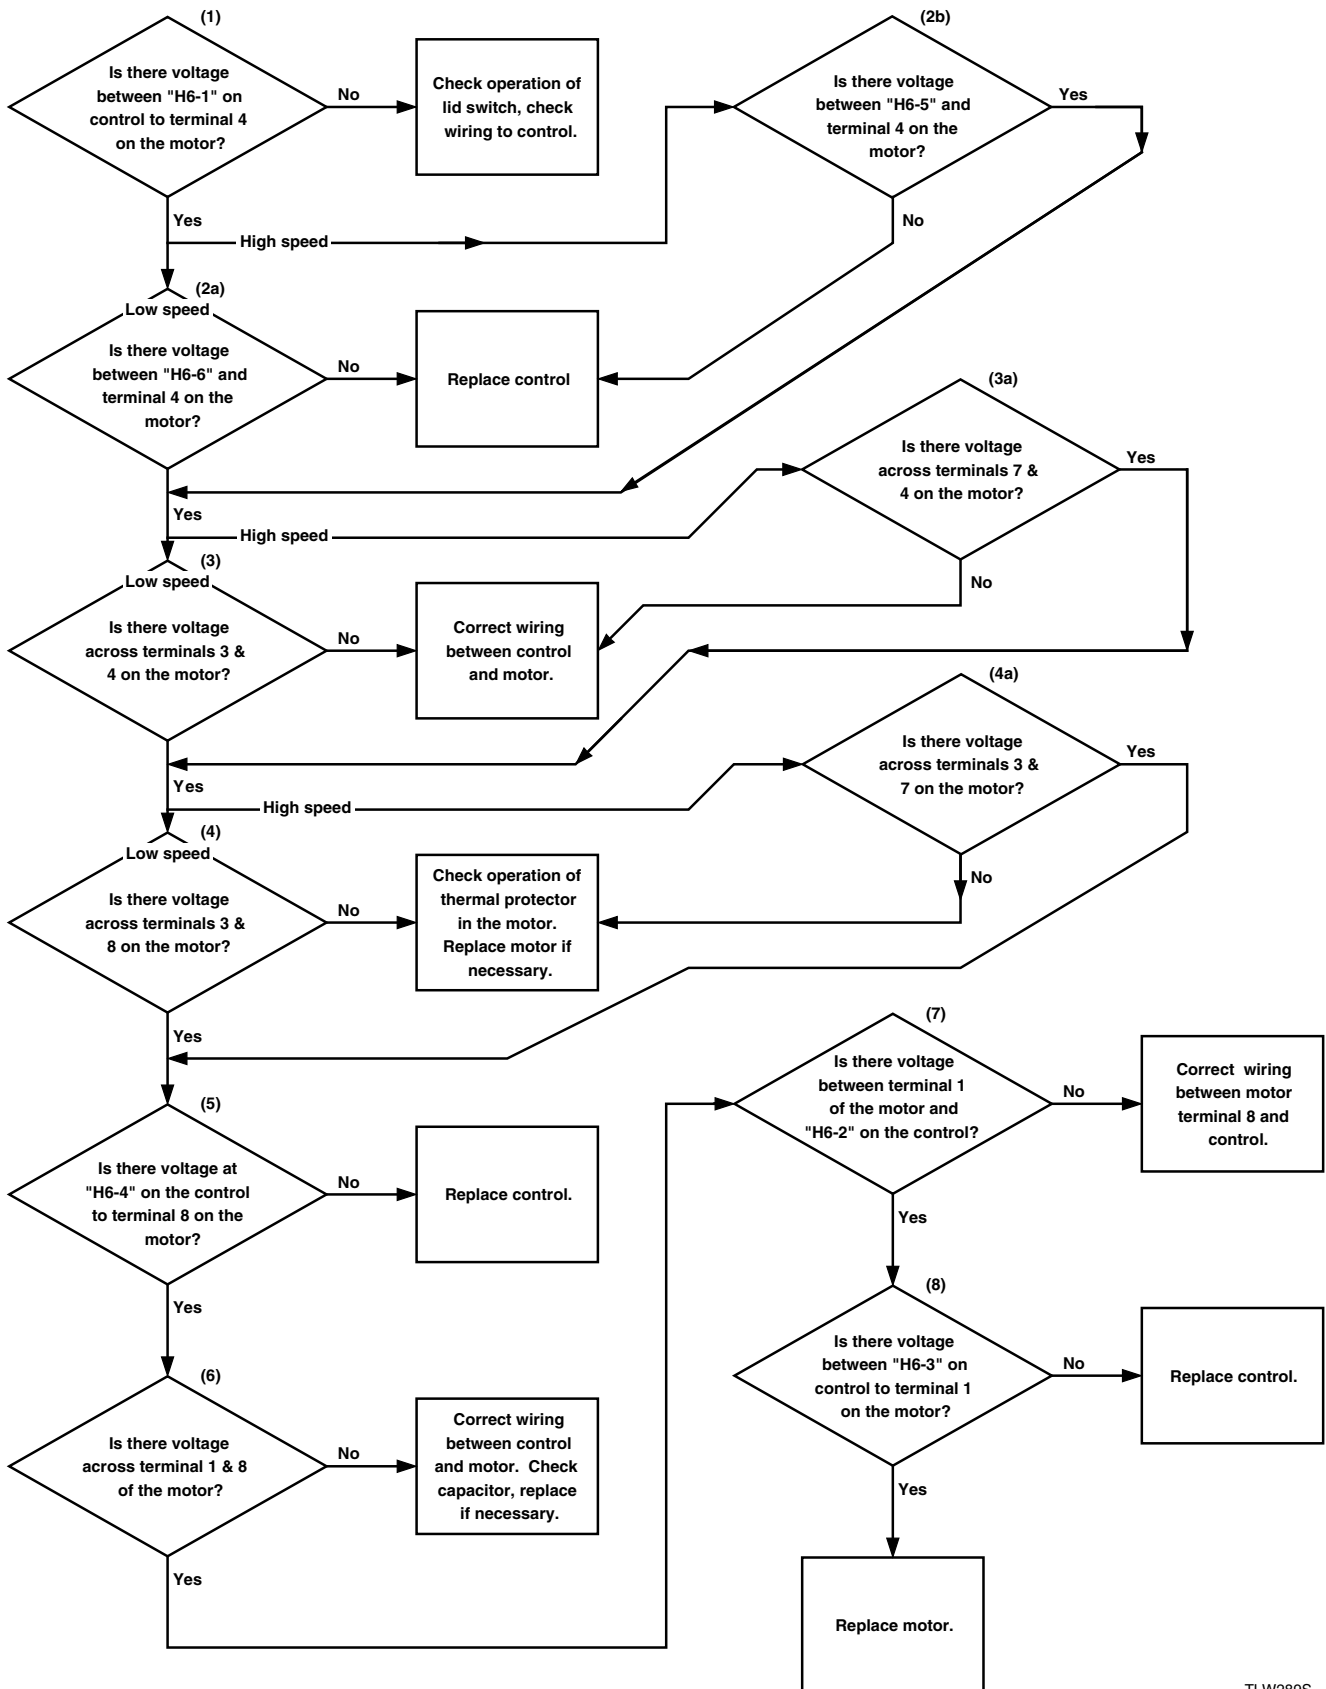

### No Agitation – Low and High Speed

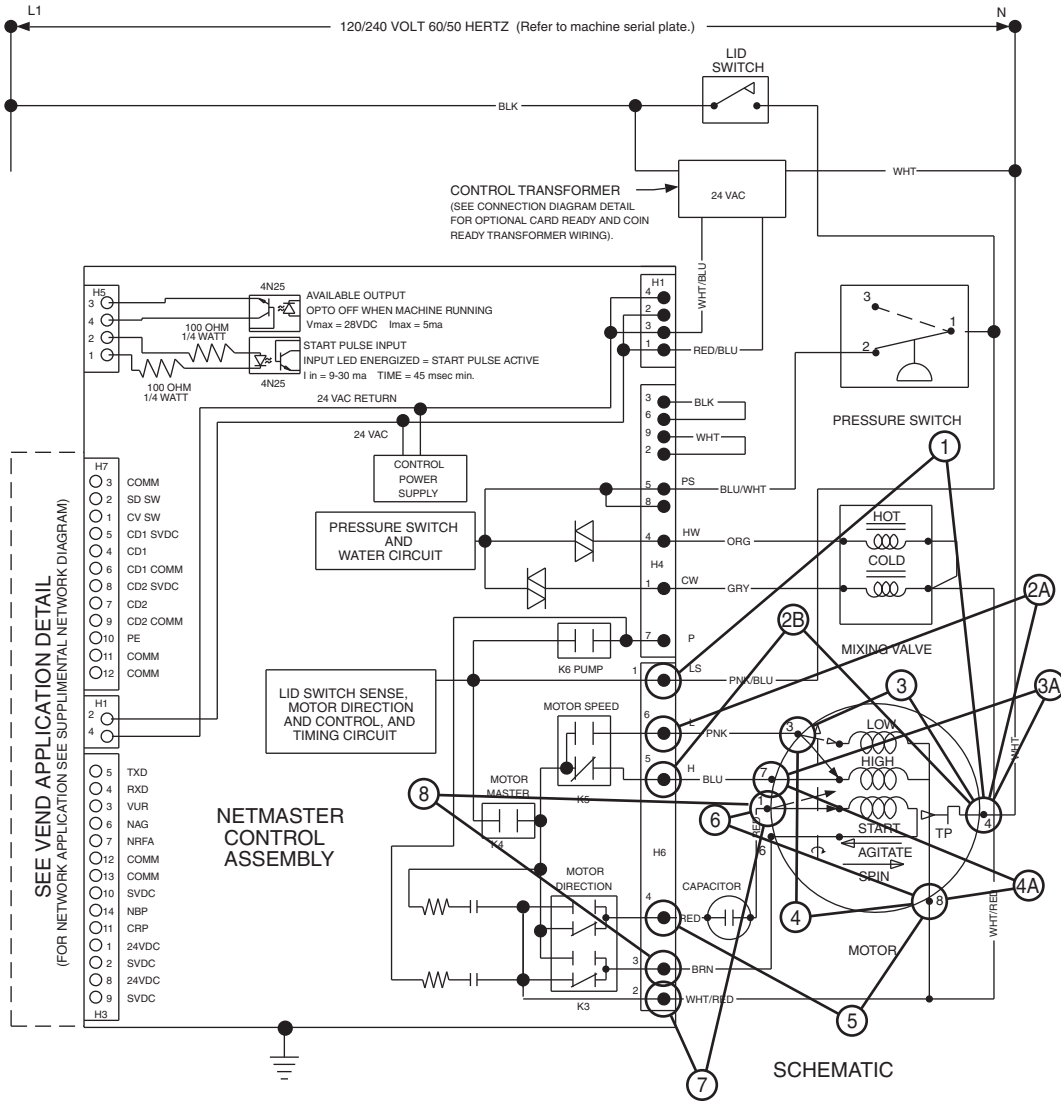


### VEND APPLICATIONS DETAILS

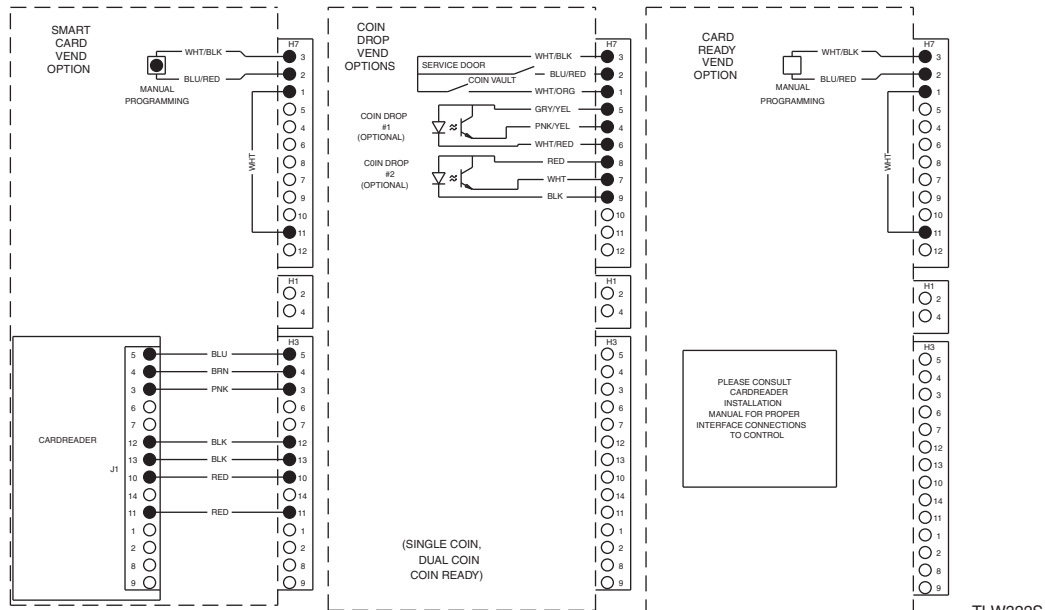


TLW322S

### 57. Washer Will Not Spin – High Speed

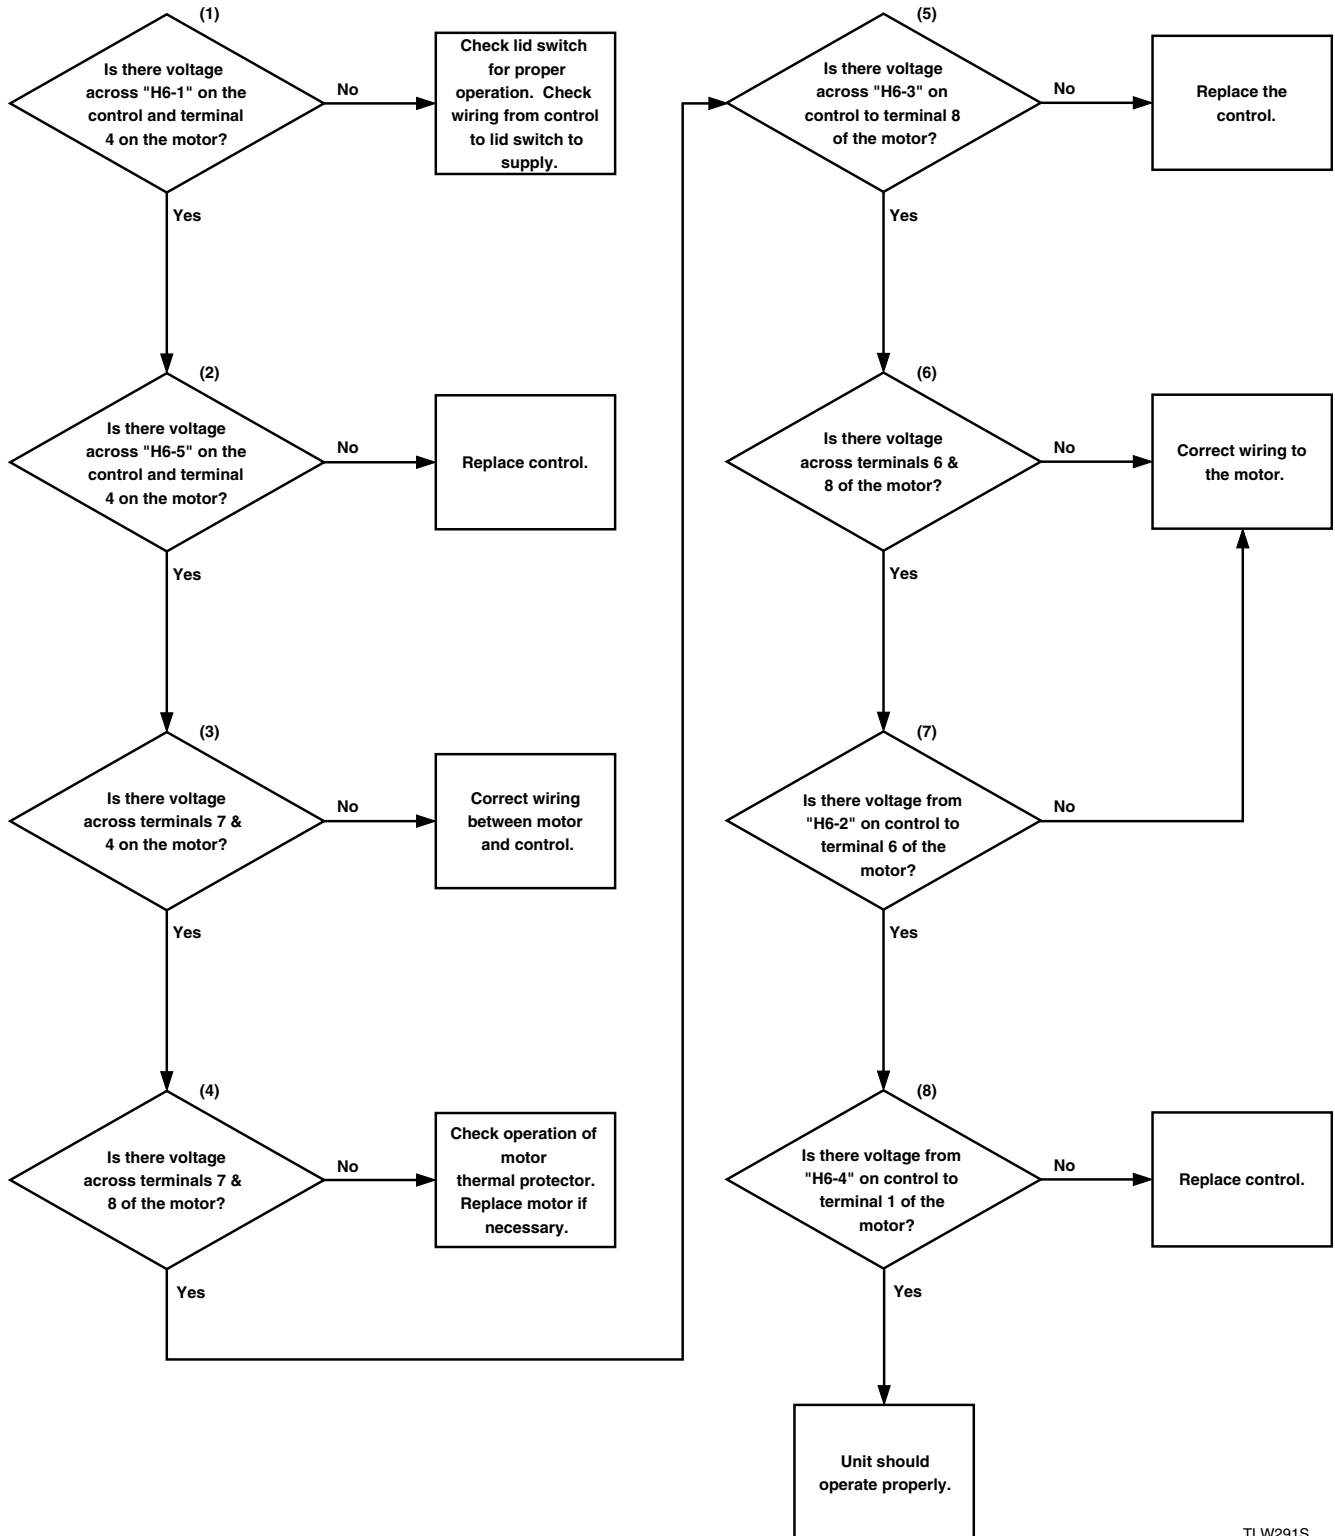


TLW291S

### Washer Will Not Spin – High Speed

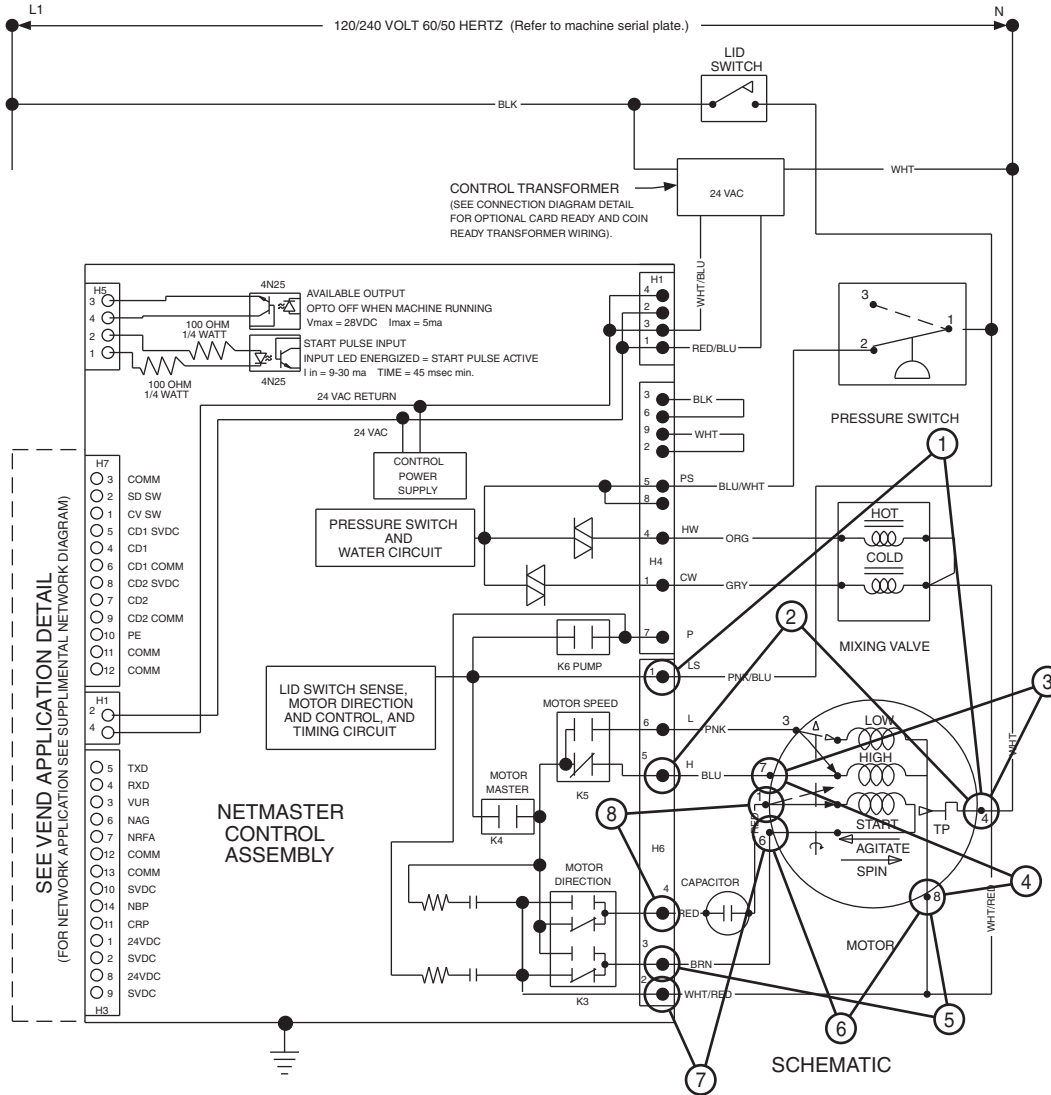


### VEND APPLICATIONS DETAILS

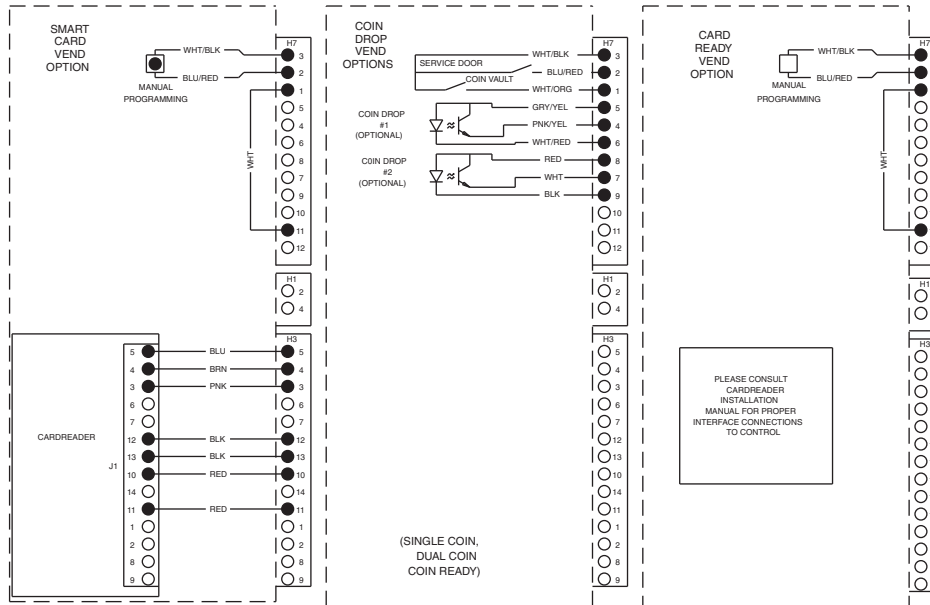

TLW323S


### 58. Washer Will Not Spin – Low Speed

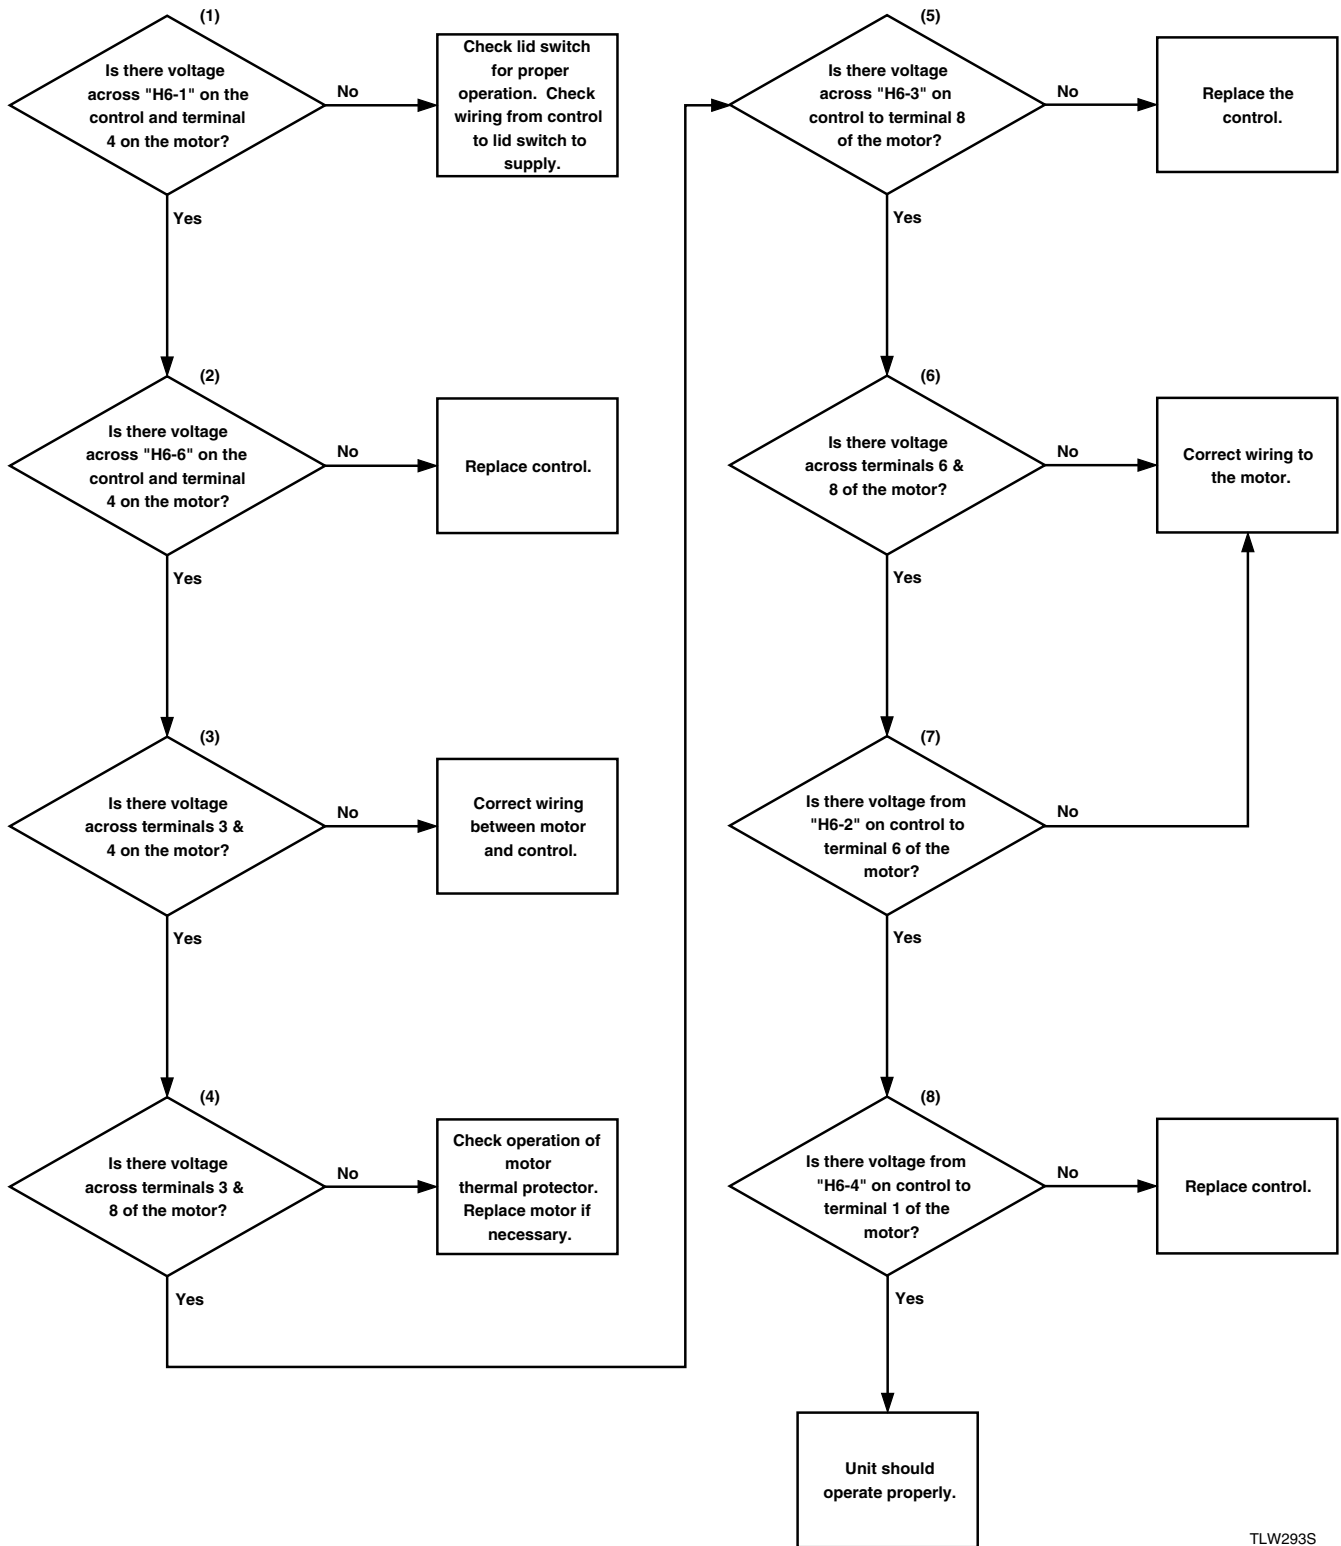


TLW293S



### Washer Will Not Spin – Low Speed

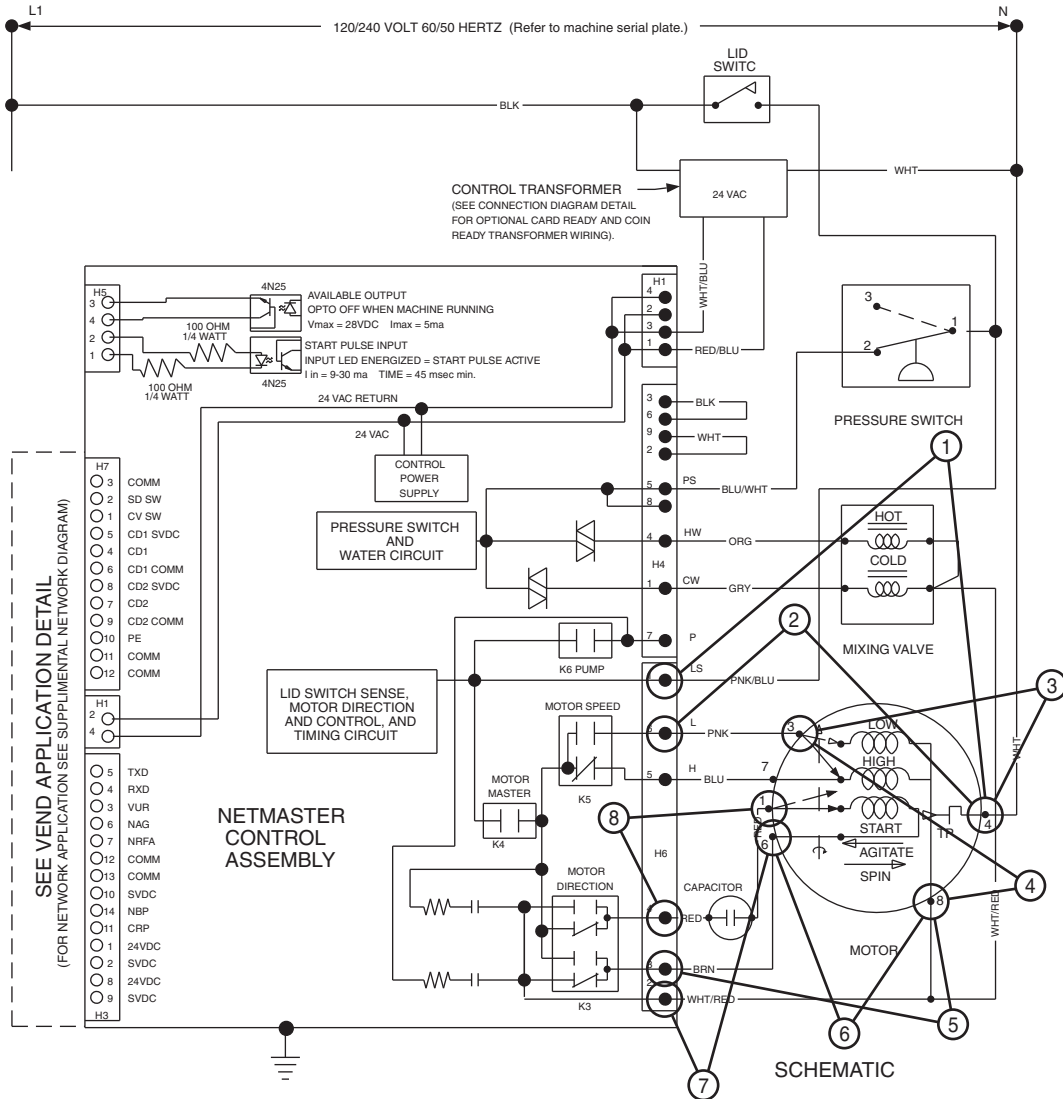

#### VEND APPLICATIONS DETAILS

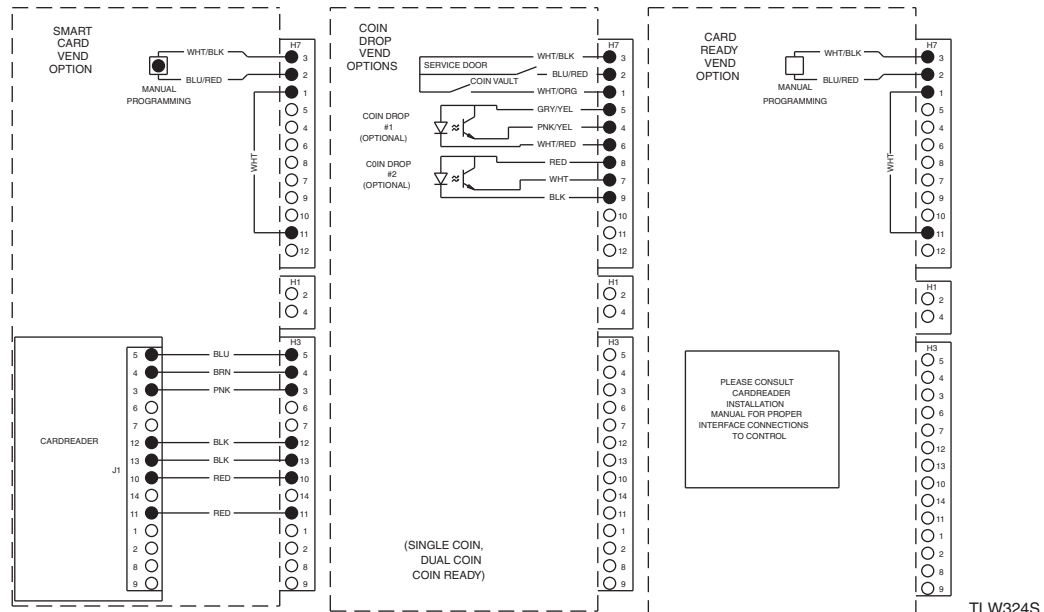

TLW324S



# Section 4

## Adjustments



### WARNING

To reduce the risk of electric shock, fire, explosion, serious injury or death:

- Disconnect electric power to the washer before servicing.
- Never start the washer with any guards/panels removed.
- Whenever ground wires are removed during servicing, these ground wires must be reconnected to ensure that the washer is properly grounded.

W003

### 59. Leveling Legs

Refer to *Figure 10*.

- Place rubber feet on all four leveling legs.
- Place washer in position on a clean, dry, and reasonably firm floor.
- Loosen locknuts and adjust two front leveling legs. Once adjusted, tilt washer forward on front legs and lower back down into position to set the rear self-leveling legs.
- Washer must not rock. After washer is at desired height, tighten locknuts securely against bottom of washer base. If these

locknuts are not tight, washer will not remain stationary during operation.

**NOTE: Install rear extension leg kit, No. 566P3, (optional equipment at extra cost) to raise height of washer.**

**NOTE: Improper installation, installation on carpet or flexing of a weak floor will cause excessive vibration.**

**IMPORTANT: Do not slide washer across floor once leveling legs have been extended, as legs and base could become damaged.**

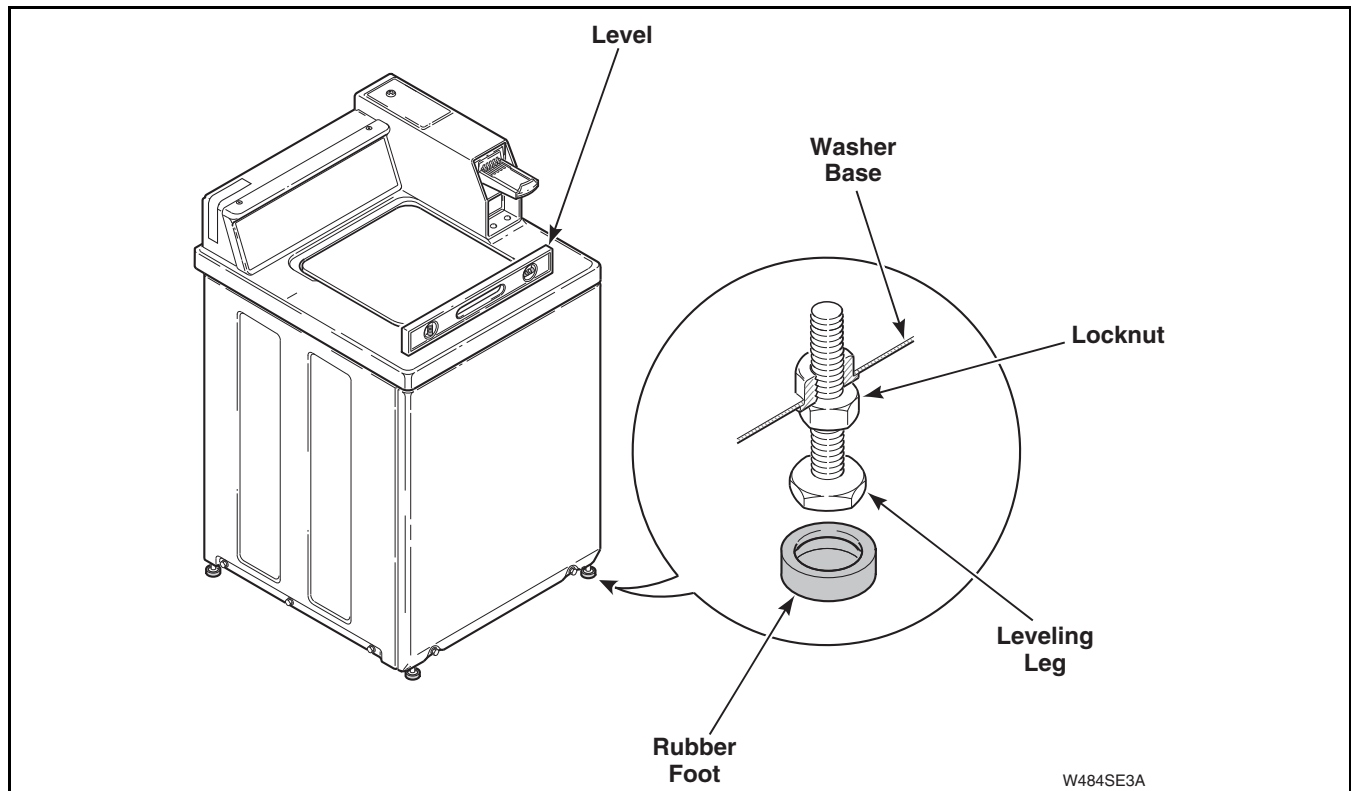


Figure 10

W484SE3A

	<h2 style="margin: 0;">WARNING</h2>
<p><b>To reduce the risk of electric shock, fire, explosion, serious injury or death:</b></p> <ul style="list-style-type: none"> <li>• <b>Disconnect electric power to the washer before servicing.</b></li> <li>• <b>Never start the washer with any guards/panels removed.</b></li> <li>• <b>Whenever ground wires are removed during servicing, these ground wires must be reconnected to ensure that the washer is properly grounded.</b></li> </ul>	
W003	

### 60. Pressure Switch

Refer to *Figure 11*.

Most washers are equipped with a variable water level pressure switch (located inside the control hood) which allows the owner to adjust the water fill level height in the washtub from 10, 11 or 13 inches.

**IMPORTANT: Water fill heights less than 10 inches are not recommended. When average to large size clothes loads are expected, damage to the clothes and/or the washer may result.**

When the washer leaves the factory, the pressure switch is set for approximately 11 inches of water.

To adjust the pressure switch, proceed as follows:

- f. Run the washer through a cycle and observe the water fill level.

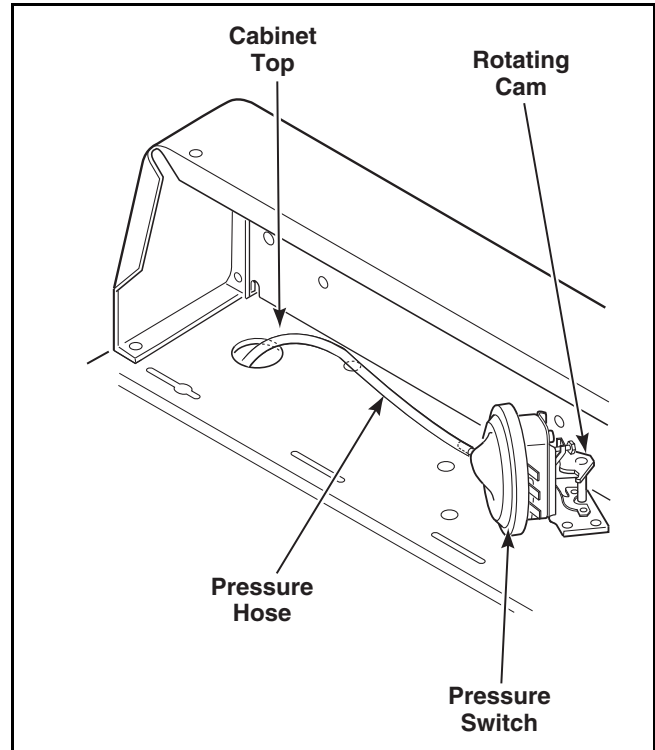



Figure 11

	<h2 style="margin: 0;">WARNING</h2>
<p><b>To reduce the risk of electric shock, disconnect the electrical power to the washer before attempting to service.</b></p>	
W094	

- a. Remove the two control panel attaching screws and lift the assembly up and out of the slots in the cabinet top.
- b. Lay the control panel face down (on protective padding) on top of the washer.
- c. Rotate the cam on the pressure switch **clockwise to lower** the water fill height, or **counterclockwise to raise** the height. Refer to *Figure 11*.

**IMPORTANT: The cam has three settings. The setting on the left raises the water level to 10 inches. Middle setting raises the water level to 11 inches. The setting on the right raises the water level to 13 inches.**

- d. Carefully reinstall the control panel.
- e. Reconnect the electrical power to the washer.

### 61. Belt (Agitate and Spin)

No belt adjustment is required.

### 62. Cleaning Non-Electronic Coin Drop

- a. Disconnect electrical power to machine and drop.
- b. Remove coin drop from machine.
- c. If lint is preventing coins from rolling through coin drop, blow compressed air through coin entry and along the side of the coin drop. Refer to *Figure 12*.
- d. Insert a coin through the coin drop. If coin does not roll through drop, continue with the following.



## WARNING

To reduce the risk of electric shock, fire, explosion, serious injury or death:

- Disconnect electric power to the washer before servicing.
- Never start the washer with any guards/panels removed.
- Whenever ground wires are removed during servicing, these ground wires must be reconnected to ensure that the washer is properly grounded.

W003

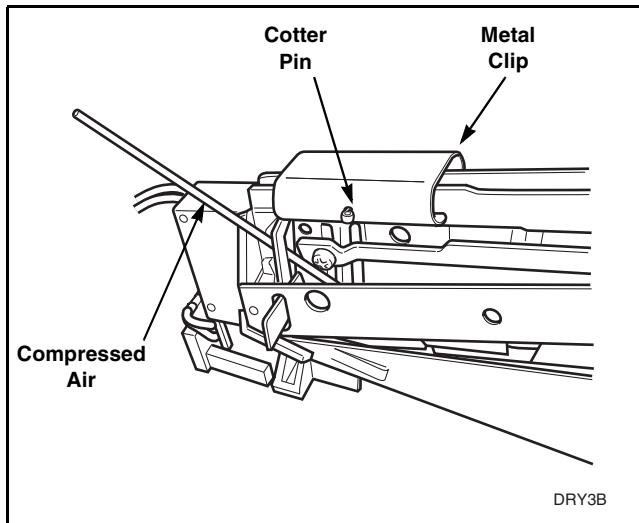


Figure 12

- Remove cotter pin from top of drop. Refer to *Figure 12*. Save pin for reinstallation when cleaning is complete.
- Move metal clip closer to sensor so that it comes off frame. Refer to *Figure 12*.
- Remove coin return from coin drop frame. Refer to *Figure 13*.

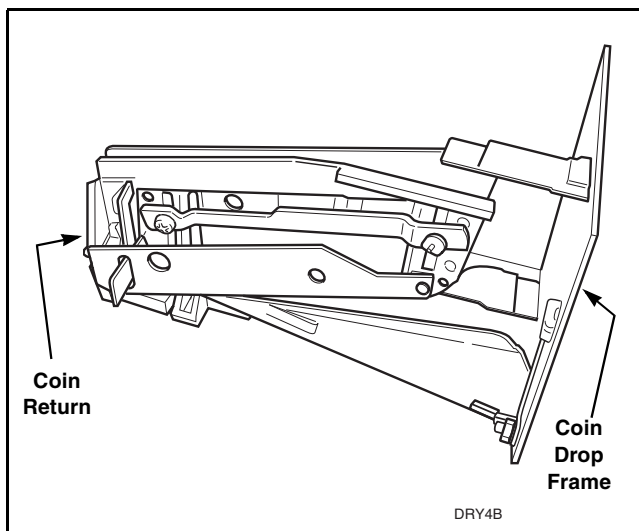


Figure 13

- Check coin path in coin drop for lint and residue. If lint or light residues are present, use a cotton swab to remove. If heavy residue is present, it may be necessary to first scrape off excessive residue and then use a cotton swab dipped in water or isopropyl alcohol (rubbing alcohol) to remove remainder of residue. Refer to *Figure 14*.

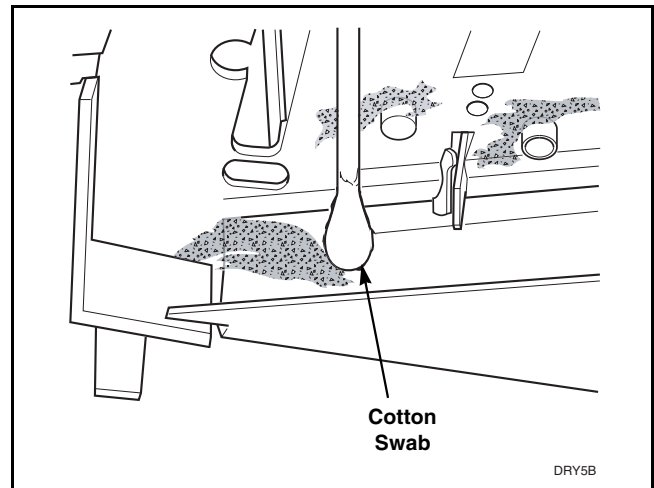


Figure 14

- Check coin return pendulum to verify it swings freely. If pendulum does not swing freely, spray pendulum pivot point with Teflon based lubricant and move pendulum back and forth two to three times. An additional application of Teflon based lubricant may be necessary to ensure that pendulum swings freely. Refer to *Figure 15*.
- Check coin drop sensor for dust or dirt on eyes. Wipe eyes with dry cotton swab. Refer to *Figure 16*.



## WARNING

To reduce the risk of electric shock, fire, explosion, serious injury or death:

- Disconnect electric power to the washer before servicing.
- Never start the washer with any guards/panels removed.
- Whenever ground wires are removed during servicing, these ground wires must be reconnected to ensure that the washer is properly grounded.

W003

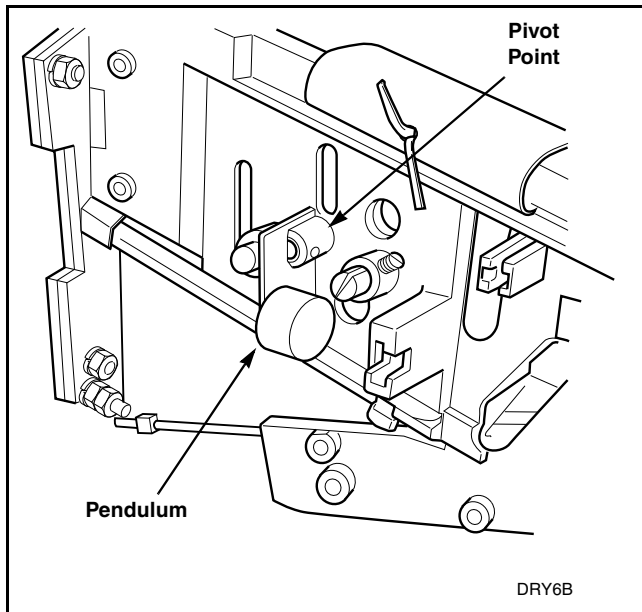


Figure 15

**IMPORTANT: DO NOT** use isopropyl alcohol to clean electronic sensor or eyes.

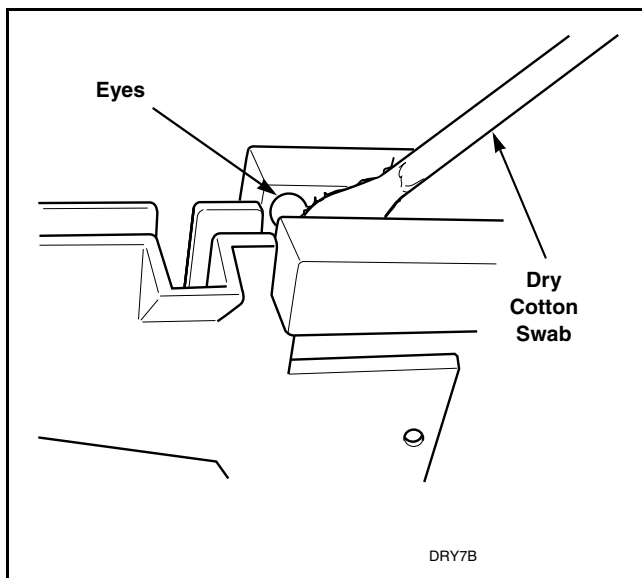


Figure 16

- k. Reinstall coin return on to coin drop frame.
- l. Reinstall metal clip and slide towards coin insert slot. All cotter pin holes must line up.
- m. Reinstall cotter pin.
- n. Place drop on level surface to verify that coins follow correct path in drop. It may be necessary to lift drop to allow coin to follow through sensor.
- o. Reinstall coin drop into machine.
- p. Reconnect electrical power to machine and drop.
- q. Add a coin to drop to verify that coin drop is operating properly and that electrical connection is working properly.

**NOTE: If coin drop does not operate properly after above steps have been completed, corrosion of metal or vandalized components within coin drop may be preventing the coin drop from functioning correctly. Replace coin drop.**

## 63. Cleaning Electronic Coin Drop

**NOTE: The electronic coin drop should be cleaned once a year. Clean the drop more often if it is exposed to high levels of residue or lint build-up.**

- a. Disconnect electrical power to machine and drop.
- b. Remove coin drop from machine.
- c. Move spring downward until cover catch is free. Refer to *Figure 17*.



## WARNING

To reduce the risk of electric shock, fire, explosion, serious injury or death:

- Disconnect electric power to the washer before servicing.
- Never start the washer with any guards/panels removed.
- Whenever ground wires are removed during servicing, these ground wires must be reconnected to ensure that the washer is properly grounded.

W003

**NOTE:** Do not lift or overbend the spring in any direction.

- e. Clean the coin path with a soft brush and wipe exposed surfaces with an alcohol moistened cloth. Refer to *Figure 19*.

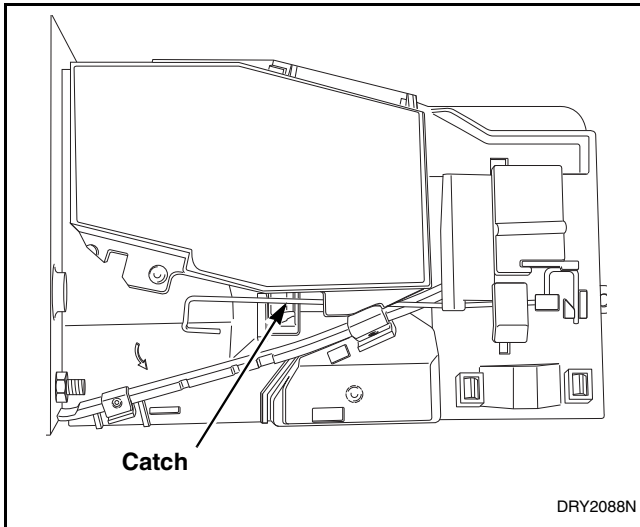


Figure 17

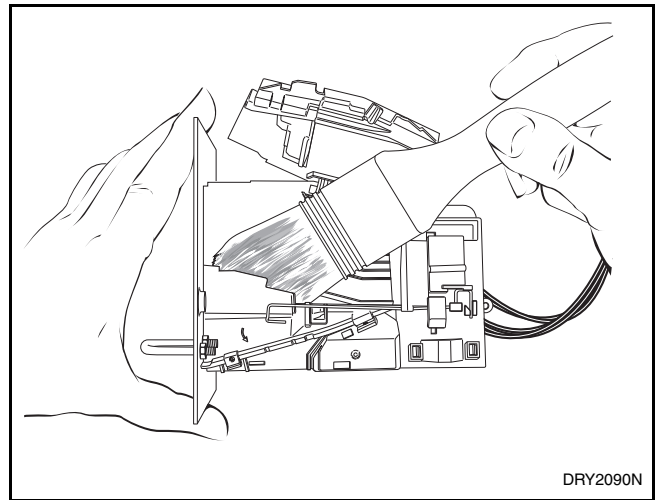


Figure 19

- d. Open cover for coin drop. Refer to *Figure 18*.

- f. Clean residue from coin rail with an alcohol moistened cloth. Refer to *Figure 20*.

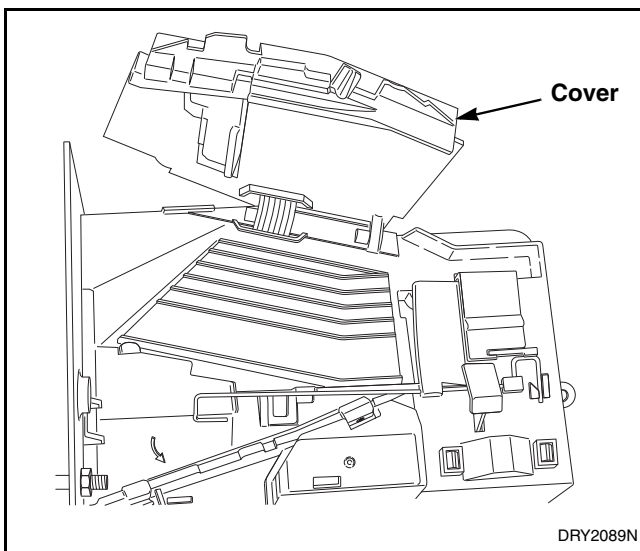


Figure 18

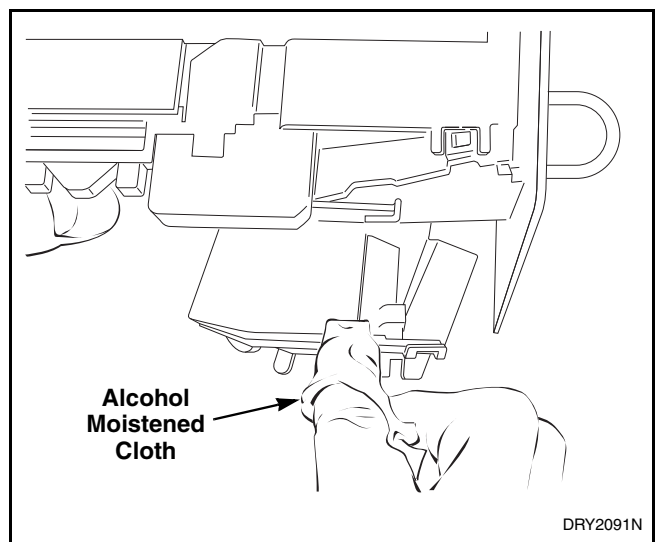


Figure 20



## WARNING

To reduce the risk of electric shock, fire, explosion, serious injury or death:

- Disconnect electric power to the washer before servicing.
- Never start the washer with any guards/panels removed.
- Whenever ground wires are removed during servicing, these ground wires must be reconnected to ensure that the washer is properly grounded.

W003

g. Clean light sensors with a soft brush or air spray duster. Refer to *Figure 21*.

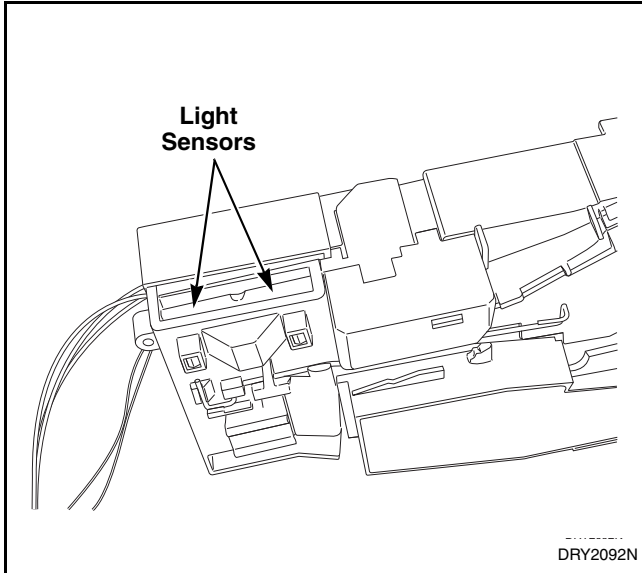



Figure 21

- h. Close cover for coin drop.
- i. Move spring back over cover catch.
- j. Reinstall coin drop into machine.
- k. Reconnect electrical power to machine and drop.
- l. Add a coin to drop to verify that coin drop is operating properly and that electrical connection is working properly.




# Section 5

## Motor Test Procedure

	<b>WARNING</b>
<p>To reduce the risk of electric shock, fire, explosion, serious injury or death:</p> <ul style="list-style-type: none"> <li>• Disconnect electric power to the washer before servicing.</li> <li>• Never start the washer with any guards/panels removed.</li> <li>• Whenever ground wires are removed during servicing, these ground wires must be reconnected to ensure that the washer is properly grounded.</li> </ul>	
<small>W003</small>	

**IMPORTANT:** Disconnect base wire harness plug from motor.

	<b>WARNING</b>
<p>Disconnect electric power to washer before performing the following steps:</p>	
<small>W188</small>	

Motor test procedures using an Ohm meter.

**NOTE:** Resistance readings slightly out of given ranges may be due to meter conditions. These readings **DO NOT** necessarily indicate motor failure.

	Meter Connections	Reading Should Be	If Not
6.	Ground to Each Other Terminal	Open	Terminal shorted to ground.
7.	White to Yellow	Closed	Open thermal overload.
8.	Red to Brown	2-8 Ohms	Start winding open or resistance too high or too low.
9.	Blue to White	1-2 Ohms	High speed winding (4 pole) open or resistance too high or too low.
10.	Violet to White (2-speed motor)	2.5 Ohms (approximate)	Low winding open; High speed winding open; or resistance too high or too low.
11.	“R” to Red	Closed	Open start (auxiliary) switch.
12.	“P” to Blue (2-speed motor)	Closed	Open start switch 4 pole winding

**NOTE:** Steps 8, 9 and 10 are with motor centrifugal mechanism in the run position.

13.	“R” to Red	Open	Start auxiliary switch.
14.	“P” to Blue (2-speed motor)	3 Ohms (approximate)	Refer to Blue to White and Violet to White.
15.	“P” to Violet (2-speed motor)	Closed	Open low (6 pole) winding run switch.



# Section 6

## Cycle Sequence Charts

FUNCTION		IN USE LIGHT	RINSE LIGHT	SPIN LIGHT	WATER TEMP.	CYCLE & MOTOR SPEED*	TIME (Min. & Sec.)
<b>WASH</b>	WASH, FILL OR AGITATE	X			H, W, C	N = FAST PP = FAST D = SLOW	10:33
	PAUSE	X					:05
<b>SPIN</b>	SPIN	X		X		N = FAST PP = FAST D = SLOW	1:56
	SPIN AND SPRAY	X		X	COLD	N = FAST PP = FAST D = SLOW	:31
	SPIN	X		X		N = FAST PP = FAST D = SLOW	:36
	SPIN AND SPRAY	X		X	COLD	N = FAST PP = FAST D = SLOW	:07
	SPIN	X		X		N = FAST PP = FAST D = SLOW	1:07
PAUSE		X					:04
<b>RINSE</b>	RINSE FILL (Timer Motor Runs)	X	X		COLD		:36
	PAUSE OR FILL	X	X		COLD		:02
	RINSE, AGITATE OR FILL	X	X		COLD	N = FAST PP = FAST D = SLOW	3:03
PAUSE		X					:06
<b>SPIN</b>	SPIN	X		X		N = FAST PP = FAST D = SLOW	10:32
TIMER MOTOR RUNS OUT							:42
<b>TOTAL</b>							<b>30:00</b>

\*On single speed models, all speeds are fast.

**KEY:**

<b>H = HOT</b>	<b>PP = PERMANENT PRESS CYCLE</b>
<b>W = WARM</b>	<b>D = DELICATE CYCLE</b>
<b>C = COLD</b>	<b>X = INDICATOR LIGHT GLOWS</b>
<b>N = NORMAL CYCLE</b>	

### Timer No. 28716P and 28719 Cycle Sequence

**Cycle Sequence Charts**

FUNCTION		IN USE LIGHT	RINSE LIGHT	SPIN LIGHT	WATER TEMP.	CYCLE & MOTOR SPEED*	EATON TIME (Min. & Sec.)	MALLORY TIME (Min. & Sec.)
WASH	COIN SLIDE STARTING STROKE 17.82° (Mallory) 16.84° (Eaton)	X			H, W, C	N = FAST PP = FAST D = SLOW	:57	1:00
	AGITATE OR VARIABLE FILL	X			H, W, C	N = FAST PP = FAST D = SLOW	7:00	7:00
PAUSE		X					:21	:21
SPIN	SPIN	X				N = FAST PP = FAST D = SLOW	1:25	1:25
	SPIN AND SPRAY	X			COLD	N = FAST PP = FAST D = SLOW	:45	:45
	SPIN	X				N = FAST PP = FAST D = SLOW	1:15	1:15
PAUSE		X					:04	:04
RINSE	FILL (Timer Motor Runs)	X			COLD		:13	:19
	PAUSE OR FILL	X	X		COLD		:13	:13
	AGITATE OR VARIABLE FILL	X	X		COLD	N = FAST PP = FAST D = SLOW	1:01	:54
	X						:09	:16
PAUSE		X					:14	:16
		X		X			:06	:03
SPIN	SPIN	X		X		N = FAST PP = FAST D = SLOW	6:00	6:00
PAUSE		X		X			:04	:08
		X					:06	:03
OFF							:22	:19
<b>TOTAL</b>							<b>20:17</b>	<b>20:21</b>

\*On single speed models, all speeds are fast.

**KEY:**

**H = HOT**                      **PP = PERMANENT PRESS CYCLE**  
**W = WARM**                   **D = DELICATE CYCLE**  
**C = COLD**                    **X = INDICATOR LIGHT GLOWS**  
**N = NORMAL CYCLE**

**Timer No. 31111P, 31504P and 35368P Cycle Sequence**

**Cycle Sequence Charts**

FUNCTION		IN USE LIGHT	RINSE LIGHT	SPIN LIGHT	WATER TEMP.	CYCLE & MOTOR SPEED*	EATON TIME (Min. & Sec.)
WASH	COIN SLIDE STARTING STROKE 16.84°	X			H, W, C	FAST OR SLOW	:57
	WASH, FILL OR AGITATE	X			H, W, C	FAST OR SLOW	7:00
PAUSE		X					:21
SPIN	SPIN	X				FAST OR SLOW	1:25
	SPIN AND SPRAY	X			COLD	FAST OR SLOW	:45
	SPIN	X				FAST OR SLOW	1:15
PAUSE		X					:04
RINSE	FILL (Timer Motor Runs)	X			COLD		:13
	PAUSE OR FILL	X	X		COLD		:13
	AGITATE OR VARIABLE FILL	X	X		COLD	FAST OR SLOW	1:01
		X					
PAUSE		X					:16
		X		X			:06
SPIN	SPIN	X		X		FAST	6:00
PAUSE		X		X			:04
		X					:10
OFF	PART OF INTENDED COIN SLIDE START STROKE 6.48°						:18
<b>TOTAL</b>							<b>20:17</b>

\*On single speed models, all speeds are fast.

**KEY:**

- H = HOT
- W = WARM
- C = COLD
- X = INDICATOR LIGHT GLOWS

**Timer No. 36986 Cycle Sequence**

**Cycle Sequence Charts**

FUNCTION		IN USE LIGHT	RINSE LIGHT	SPIN LIGHT	WATER TEMP.	CYCLE & MOTOR SPEED*	TIME (Min. & Sec.)
WASH	COIN SLIDE STARTING STROKE 16.84° (Eaton)	X			H, W, C	N = FAST PP = FAST D = SLOW	1:23
	AGITATE OR VARIABLE FILL	X			H, W, C	N = FAST PP = FAST D = SLOW	10:00
PAUSE		X					:34
SPIN	SPIN	X				N = FAST PP = FAST D = SLOW	1:32
	SPIN AND SPRAY	X			COLD	N = FAST PP = FAST D = SLOW	:30
	SPIN	X				N = FAST PP = FAST D = SLOW	1:29
PAUSE		X					:06
RINSE	FILL (Timer Motor Runs)	X			COLD		:06
	PAUSE OR FILL	X	X		COLD		:20
	AGITATE OR VARIABLE FILL		X		COLD	N = FAST PP = FAST D = SLOW	3:19
	X			:24			
PAUSE		X					:24
		X		X			:10
SPIN	SPIN	X		X		N = FAST PP = FAST D = SLOW	8:30
PAUSE		X		X			:06
		X					:13
OFF							:32
<b>TOTAL</b>							<b>29:39</b>

\*On single speed models, all speeds are fast.

**KEY:**

H = HOT                      PP = PERMANENT PRESS CYCLE  
W = WARM                    D = DELICATE CYCLE  
C = COLD                     X = INDICATOR LIGHT GLOWS  
N = NORMAL CYCLE

**Timer No. 34601P, 34603P, 34604 and 36987 Cycle Sequence**

**Cycle Sequence Charts**

FUNCTION		IN USE LIGHT	RINSE LIGHT	SPIN LIGHT	WATER TEMP.	CYCLE & MOTOR SPEED*	EATON TIME (Min. & Sec.)	MALLORY TIME (Min. & Sec.)
WASH	COIN SLIDE STARTING STROKE 17.82° (Mallory) 16.84° (Eaton)	X			H, W, C	N = FAST PP = FAST D = SLOW	1:23	1:31
	AGITATE OR VARIABLE FILL	X			H, W, C	N = FAST PP = FAST D = SLOW	10:00	10:00
PAUSE		X					:34	:34
SPIN	SPIN	X				N = FAST PP = FAST D = SLOW	1:32	1:32
	SPIN AND SPRAY	X			COLD	N = FAST PP = FAST D = SLOW	:30	:30
	SPIN	X				N = FAST PP = FAST D = SLOW	1:29	1:30
PAUSE		X					:06	:06
RINSE	FILL (Timer Motor Runs)	X			COLD		:06	:34
	PAUSE OR FILL	X	X		COLD		:20	:20
	AGITATE OR VARIABLE FILL	X	X		COLD	N = FAST PP = FAST D = SLOW	3:19	3:20
		X				D = SLOW	:24	:23
PAUSE		X					:24	:25
PAUSE		X		X			:10	:11
SPIN	SPIN	X		X		N = FAST PP = FAST D = SLOW	8:30	8:30
PAUSE		X		X			:06	:18
PAUSE		X					:13	:05
OFF							:32	:28
<b>TOTAL</b>							<b>29:39</b>	<b>30:17</b>

\*On single speed models, all speeds are fast.

**KEY:**

**H = HOT**                      **PP = PERMANENT PRESS CYCLE**  
**W = WARM**                   **D = DELICATE CYCLE**  
**C = COLD**                    **X = INDICATOR LIGHT GLOWS**  
**N = NORMAL CYCLE**

**Timer No. 34602P Cycle Sequence**

**Cycle Sequence Charts**

FUNCTION		IN USE LIGHT	RINSE LIGHT	SPIN LIGHT	WATER TEMP.	CYCLE & MOTOR SPEED*	TIME (Min. & Sec.)	
<b>WASH</b>		X			H, W, C	N = FAST PP = FAST D = SLOW	7:95	
PAUSE		X					:35	
<b>SPIN</b>	SPIN	X				N = FAST PP = FAST D = SLOW	:40	
PAUSE		X					:07	
<b>RINSE</b>	FILL (Timer Motor Runs)	X			COLD		:22	
	PAUSE OR FILL	X	X		COLD		:22	
	AGITATE OR VARIABLE FILL		X		COLD	N = FAST PP = FAST D = SLOW	1:79	
	X						:15	
PAUSE		X					:36	
<b>SPIN</b>	SPIN	X				N = FAST PP = FAST D = SLOW	:50	
	RINSE, FILL AND SPIN	X				N = FAST PP = FAST D = SLOW	:50	
	FINAL SPIN	X		X		N = FAST PP = FAST D = SLOW	7:24	
<b>PAUSE</b>		X		X			:06	
		X					:17	
<b>OFF</b>							:30	
<b>TOTAL</b>								<b>20:28</b>

\*On single speed models, all speeds are fast.

**KEY:**

- H = HOT**                      **PP = PERMANENT PRESS CYCLE**
- W = WARM**                 **D = DELICATE CYCLE**
- C = COLD**                  **X = INDICATOR LIGHT GLOWS**
- N = NORMAL CYCLE**

**Timer No. 200914 Cycle Sequence**



**Cycle Sequence Charts**

FUNCTION		IN USE LIGHT	RINSE LIGHT	SPIN LIGHT	WATER TEMP.	CYCLE & MOTOR SPEED*	TIME (Min. & Sec.)
<b>WASH</b>	COIN SLIDE STARTING STROKE 16.84°	X			H, W, C	N = FAST PP = FAST D = SLOW	1:23
	WASH FILL OR AGITATE	X			H, W, C	N = FAST PP = FAST D = SLOW	10:00
PAUSE		X					:26
<b>SPIN</b>	SPIN	X				N = FAST PP = FAST D = SLOW	:24
PAUSE		X					:04
<b>RINSE</b>	FILL (Timer Motor Runs)	X			COLD		:13
	PAUSE OR FILL	X	X		COLD		:13
	RINSE FILL OR AGITATE		X		COLD	N = FAST PP = FAST D = SLOW	2:44
	AGITATE OR VARIABLE FILL	X	X		COLD	N = FAST PP = FAST D = SLOW	:09
PAUSE		X					:26
<b>SPIN</b>	SPIN	X				N = FAST PP = FAST D = SLOW	:30
	SPRAY AND SPIN	X			COLD	N = FAST PP = FAST D = SLOW	:30
	FINAL SPIN	X		X		FAST	8:30
PAUSE		X					:14
<b>OFF</b>	PART OF INTENDED COIN SLIDE START STROKE 6.48°						:20
<b>TOTAL</b>							<b>24:43</b>

\*On single speed models, all speeds are fast.

**KEY:**

<b>H = HOT</b>	<b>PP = PERMANENT PRESS CYCLE</b>
<b>W = WARM</b>	<b>D = DELICATE CYCLE</b>
<b>C = COLD</b>	<b>X = INDICATOR LIGHT GLOWS</b>
<b>N = NORMAL CYCLE</b>	

**Timer No. 201066 Cycle Sequence**

**Cycle Sequence Charts**

		LIGHTS			TIME (Minutes and Seconds)					
FUNCTION		IN USE	RINSE	SPIN	WATER TEMP.	CYCLE & MOTOR SPEED *	LONG CYCLE (Energy Saving)	LONG CYCLE (Normal)	SHORT CYCLE (Energy Saving)	SHORT CYCLE (Normal)
WASH	FILL	X			H, W, C		2:00	2:00	2:00	2:00
	AGITATE	X				N = FAST PP = FAST D = SLOW	N = 10:00 PP = 9:00 D = 8:00	N = 10:00 PP = 9:00 D = 8:00	N = 5:00 PP = 4:00 D = 3:00	N = 5:00 PP = 4:00 D = 3:00
PAUSE		X					:10	:10	:10	:10
SPIN	SPIN	X				N = FAST PP & D = SLOW (Normal) FAST (Energy Saving)	:34	N = :30 PP = 1:00 D = 1:00	:34	N = :30 PP = 1:00 D = 1:00
	SPIN AND SPRAY	X			C	N = FAST PP = SLOW D = SLOW	:00	:30	:00	:30
	SPIN	X				N = FAST PP = SLOW D = SLOW	:00	N = 2:30 PP = 2:00 D = 2:00	:00	N = 2:30 PP = 2:00 D = 2:00
RINSE	FILL	X	X		C		2:00	2:00	2:00	2:00
	AGITATE	X	X			N = FAST PP = FAST D = SLOW	5:00	5:00	2:00	2:00
PAUSE		X					:10	:10	:10	:10
SPIN	SPIN	X		X		FAST	:30	1:30	:30	1:30
	SPIN AND SPRAY	X		X	C	FAST	:30	:00	:30	:00
	FINAL SPIN	X		X		FAST	7:00	7:00	5:00	5:00
TOTAL							N = 27:54 PP = 26:54 D = 25:54	N = 31:20 PP = 30:20 D = 29:20	N = 17:54 PP = 16:54 D = 15:54	N = 21:20 PP = 20:20 D = 19:20

\*On single speed models, all speeds are fast.

**KEY:**

- H = HOT
- W = WARM
- C = COLD
- N = NORMAL CYCLE
- PP = PERMANENT PRESS CYCLE
- D = DELICATE CYCLE
- X = INDICATOR LIGHT GLOWS

**Cycle Sequence For Coin Slide Operated and Non-Metered Models With the Number “8” or “9” in the 4th Character of the Model Number**